# Frymaster® We Fit the Way You Fry™ FilterQuick™ FQ4000 easyTouch® Controller (Casey's)

## **Operation Manual**

This manual is updated as new information and models are released. Visit our website for the latest manual.



**⚠** CAUTION READ THE INSTRUCTIONS BEFORE USING.



Part Number: FRY\_IOM\_8197474CA 09/2024

**Original Instructions** 



#### NOTICE

IF, DURING THE WARRANTY PERIOD, THE CUSTOMER USES A PART FOR THIS FRYMASTER DEAN EQUIPMENT OTHER THAN AN <u>UNMODIFIED</u> NEW OR RECYCLED PART PURCHASED DIRECTLY FROM FRYMASTER DEAN, OR ANY OF ITS AUTHORIZED SERVICE CENTERS, AND/OR THE PART BEING USED IS MODIFIED FROM ITS ORIGINAL CONFIGURATION, THIS WARRANTY WILL BE VOID. FURTHER, FRYMASTER DEAN AND ITS AFFILIATES WILL NOT BE LIABLE FOR ANY CLAIMS, DAMAGES OR EXPENSES INCURRED BY THE CUSTOMER WHICH ARISE DIRECTLY OR INDIRECTLY, IN WHOLE OR IN PART, DUE TO THE INSTALLATION OF ANY MODIFIED PART AND/OR PART RECEIVED FROM AN UNAUTHORIZED SERVICE CENTER.

#### NOTICE

This appliance is intended for professional use only and is to be operated by qualified personnel only. A Frymaster Factory Authorized Servicer (FAS) or other qualified professional should perform installation, maintenance, and repairs. Installation, maintenance, or repairs by unqualified personnel may void the manufacturer's warranty.

#### **NOTICE**

This equipment must be installed in accordance with the appropriate national and local codes of the country and/or region in which the appliance is installed.

#### NOTICE TO OWNERS OF UNITS EQUIPPED WITH CONTROLLERS

U.S.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation. While this device is a verified Class A device, it has been shown to meet the Class B limits.

#### **CANADA**

This digital apparatus does not exceed the Class A or B limits for radio noise emissions as set out by the ICES-003 standard of the Canadian Department of Communications.

Cet appareil numerique n'emet pas de bruits radioelectriques depassany les limites de classe A et B prescrites dans la norme NMB-003 edictee par le Ministre des Communcations du Canada.



Prior to movement, testing, maintenance and any repair on your Frymaster fryer, disconnect ALL electrical power from the fryer.

#### **A** DANGER

Keep all items out of drains. Closing actuators may cause damage or injury.

#### **⚠** DANGER

Remove all drops of water from the frypot before filling with oil. Failure to do so will cause spattering of hot liquid when the oil is heated to cooking temperature.



Do not add HOT or USED oil to a JIB.



NEVER drain boil out or cleaning solution into a shortening disposal unit (SDU), a built-in filtration unit, a portable filter unit, or an OQS (Oil Quality Sensor). These units are not intended for this purpose and will be damaged by the solution and void the warranty.



When draining oil into a disposal unit, do not fill above the maximum fill line located on the container.

#### DANGER

Allow oil to cool to 100°F (38°C) before draining into an appropriate METAL container for disposal.



#### DANGER

When draining oil into an appropriate SDU or METAL container, ensure the container will hold at least FOUR gallons (15 liters) or more for FQE30-T or FQG30-T fryers. Otherwise oil could overflow and can cause injury.



#### 🚹 DANGER

When draining boil out solution oil into an appropriate METAL container, ensure the container will hold at least FOUR gallons (15 liters) or more for FQE30U-T or FQG30U-T fryers. Otherwise boil out solution could overflow and can cause injury.



#### 🔼 DANGER

Open the filter pan slowly to avoid splashing of hot oil that may cause severe burns, slipping and falling.



#### 1 DANGER

Ensure that the frypot and filter pan are completely dry and free of water before filling with oil. Failure to do so will cause splattering of hot liquid when the oil is heated to cooking temperature.



#### **MARNING**

The on-site supervisor is responsible for ensuring that operators are made aware of the inherent hazards of operating a hot oil filtering system, particularly the aspects of oil filtration, draining and cleaning procedures.



#### DANGER

Do not drain more than one frypot at a time into the built-in filtration unit to avoid overflow and spillage of hot oil that may cause severe burns, slipping and falling.



#### **MARNING**

Never drain water into the filter pan. Water will damage the filter pump



#### WARNING

Ensure a filter paper/pad is in place prior to filtering, draining or disposing of oil. Failure to insert a filter paper/pad may result in clogged lines and/or pumps.



#### 🔔 DANGER

DO NOT drain more than one full frypot or two split frypots into the SDU at one time to avoid overflow and spillage of hot oil that may cause severe burns, slipping and falling.



#### **WARNING**

Never operate the filter system without oil in the system.



Never use the filter pan to transport old oil to the disposal area.

#### **MARNING**

Never leave the fryer unattended during the boil out process. If the solution overflows, press the ON/OFF switch to the OFF position immediately.

#### **MARNING**

This appliance is not intended for use by children under the age of 16 or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision concerning use of the appliance by a person responsible for their safety. Do not allow children to play with this appliance.

#### **MARNING**

Operation, installation, and servicing of this product may expose you to chemicals/products including [Bisphenol A (BPA), glass wool or ceramic fibers, and crystalline silica], which is [are] known to the State of California to cause cancer, birth defects or other reproductive harm. For more information go to <a href="https://www.P65Warnings.ca.gov">www.P65Warnings.ca.gov</a>.

#### **⚠** DANGER

The crumb tray in fryers equipped with a filter system MUST be emptied into a fireproof container at the end of frying operations each day. Some food particles can spontaneously combust if left soaking in certain shortening material.

#### **⚠** DANGER

When using a sediment basket, it MUST be removed and emptied prior and during each filtration. Some food particles can spontaneously combust if left soaking in certain shortening material.



#### FilterQuick<sup>™</sup> FQ4000 Controller Manual TABLE OF CONTENTS

CHAPTE	R 1: FilterQuick <sup>™</sup> FQ4000 Controller Instructions	
1.1	FQ4000 General Information	1-1
1.2	FQ4000 Button Description and Functions	1-1
	1.2.1 Navigation Buttons	1-1
	1.2.1.1 Main Menu Button Bar	1-1
	1.2.1.2 Home Button	1-1
	1.2.1.3 Crew Mode Button	1-2
	1.2.1.4 Menus Button	1-2
	1.2.1.5 Recipes Button	1-2
	1.2.1.6 Settings Button	1-2
	1.2.1.7 Service Button	1-2
	1.2.1.8 Power Button	1-3
	1.2.1.9 Language Button	1-3
	1.2.1.10 Filter Menu Button	1-3
	1.2.1.11 Temperature Button	1-3
	1.2.1.12 Menu Button	1-3
	1.2.1.13 Energy Saver Button	1-3
	1.2.1.14 Information Statistics Button	1-3
	1.2.1.15 Manual Top Off Button	1-3
	1.2.1.16 Escape or Back Button	1-3
	1.2.1.17 TPM (Total Polar Materials) OQS (Oil Quality Sensor) Button	1-3
1.3	FQ4000 Menu Summary Tree	1-4
1.4	FQ4000 Information Summary Tree	
1.5	Basic Operation	1-6
1.6	Cooking	1-7
1.7	Fryer (Service) Setup Programming	1-8
1.8	Fryer (Manager) Settings Programming	
1.9	Adding or Editing Existing Products	1-26
1.10	Adding or Editing Menus	
1.11	Changing Menus	
1.12	Service Tasks	
	1.12.1 High Limit Test	
	1.12.2 Manager Functions	
	1.12.2.1 E-Log (Error Log)	
	1.12.2.2 Passcode Setup	
	1.12.2.3 USB – Menu Operation/Settings Operation	
1.13	Information Statistics	
	1.13.1 Report Card Statistics	
	1.13.2 Oil Statistics	
	1.13.3 Life Statistics	
	1.13.4 Usage Statistics	
	1.13.5 Recovery Time	
	1.13.6 Filter Statistics	
	1 13 7 Software Version	1_40

	1.13.8 Usage Reset Statistics	1-41
	1.13.9 Fresh Oil Statistics	1-42
	1.13.10 Fresh Oil Reset Usage Statistics	
	1.13.11 Last Load Statistics	
	1.13.12 TPM (Total Polar Material) Statistics	
	1.13.13 Filter Reset Statistics	
	ER 2: FilterQuick <sup>™</sup> FQ4000 Filtration Menu Functions Instructions	2.4
2.1	Filtration Menu	
	2.1.1 Quick Filter – Filter Prompt	
	2.1.2 Quick Filter on Demand	
	2.1.3 Clean and Filter (or End of Day Filter)	
	2.1.4 Dispose for Non-Bulk Oil Systems	
	2.1.5 Dispose for Bulk, Wand Front and Wand External Dispose Waste Oil Systems	
	2.1.6 Night Filter – Prompted	
	2.1.7 Night Filter on Demand	
	2.1.8 OQS (Oil Quality Sensor) Filter	
	2.1.9 Fill Vat from (Filter) Pan	
	2.1.10 Fill Vat from Bulk	
	2.1.11 Pan to Waste	
	2.1.12 Drain to Pan	2-23
	2.1.13 Boil-Out [Hot] or Cold Soak (Clean) for Non-Bulk Oil Systems	2-25
	2.1.14 Boil-Out [Hot] or Cold Soak (Clean) for Bulk, Wand Front, Wand External System	ıs 2-29
	2.1.15 Polish	2-35
СНДРТ	ER 3: Operator Troubleshooting	
3.1	Introduction	3_1
3.2	Troubleshooting	
٥.۷	3.2.1 Error Message and Display Problems	
	3.2.2 Troubleshooting Filtration Problems	
	3.2.3 Filter Busy	
	3.2.4 OQS (Oil Quality Sensor) Troubleshooting	
	3.2.5 Error Log Codes	3-5

### **CHAPTER 1: FILTERQUICK™ FQ4000 CASEY'S CONTROLLER INSTRUCTIONS**


#### 1.1 **FQ4000 General Information**

Welcome to the FQ4000, an easy-to-use touch screen controller with the utility of 40-product menu capability. One button push starts a cook cycle for a selected product. The controller can move seamlessly from one product to another.

The FQ4000 will operate with electric and gas full vat fryers.

#### **FQ4000 Button Description and Functions** 1.2

#### 1.2.1 **Navigation Buttons**

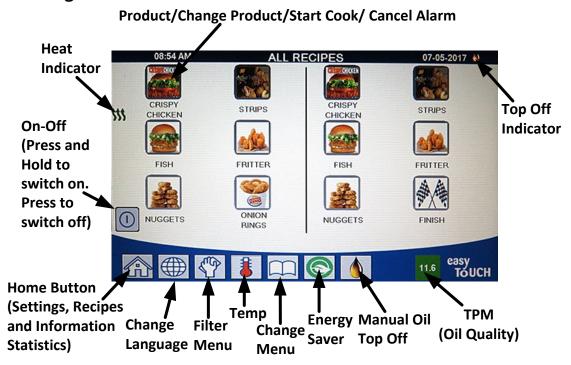

#### 1.2.1.1 Main Menu Button Bar

The main menu button bar at the bottom of the screen is used to navigate the various FQ4000 menus (see Figure 1).



Figure 1

#### **1.2.1.2** Home Button

The home button is used to switch to the home screen (see Figure 2). The home screen has Crew Mode, Menus, Recipes, Settings, Service, Change Language, Filter and Information Statistics buttons.



Figure 2

#### 1.2.1.3 Crew Mode Button

The crew mode button switches from the home screen to the cooking mode (see Figure 3).



Figure 3

#### 1.2.1.4 Menus Button

The menus button is used to set up multiple menus with specific products such as fry station, chicken, other products, breakfast, lunch or changeover menus (See Figure 4).



Figure 4

#### 1.2.1.5 Recipes Button

The recipes button allows editing or adding of products (see Figure 5).



Figure 5

#### 1.2.1.6 Settings Button

1.2.1.7 Service Button

The settings button allows access to edit the settings of the fryer (see Figure 6).

The service button allows access to service functions in the



Figure 6

## fryer (see Figure 7). During programming and other functions if no activity occurs within one minute, the controller returns to the previous operation mode.



Figure 7

#### 1.2.1.8 Power Button

Pressing and holding the power button soft powers up the user interface and fryer. Pressing the power button when the fryer is on turns the fryer off (see Figure 8).



Figure 8

#### 1.2.1.9 Language Button

Pressing the language button switches between a primary language and a secondary language if the feature is configured in manager settings (see Figure 9).



Figure 9

#### 1.2.1.10 Filter Menu Button

Pressing the filter menu button provides access to the functions associated with filtering, disposing, draining, filling as well as deep cleaning the vats (see Figure 10). When the hand is yellow, a filtration has been bypassed once. When it is red, a filtration has been bypassed more than once and requires filtration.



Figure 10

#### 1.2.1.11 Temperature Button

Pressing the temperature button displays the actual vat temperature and the setpoint temperature (see Figure 11).



Figure 11

#### 1.2.1.12 Menu Button

Pressing the menu button allows switching between different menus if configured (see Figure 12).



Figure 12

#### 1.2.1.13 Energy Saver Button

Pressing the energy saver button switches the fryer from a standard setpoint to a lower temperature setpoint when the fryer is idle, to save energy costs (see Figure 13).



Figure 13

#### 1.2.1.14 Information Statistics Button

Pressing the information statistics button provides information on filter statistics, oil statistics, life statistics, usage statistics, recovery time, last load statistics, and software versions (see Figure 14).



Figure 14

#### 1.2.1.15 Manual Oil Top Off Button

1.2.1.16 Escape Menu Items

Pressing the manual oil top off button allows the user to manually top off the vat of oil (see Figure 15).



Figure 15

To escape or back out of MENUS and SUB-MENUS, press the Home or Back arrow button (see Figure 16).



#### 1.2.1.17 TPM (Total Polar Materials) OQS (Oil Quality Sensor) Button


Pressing the TPM button when solid, displays the last 30 days of TPM/OQS readings (see Figure 17). Pressing the TPM button when blinking, denotes it has been more than 24 hours since the last OQS filter and will prompt for an OQS filter.




Figure 17

## 1.3 FQ4000 Menu Summary Tree

Reflected below are the major programming sections in the FQ4000 and the order in which submenu headings will be found under the sections in the Installation and Operation Manual.

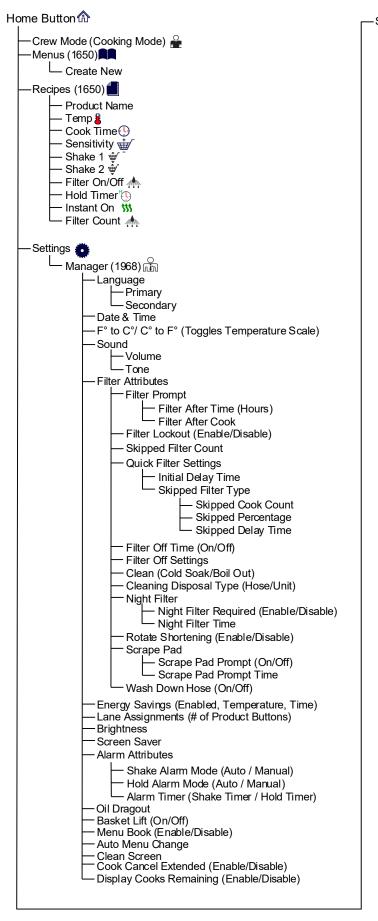

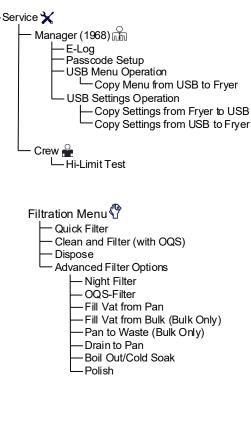

#### 1.4 FQ4000 Information Summary Tree


Reflected below are the information statistics in the FQ4000 and the order in which submenu headings will be found in the controller.

Information Statistics ? Daily Stats 🛧 1. Filters/Skipped Filters/CooksToday's Report Card 🧖 − 1. Today's Report 2. Yesterday's Report 3. Weekly Report Oil 💧 - 1. Last Dispose Date – 2. Cooks Since Last Dispose 3. Filters Since Last Dispose
 4. Skipped Filters Since Last Dispose - 5. Current Oil Life 6. Average Cooks Over Oil Life
7. Daily Dispose Bypass Count 8. Oil Dragout per Dispose - 9. Oil Dragout per Day 10. Oil Dragout per Hour - TPM Statistics -Filter 🚓 - 1. Current Day and Date 2. Cooks Remaining Until Next Filter
3. Daily Number of Cooks
4. Daily Number of Filters Daily Number of Skipped Filters
 Average Cooks Per Filter
 Weekly Number of Filters 8. Weekly Number of Skipped Filters
9. Filtration Filter Reset O(Resets Filter Stats Data 4321) -Fresh Oil 🛦 - 1. Number of Cooks Since Last Dispose - 2. Dispose Count Since Last Reset - 3. Fresh Oil Counter Reset Date 4. Fresh Oil Counter -Fresh Oil Reset ♥ (Resets Fresh Oil Data 4321) -Software Version 💆 - 1. UIB/UIC Software Version - 2. SIB Software Version (1, 2 – Splits) - 3. VIB Software Version 4. FIB Software Version - 5. OQS Software Version - 5. OQS Software Version
- 6. Actual Vat Temp (L, R - Splits)
- 7. AIF RTD Temp (L, R - Splits)
- 8. ATO RTD Temp (L, R - Splits)
- 9. Board ID
- 10. Contract Contract Version 10. Gateway Software Version 11. Gateway IP Address 12. Gateway Link Quality 13. Gateway Signal Strength and Noise
 14. IOB Software Version Recovery 🌡 \_\_\_\_\_1. Last Recovery Time -Usage 📆 - 1. Usage Start Date - 2. Total Number of Cook Cycles 3. Total Number of Quit Cook Cycles
4. Total Vat On Time (Hours) -Usage Reset O (Resets Usage Data 4321) – Life 🖺 1. Commission Date2. Unit Serial Number3. Controller Serial Number 4. Total On Time (Hours)

 5. Total Heat Cycle Count 6. Total Energy Saving Time - 7. Total Cook Time 8. BSP Version (Common Control Only) -Last Load ## 1. Last Cooked Product2. Last Load Start Time 2. Last Load Start Time
 3. Last Load Cook Time
 4. Last Load Program Time
 5. Last Load Max Vat Temp
 6. Last Load Min Vat Temp 7. Last Load Avg Vat Temp
8. % of Cook Time, Heat Is On 9. Vat Temp Before Cook Starts 10. Vat Temp at Cook End

#### 1.5 Basic Operation

## FQ4000 easyTouch® Basic Operation

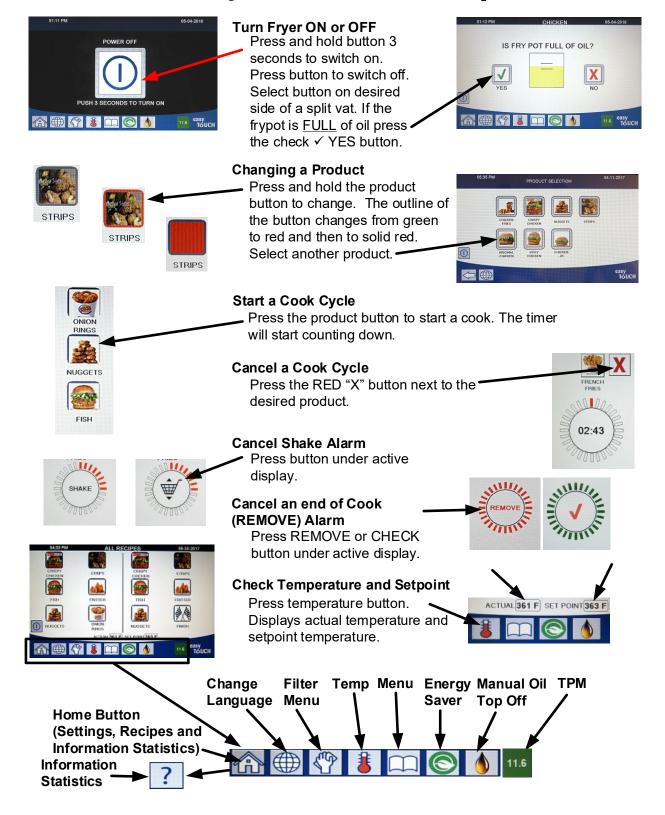

#### 1.6 Cooking

## Cooking with the FQ4000 easyTouch®

A product is shown in display. Choose a different product press and hold the product button to change. The outline of the button changes from green to red and then to solid red. Select another product.









2 Press the product button to begin the cook cycle.



**3** Display changes to timer with remaining cook time.



**4** SHAKE alternating with basket is displayed when it is time to shake the fry basket.





**5** Press SHAKE/BASKET button to cancel SHAKE alarm.





6 REMOVE alternating with the CHECKMARK is displayed when the cook cycle is complete.






**7** Press the REMOVE/CHECKMARK button to cancel alarm.





- **8** HOLD TIMERS run in the background and are not displayed until the hold timer expires.
- **9** A HOLD TIMER EXPIRED PRODUCTS screen displays products that have expired hold timers.

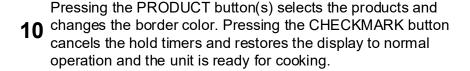









## 1.8 Fryer (Manager) Settings Programming

It is necessary upon initial power up or when changing out a controller to configure these local manager settings for the fryer. The setup includes language, date and time, temperature scale, sound settings, filter settings, energy savings, lane assignments and screen brightness. These settings should ONLY be changed by a manager or technician.

settings should ONLY be changed by	·
DISPLAY	ACTION
	With the controller at the off/standby position, press the Home button.
	2. Press the Settings button.
	3. Press the Manager button.
1968	4. Enter <b>1968</b>
	5. Press the √ (check) button.
□ LANGUAGE	6. Press the Language button.
	7. Press the Primary Language button.
□ ENGLISH	8. Select the language desired.
	9. Press the Secondary Language button.
□ SPANISH	10. Select the language desired.
Ţ	11. Press the Back button.
□ DATE & TIME	12. Press the Date & Time button.
<b>(</b> )	13. Press the Set Time button
08 : 22	14. Press the hour's box.
1 2 3 4 5 X X 6 7 8 9 0 C	15. Using the key pad, enter the time in hours.
08 : 22	16. Press the minute's box.
1 2 3 4 5 X X 6 7 8 9 0 C	17. Using the key pad enter the time in minutes.

DISPLAY	ACTION
AM PM 24hr	18. Press the AM, PM or 24HR button.
<b>V</b>	19. Press the √ (check) button.
SETUP COMPLETE	20. Press the smaller √ (check) button inside the SETUP COMPLETE box.
7	21. Press the Set Date button
DD:MM:YY MM:DD:YY	22. Press the Date Format box to toggle between MM-DD-YY or DD-MM-YY.
2017	23. At the top of the screen, the year is shown. Press the left or right arrow to select the year.
MARCH	24. Below the year is the month. Press the left or right arrow to select the month.
	25. Select the date using the numbered keys and press the √ (check) button.
SETUP COMPLETE	26. Press the smaller √ (check) button inside the SETUP COMPLETE box.
	27. Press the DST (DAYLIGHT SAVINGS TIME) SETUP button.
□ DST ON/OFF	28. Press the DST ON/OFF button.
ON OFF	29. Select ON to enable DST or OFF to disable DST.
SETUP COMPLETE	30. Press the smaller √ (check) button inside the SETUP COMPLETE box.
□ DST SETTINGS	31. Press the DST SETTINGS button.
DST START MONTH DST START SUNDAY DST END MONTH DST END SUNDAY	32. Select any of these and use the keypad to modify. The default settings for the US are: DST START MONTH -3 DST START SUNDAY -2 DST END MONTH -11 DST END SUNDAY -1
	33. Press the √ (check) button when complete.
SETUP COMPLETE	34. Press the smaller √ (check) button inside the SETUP COMPLETE box.
$\Box$	35. Press the Back button three (3) times.
□ F° TO C°	36. Press the F° TO C° or F° TO C° button. <b>NOTE: F</b> is used for Fahrenheit, <b>C</b> is used for Celsius

DISPLAY	ACTION
CONFIRM YES NO	37. Select YES to toggle the temperature scale.
COMPLETED SUCCESSFULLY	38. Press the √ (check) button when complete.
□ SOUND	39. Press the Sound button.
	40. Use the up down arrows to change the volume level and tone. Volume has nine levels with 1 being the softest and 9 the loudest. Tone has three frequencies from 1-3. Use different frequencies to customize the sound.
	41. Press the √ (check) button when complete.
SETUP COMPLETE	42. Press the smaller √ (check) button inside the SETUP COMPLETE box.
<u></u>	43. Press the Down button.
☐ FILTER ATTRIBUTES	44. Press the Filter Attributes button.
□ FILTER PROMPT	45. Press the Filter Prompt button.  The auto filtration mode uses two measures before prompting to filter. One checks for cook cycles which is adjusted in the FILTER AFTER COOK setting and the other checks for time which is adjusted in the following section FILTER AFTER TIME setting. The prompt for filtration is initiated by whichever occurs first; either the number of cycles elapsed or time elapsed.
□ FILTER AFTER TIME	46. Press the FILTER AFTER TIME button. The Filter Time option is used to set the elapsed time before a filtration prompt. This option is useful in lower volume stores, where filtration is desired more often than the amount the cook cycles would generate.
	47. Press the √ (check) button to continue or press the number button and enter the number of hours in between filter prompts. (ex. after every two hours, enter as 2) and press the √ (check) button. (By default, the time is set to 0 hours to disable)
	48. Press the √ (check) button.

DISPLAY	ACTION
SETUP COMPLETE	49. Press the smaller √ (check) button inside the SETUP COMPLETE box.
□ FILTER AFTER COOK	50. Press the FILTER AFTER COOK button. The FILTER AFTER option is used to set the number of cooking cycles which occur in the vat before the filtration prompt is displayed. If no prompts are desired set to 0 to disable. NOTE: If using Filter Count prompts for individual products under recipes, this setting needs to be set to 1 to activate Recipe Filter Counts. Recipe Filter Counts override Filter After Cook values from 1-99 in this setting.
	51. Press the √ (check) button to continue or press the number button and enter the number of cooks and press the √ (check) button
<b>√</b>	52. Press the √ (check) button.
SETUP COMPLETE	53. Press the smaller √ (check) button inside the SETUP COMPLETE box.
$\Box$	54. Press the Back button.
□ FILTER LOCKOUT	55. Press the FILTER LOCKOUT button.
ENABLE DISABLE	56. Select enable to enable the filter lockout. Select disable to disable the filter lockout. Filter lockout will lockout the fryer based off the settings in the skipped filter count setting.
SETUP COMPLETE	57. Press the smaller √ (check) button inside the SETUP COMPLETE box.
☐ SKIPPED FILTER COUNT	58. Press the SKIPPED FILTER COUNT button.
	59. Press the √ (check) button to continue or press the number button and enter the number of skipped filters allowed before the filter lockout locks out the fryer and press the √ (check) button. If set to 0, no skips or bypasses are allowed.
SETUP COMPLETE	60. Press the smaller √ (check) button inside the SETUP COMPLETE box.
□ QUICK FILTER SETTINGS	61. Press the QUICK FILTER SETTINGS button.
□ INTIAL DELAY TIME	62. Press the Initial Delay Time button.
2 MINUTES	63. Press the minute's box to adjust the initial delay time.  The initial delay time is the time the fryer sits idle, after filter after or filter cooks have been completed, before prompting for a filter. (Default is two (2) minutes.)

DISPLAY	ACTION
DISI EAT	0=Disabled
05-04-2018  INITIAL DELAY TIME  1 2 3 4 5 X X 6 7 8 9 0 C  Gasy Touch	64. Using the keypad to enter the time in minutes.
<b>V</b>	65. Press the √ (check) button.
<b>√</b>	66. Press the √ (check) button.
SETUP COMPLETE	67. Press the smaller √ (check) button inside the SETUP COMPLETE box.
□ SKIPPED FILTER TYPE	68. Press the SKIPPED FILTER TYPE button.
<ul><li>□ SKIPPED COOK COUNT</li><li>□ SKIPPED PERCENTAGE</li><li>□ SKIPPED DELAY TIME</li></ul>	69. The selection highlighted is the current type configured.  To edit, select the type of skipped filter type.
□ SKIPPED COOK COUNT	70. Press the SKIPPED COOK COUNT button.
3 NUMBER OF COOKS	71. Press the NUMBER OF COOKS box to adjust the skipped cook counts before re-prompting for a filter.
1 2 3 4 5 X X 6 7 8 9 0 C  SSAY TOUCH	72. Using the keypad to enter the time in minutes.
<b>V</b>	73. Press the √ (check) button.
<b>V</b>	74. Press the √ (check) button.
SETUP COMPLETE	75. Press the smaller √ (check) button inside the SETUP COMPLETE box.
☐ SKIPPED PERCENTAGE	76. Press the % OF TIMER OR COOK COUNT button.
% OF TIMER OR COOK COUNT	77. Press the % OF TIMER OR COOK COUNT box to adjust the percentage of a filter time timer or cook count before reprompting for a filter. Example: If set for 50%, after skipping it will half the time or cooks before re-prompting. If the original filter count was 6, setting to 50% will reprompt at 3.

DISPLAY	ACTION
1 2 3 4 5 XX X 6 7 8 9 0 C X	78. Using the keypad to enter the time in minutes.
<b>I</b>	79. Press the √ (check) button.
<b>\</b>	80. Press the √ (check) button.
SETUP COMPLETE	81. Press the smaller √ (check) button inside the SETUP COMPLETE box.
□ SKIPPED DELAY TIME	82. Press the Skipped Delay Time button.
5 MINUTES	83. Press the minute's box to adjust the skipped delay time. The skipped delay time is the time after the initial filter is skipped before it prompts again to filter. The first time the filter is skipped the filter button turns from white to yellow. The next time the filter is skipped, the filter button turns from yellow to red until the filter is performed. (Default is five (5) minutes.) 0=Disabled
02-59 PM SKIPPED DELAY TIME  1 2 3 4 5 X X 6 7 8 9 0 C  Casy TOUCH	84. Using the keypad enter the time in minutes.
<b>I</b>	85. Press the √ (check) button.
	86. Press the √ (check) button.
SETUP COMPLETE	87. Press the smaller √ (check) button inside the SETUP COMPLETE box.
$\Box$	88. Press the Down button.
□ FILTER OFF TIME	89. Press the Filter Off Time button. The Filter Off Time option is used to set times in which the filter prompt is disabled (ex. noon rush).
ON OFF	90. Select ON to enable FILTER OFF TIME. Select OFF to disable FILTER OFF TIME.
□ FILTER OFF SETTINGS	91. Press the Filter Off Settings button. The Filter Off Settings

DISPLAY	ACTION
DISPLAY  PILTER OFF SETTINGS  M-F 1  START HOURS MINUTES HOURS MINUTES  AM PM  Casy 76UCH	option is used to set the times in which the filter prompt is disabled (ex. noon rush).  NOTE: If FILTER OFF TIME is disabled (OFF), this option is grayed out and not available.  92. Use the up down arrows to scroll between M-F 1 thru SUN 4. There are a total of 12 periods which can be programmed for filter prompt lockout. Select the field to edit the start and stop times of when the filter prompt should be suspended. Select AM/PM. Once the times are selected press the check button to save the setting. (The example at the left shows on Monday – Friday no filtering is desired during a lunch rush from 11:00 AM until 2:00
	PM.)  93. Once the times are selected press the √ (check) button.
SETUP COMPLETE	94. Press the smaller √ (check) button inside the SETUP COMPLETE box.
□ CLEAN	95. Press the Clean button. Choose BOIL OULT or COLD SOAK.
SETUP COMPLETE RESTART THE SYSTEM	96. Press the √ (check) button.
□ CLEANING DISPOSAL TYPE	97. Press the Cleaning Disposal Type button. Choose HOSE if using an external hose to dispose of boil out or cold cleaning solution or UNIT if disposing to a Clean Out Solution Disposal Caddy.
SETUP COMPLETE RESTART THE SYSTEM	98. Press the √ (check) button.
□ NIGHT FILTER	99. Press the Night Filter button. The Night Filter option, if enabled, prompts for nightly filters at a prescribed time.
□ NIGHT FILTER REQUIRED	100. Press the Night Filter required button. The Night Filter option, if enabled, prompts for nightly filters at a prescribed time.
ENABLE DISABLE	101. Select enable to enable the nightly filter prompt. Select disable to disable the nightly filter prompt

DISPLAY	ACTION
SETUP COMPLETE	102. Press the √ (check) button inside the SETUP COMPLETE box.
□ NIGHT FILTER TIME	103. Press the Night Filter Time button.
NIGHT FILTER TIME  ENTER THE TIME IN 24HRS FORMAT  20 : 30  HOURS MINUTES	104. Enter the time in hours and minutes in 24-hour format when the nightly filter should prompt. <b>Example shown for 8:30PM (22:30).</b>
	105. Once the times are entered press the √ (check) button.
$\Diamond$	106. Press the Back button.
Ţ-	107. Press the Down button.
□ ROTATE SHORTENING	108. Press the Rotate Shortening button. The Rotate Shortening option, if enabled, prompts to rotate shortening from another vat. This only occurs at the end of a dispose function on a vat.
ENABLE DISABLE	109. Select enable to enable the nightly filter prompt. Select disable to disable the nightly filter prompt
SETUP COMPLETE	110. Press the √ (check) button inside the SETUP COMPLETE box.
□ SCRAPE PAD	111. Press the Scrape Pad button. The Scrape Pad option, if enabled, prompts the user to scrape the filter envelope pads during a filter if the oil doesn't return in a specified amount of time.
☐ SCRAPE PAD PROMPT	112. Press the Scrape Pad Prompt button.
ON OFF	113. Select ON to enable the Scrape Pad prompt. Select OFF to disable the Scrape Pad prompt
SETUP COMPLETE	114. Press the √ (check) button inside the SETUP COMPLETE box.
80 SECONDS	115. The time that prompts the user to scrape the filter envelope pads during a filter if the oil doesn't return the oil in the allotted time. (This is the time from when the drain valve closes to the prompt to scrape the pad).
	116. Using the keypad to enter the time in seconds for the Scrape Pad Timer.

DIGDI AV	ACTION
DISPLAY	ACTION
1 2 3 4 5 X X	
casy Totuch	
	117. Press the √ (check) button.
<b>√</b>	118. Press the √ (check) button.
SETUP COMPLETE RESTART THE	
SYSTEM	119. Press the smaller √ (check) button inside the SETUP
	COMPLETE box.
$\Box$	120. Press the Back button.
,	
	121. Press the Wash DOWN HOSE button. The WASH DOWN
□ WASH DOWN HOSE	HOSE option, if enabled, prompts the user to use the wash down hose during the clean and filter.
	122. Select ON to enable the Wash Down Hose option. Select
ON OFF	OFF to disable the Wash Down Hose option.
SETUP COMPLETE RESTART THE	
SYSTEM	123. Press the smaller √ (check) button inside the SETUP
	COMPLETE box.
$\Diamond$	124. Press the Back button.
	125. Press the Energy Savings button. The Energy Savings
□ ENERGY SAVINGS	option is used during idle periods to lower the frypot temperature to save energy.
	126. Press the Enable button to toggle the Energy Saving
OFF ON	option on or off.
	127. Press the Set Back Temp button to change the setpoint of
	the Energy Saving option. Use the number pad to enter the Energy Saving setpoint temperature and press the √
	(check) button.
	128. Press the Idle Time button to change the amount of time
	in minutes the vat sits idle before automatically entering
	the Energy Saving mode. Use the number pad to enter the Energy Saving setpoint temperature and press the √
	(check) button.

DISPLAY	ACTION
	129. Press the √ (check) button.
SETUP COMPLETE	130. Press the smaller √ (check) button inside the SETUP COMPLETE box.
□ LANE ASSIGNMENTS	131. Press the Lane Assignments button. This is used to set the number of products per vat.
2, 2S, 3, 3S, 4	132. Press the 2 button to have 2 lanes, 6 products per lane (side), 12 total products available; or 2S button to have 2 lanes, 6 products per side, 12 products per screen scrolling to 2 screens for 24 total products available; 3 button to have 3 lanes, 3 products in each lane, 9 per vat available; 3S button to have 3 lanes, 3 products in each lane, 9 products per screen scrolling for a total of 18 total products available; 4 button to have 4 lanes, 3 products per lane, 12 total products available. NOTE: Hold timers are only visible when set to 2, 3, or 4. Hold timers are NOT visible when set to 2S or 3S.
SETUP COMPLETE RESTART THE SYSTEM	133. Press the √ (check) button.
□ BRIGHTNESS	134. Press the Brightness button. This is used to set the brightness of the screen. Use the up down arrows to adjust. (Default is 100.)
	135. Press the √ (check) button.
SETUP COMPLETE	136. Press the smaller √ (check) button inside the SETUP COMPLETE box.
	137. Press the Down button.
□ SCREEN SAVER	138. Press the Screen Saver button. This is used to set the amount of time, after the controller is turned off, before going into a screen saver mode. Use the up down arrows to adjust time. (Default is 15 minutes.)
	139. Use the up down arrows to change the brightness of the screen. Brightness has nine levels with 100 being the brightest and 10 the darkest.
	140. Press the √ (check) button when complete.

DISPLAY	ACTION
SETUP COMPLETE	141. Press the smaller √ (check) button inside the SETUP COMPLETE box.
□ ALARM ATTRIBUTES	142. Press the Alarm Attributes button
□ SHAKE ALARM MODE	143. Press the Shake Alarm Mode button. Select Auto or Manual. The Shake Alarm Mode allows the user to select between auto or manual shake alarm cancel.
SETUP COMPLETE RESTART THE SYSTEM	144. Press the √ (check) button.
□ HOLD ALARM MODE	145. Press the Hold Alarm Mode button. Select Auto or Manual. The Hold Alarm Mode allows the user to select between auto or manual hold alarm cancel.
SETUP COMPLETE RESTART THE SYSTEM	146. Press the √ (check) button.
□ ALARM TIMER	147. Press the Alarm Timer button. These settings allow the user to select the amount of time before auto cancelling the shake alarm timer or hold alarm. Default settings are 5 seconds.
SETUP COMPLETE RESTART THE SYSTEM	148. Press the √ (check) button.
	149. Press the Back button two (2) times.
□ OIL DRAGOUT	150. The Oil Drag out function sets parameters that adjust flow and flow adjust. These parameters are used to calculate oil drag out usage for statistical information that is captured in the Information Statistics function under Oil statistics.
□ FLOW	151. Enter the oil drag out flow rate of pounds per minute (Default is 2.211) and press the √ (check) button. (Note: Enter values from 0100-4000 for ranges 0.100-4.000lbs).
SETUP COMPLETE	152. Press the √ (check) button when complete.
□ FLOW ADJUST	153. Enter the configurable flow rate (Default is 1) and press the √ (check) button. (Note: Enter values from 10-200 for ranges 0.10-2.00lbs).

DISPLAY	ACTION
SETUP COMPLETE	154. Press the √ (check) button when complete.
□ BASKET LIFT	155. Press the Basket Lift button.
ON OFF	156. Select ON to enable the basket lift or OFF to disable the basket lift.
SETUP COMPLETE RESTART THE SYSTEM	157. Press the √ (check) button.  NOTE: Basket lifts will only work with lane assignment set to 2S (2-Lane Scrolling).
$\Box$	158. Press the Down button.
□ MENU BOOK	159. Press the Menu button.
ENABLE DISABLE	160. Select enable to enable the menu book button on the bottom of the screens.
SETUP COMPLETE	161. Press the √ (check) button when complete.
□ AUTO MENU CHANGE	162. Press the Auto Menu Change button.
10:17 AM	163. Enabling Auto Menu Change is used to automatically change between different menus (ie. Breakfast, Changeover, Lunch, other). Press the OFF button to change to ON to enable a menu. Enter time in 24hr format for when the specific menu should start. See example left.
$\Box$	164. Press the Back button.
□ CLEAN SCREEN	165. Press the Clean Screen button. This option if enabled, prompts the user to clean the screen at prescribed intervals. It locks the screen to enable cleaning.
# OF HOURS BEFORE PROMPT	166. Using the keypad to enter the time in hours (0-60 hours) for the clean screen prompts. 0=Disabled
SETUP COMPLETE	167. Press the √ (check) button when complete.
□ COOK CANCEL EXTENDED	168. Press the Cook Cancel Extended button.
ENABLE DISABLE	169. Select enable to allow cooks to be canceled up until the end of the cook. Select disable to only allow cooks to be cancelled during the first 30 seconds of a cook.

DISPLAY	ACTION
SETUP COMPLETE	170. Press the √ (check) button when complete.
□ DISPLAY COOKS REMAINING	171. Press the Display Cooks Remaining button.
ENABLE DISABLE	172. Select enable to display the cooks remaining until a filter is prompted in the top right corner of the screen. The icon will display the number of cooks with a green + sign for any cooks remaining greater than 5 (five). If 3-5 cooks are remaining, the amount of cooks are shown in yellow. If 2 or less cooks are remaining, the amount of cooks are shown in red. If the fryer is topping off, the cooks remaining icon will be temporary replaced with the top off oil drop icon until it finishes topping off.
SETUP COMPLETE	173. Press the √ (check) button when complete.
<del>-</del>	174. Press the Back button.
	175. Press the Home button.
CREW MODE	176. Press the Crew Mode button.
	177. Press and hold the momentary reset switch. Ensure the switch is pressed and held for <b>one (1) minute</b> . In newer fryers the switch is located below the USB port. On older gas units, the button is located under the far-left control box. On older electric units, the button is located on the rear of the control box behind the JIB reset switch.
	178. The system reboots in approximately 45 seconds and returns to off/standby mode.

## **1.9 Adding or Editing Existing Products**This function is used to add additional products or edit existing products.

DISPLAY	ACTION
	1. Press the Home button.
	2. Press the Recipes button.
1650	3. Enter <b>1650</b>
	4. Press the √ (check) button.

DISPLAY	ACTION
ALL RECIPES  ALL RECIPES  ALL RECIPES  WE AND THE STREET S	5. Choose the product icon to edit or press the + to add a new product.
	6. Press the pencil icon at the bottom of the screen to edit an existing product.
ALL RECPES  X  IN THIS  Q W E R T Y U I O P  A S D F G H J K L  Z X C V B N M X  7123 SPACE  CSSY TOUCH	7. Enter or change the name of the product using the keyboard.
	8. Press the √ (check) button.
12.59	9. This screen displays the current setpoint, cook time, sensitivity, hold timer, shake timers and filter settings.  To edit a parameter, press the item to edit.
•	10. To edit temperature, press the temp button.
NEW RECIPE    350	11. Use the keypad to enter or edit the cook temperature for the product.  NOTE: Ensure that the temperature is changed from 32°F (0°C) to correct setpoint temperature.
	12. Press the √ (check) button.
<u></u>	13. Press the cook time button.
NEW RECIPE  03:10  1 2 3 4 5 X X  6 7 8 9 0 C  Capy Touch	14. Use the keypad to enter or edit the cook time in minutes and seconds.
	15. Press the √ (check) button.
	16. Press the load compensation or sensitivity button.

DISPLAY	ACTION
<u></u>	
NEW RECIPE  LOAD SIZE  W  W  A  Casy  TOUCH	<ul> <li>17. Use the up and down arrows to change the load compensation or sensitivity setting recommended for this product.</li> <li>This setting allows the product compensation (sensitivity) to be changed. Some menu items may need an adjustment, depending on their cooking characteristics. NOTE: It is highly recommended to NOT adjust this setting, as it could have an adverse effect on the products cooking cycles.</li> <li>(The default setting for product compensation is set to four (4).)</li> </ul>
	18. Press the √ (check) button.
	19. Press the Shake Timer 1 button.
NEW RECIPE    00 30	20. Enter the time in minutes and seconds for the first shake to be performed.
	21. Press the √ (check) button.
<b>\$</b>	22. Press the Shake Timer 2 button if an additional shake is needed, otherwise skip to step 26.
NEW RECIPE    00;30	23. Enter the time in minutes and seconds for the second shake to be performed.
	24. Press the √ (check) button.
₽	25. Press the down arrow to scroll to more settings.
	26. Press the Filter button. (NOTE: ON or OFF is displayed for current selection.)

DISPLAY	ACTION
NEW RECIPE  OFF  Casy Touch	27. Ensure that the filter button is ON to enable auto filtration for this product. This setting is used to prevent co-mingling of product specific oils. For products such as FISH, select NO to prevent auto filtration if desired.
<b>Н</b> О	28. Press the Hold Timer button.
NEW RECIPE  07:00  1 2 3 4 5 X X  6 7 8 9 0 C X  10UCH	29. Enter the time in minutes and seconds for the product hold time.
	30. Press the √ (check) button.
555	31. Press the Instant On button.
00;30  1 2 3 4 5 X X  6 7 8 9 0 C  SSAY TÖÜCH	32. This is the time, in seconds, the fryer heats at 100%, after the product button is pressed before the controller adjusts the temperature. Enter the time in minutes and seconds for the instant on time (ie. 00:30=30 seconds). (0=OFF). NOTE: Instant on time may need to be adjusted for light cooking loads.
	33. Press the √ (check) button.
	34. Press the Filter Count button.
6 7 8 9 0 C  Casy  Casy  Casy  Casy  Color  Casy  Color  Casy  Color  Co	35. Enter the number of cooking cycles which occur for this product before the filtration prompt is displayed. This setting is for product only and is not to be confused with a global or Filter After Count under Filter Attributes in Manager settings. If no prompts are desired set to 0 to disable. If any product recipe has a filter count value > 0, Filter After Counts are overridden and filter prompts are averaged between products with different filter count values. A value > 0 must exist in Filter After Counts under Filter Attributes in Manager settings, for recipe filter counts to function.
	36. Press the √ (check) button.

DISPLAY	ACTION
CHOOSE ICON FOR THE RECIPE	37. Choose the icon to associate with the product recipe that is being entered or edited.
<b>√</b>	38. Press the √ (check) button.
CHOOSE THE MENUS  ALE RECEPTS  BYSLANT AST  LUNCH  CHANGE OVER  12-17-2014 CBSY 08:23 AM TOUCH	39. Choose the menu(s) to associate with the product recipe that is being entered or edited.
	40. Press the √ (check) button.
SAVED	41. The controller displays SAVED.
<b>\</b>	42. Press the √ (check) button.
	43. Select another product to edit or press the + key to add additional products. If finished press the home button.
CREW MODE	44. Press the Crew Mode button to return to main screen.
OB-S4 AM  ALL RECIPES  O7-05-2917  ORIGHY CHICKEN CHIC	45. Associate the new programmed product to a button by pressing and holding an existing product button. The outline of the product button changes from green to red and then to solid red. Press the new desired product to assign to the button.


## 1.10 Adding or Editing Menus

This function is used to add or edit menus. Menus allow the operator to group certain products together. For example, setting up a breakfast menu allows grouping of breakfast only products. This is helpful when switching products by narrowing the number of products to choose from.

DISPLAY	ACTION
	1. Press the Home button.
	2. Press the Menus button.
1650	3. Enter <b>1650</b>
	4. Press the √ (check) button.
MENUS  MENUS  MENUS  LUNCH  OF OF OF OF CHEATEREW  12-17-2014 GBSY  00-51 AM TOUCH	5. Select a menu by pressing the button above the ON/OFF button to edit products (highlighted in green) or press the + button to add a new menu. If adding a new menu, enter name of menu on next screen and press the √ (check) button. If deleting a menu, highlight the menu and press the trash can at the bottom of the screen.
	6. Press the pencil icon at the bottom of the screen to edit an existing menu.
PRODUCT SELECTION  FIRST  FIRS	7. Select the desired products by pressing their icons to be added to the chosen menu. The selected products will be highlighted in green. To unselect a product, press the icon and the highlight will change from green to gray.
	8. Press the √ (check) button when finished to save selected products to menu.
<b>\forall </b>	9. Press the Back button to edit additional menus starting with step 5, otherwise advance to the next step
	10. Press the Home button.
CREW MODE	11. Press the Crew Mode button.

#### 1.11 Changing Menus

If separate menus are created for Fry Station, Chicken or Other Product, pressing the MENU button from the main screen shall display menu change options. Pressing the desired menu shall switch the menus.

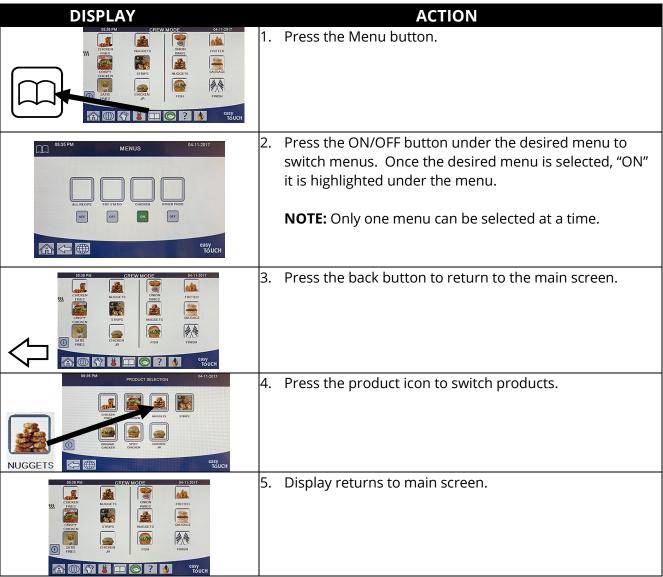

#### 1.12 Service Tasks

Covered in this section are crew and manager service tasks used in stores such as High Limit Test, E-Log (error log), password setup, and functions to copy menus to and from the fryer from USB using menu connect.

#### 1.12.1 High Limit Test

The high-limit test mode is used to test the high limit circuit. The high-limit test will destroy the oil. It should only be performed with old oil. Shut the fryer off and call for service immediately if the temperature reaches 460°F (238°C) without the second high-limit tripping and the controller displays HIGH LIMIT FAILURE DISCONNECT POWER with an alert tone during testing.

The test is cancelled at any time by turning the fryer off. When the fryer is turned back on, it returns to the operating mode and displays the product.

DISPLAY		ACTION
	1.	With the controller at the off/standby position, press the Home button.
×	2.	Press the Service button.
	3.	Press the Crew button.
	4.	Select LEFT VAT or RIGHT VAT for split vats.
PRESS AND HOLD	5.	Press and hold the Press and Hold button to begin high limit test.
RELEASE	6.	While pressing and holding the button the vat begins to heat. The controller displays the actual vat temperature during the test. When the temperature reaches $410^{\circ}\text{F} \pm 10^{\circ}\text{ F}$ ( $210^{\circ}\text{C} \pm 12^{\circ}\text{C}$ )*, the controller displays HOT HI-1 (ex. 410F) and continues heating. *NOTE: In controllers used in the European Union (those with the CE mark), the temperature is $395^{\circ}\text{F}$ ( $202^{\circ}\text{C}$ ) when the controller displays HOT HI-1.
HOT HI-1	7.	While continuing to press and hold the button, the fryer continues heating until the high limit opens. Generally, this happens once the temperature reaches 423°F to 447°F (217°C to 231°C) for non-CE high limits and 405°F to 426°F (207°C to 219°C) for CE high limits.
HELP HI-2	8.	Release the button. The vat stops heating and the controller displays the current temperature setting until the temperature cools below 400°F (204°C). Press the power button to cancel the alarm.
HIGH LIMIT FAILURE DISCONNECT POWER	9.	If the controller displays this message, disconnect power to the fryer and immediately call for service.
	10.	After a high limit test, once the vat cools below 400°F (204°C), dispose of the oil.

#### 1.12.2 Manager Functions

#### 1.12.2.1 E-Log

The E-LOG function is used to view the ten (10) most recent error codes encountered on the fryer. These codes are displayed with the most recent errors displayed first. The error code, time and date are displayed.

If no errors exist, the controller is blank in this function. Errors are displayed with the side of the error if a split vat, error code, time and date. An error code displaying an "L" indicates left side of a split vat while an "R" indicates right side of a split vat where the error occurred (R E19 06:34AM

04/22/2014). An error code displaying a "G" indicates this was a global error not specifically linked to a particular vat. Error codes are listed in section 3.2.5 of this manual.

DISPLAY	ACTION
	1. Press the Home button.
×	2. Press the Service button.
	3. Press the Manager button.
1968	4. Enter <b>1968</b>
	5. Press the √ (check) button.
□ E-LOG	6. Press the E-LOG button. The three most recent errors are shown.
₹.	7. Press the Down button. The next three errors are shown. Continue pressing the down arrow to view additional errors.
	8. Press the Back button to return to menu or press the Home button to exit.
CREW MODE	9. Press the Crew Mode button.

#### 1.12.2.2 Passcode Setup

The password mode allows a restaurant manager to change passwords for various modes.

DISPLAY	ACTION
	1. Press the Home button.
×	2. Press the Service button.
	3. Press the Manager button.
1968	4. Enter <b>1968</b>
	5. Press the √ (check) button.
□ PASSCODE SETUP	6. Press the PASSCODE SETUP button.
□ MENUS □ RECIPES □ SETTINGS MANAGER □ DIAGNOSTICS MANAGER	7. Select the desired passcode to modify. Use the down arrow to scroll to additional setting.  Defaults are:  MENUS 1650  RECIPES 1650  SETTINGS MANAGER 1656  DIAGNOSTICS MANAGER 1656

DISPLAY	ACTION
1 2 3 4 5 X X 6 7 8 9 0 C X	8. Use the keypad to enter new passcode for the selected item.
	9. Press the √ (check) button.
RETYPE PASSWORD	10. Use the keypad to enter the new passcode again to verify.
<b>√</b>	11. Press the √ (check) button.
PASSCODE SETUP SUCCESSFUL	12. Press the √ (check) button.
□ MENUS □ RECIPES □ SETTINGS MANAGER □ DIAGNOSTICS MANAGER	13. Press the Back button to return to menu or press the Home button to exit.
CREW MODE	14. Press the Crew Mode button.

#### 1.12.2.3 USB - Menu Operation/Settings Operation

This option allows the ability to upload menus and settings to the controller. This allows products to be created in MenuSync to be saved to a USB drive and uploaded to the fryer. It also allows settings to be downloaded to a USB drive or uploaded to a fryer.

DISPLAY	ACTION
	1. Press the Home button.
×	2. Press the Service button.
	3. Press the Manager button.
1968	4. Enter <b>1968</b>

DISPLAY	ACTION
	5. Press the √ (check) button.
□ USB – MENU OPERATION	6. Press the USB – MENU OPERATION button.
□ COPY MENU FROM USB TO FRYER	7. Press the COPY MENU FROM USB TO FRYER button.
INSERT USB	8. Insert the USB drive into the connector behind the far- left fryer door.
IS USB INSERTED? YES NO	9. Press YES once the USB drive is inserted.
READING FILE FROM USB PLEASE DO NOT REMOVE USB WHILE READING	10. No action required.
MENU.CBR or other *.cbr file	11. A list appears with a list of menu files ending in .cbr. Select the menu file to load.
SELECT THE VATS FOR MENU UPGRADE	12. Select <b>ONLY</b> the vats to be updated. If all vats are updating the same menu, select each vat.
UI-UI MENU DATA TRANSFER IN PROGRESS	13. No action required while the file is loading.
MENU UPGRADE IN PROGRESS	14. No action required while the upgrade is in progress.
UPGRADE COMPLETE? YES	15. Press YES
MENU UPGRADE COMPLETED, REMOVE THE USB AND RESTART THE SYSTEM.	16. Remove the USB drive. Press and hold the momentary reset switch. Ensure the switch is pressed and held for <b>one (1) minute</b> . In newer fryers the switch is located below the USB port. On older gas units, the button is located under the far-left control box. On older electric units, the button is located on the rear of the control box behind the JIB reset switch.
□ USB – SETTINGS OPERATION	17. Press the USB – SETTINGS OPERATION button.
□ COPY SETTINGS FROM FRYER TO USB	18. Insert a blank USB drive into the USB port behind the far-left fryer door. Press the COPY SETTINGS FROM FRYER TO USB button. NOTE: The file is downloaded as a GM.INI or GM.txt file. If the file is a GM.txt file, it needs to be renamed GM.ini file before loading to a fryer.
DOWNLOAD COMPLETE	19. Press the √ (check) button and wait 30 seconds prior to removing the USB drive.
\( \frac{1}{2} \)	20. Press the Back button.
□ COPY SETTINGS FROM USB TO FRYER	21. Insert the USB drive with GM.ini into the USB port behind the far-left fryer door. Press the COPY SETTINGS FROM USB TO FRYER button.
UPGRADE COMPLETE RESTART	22. Press the √ (check) button.

DISPLAY	ACTION
	23. Press the Home button.
	24. Remove the USB drive. Press and hold the momentary reset switch located below the USB port. Ensure the switch is pressed and held for <b>one (1) minute</b> .  On older gas units, the button is located under the farleft control box. On older electric units, the button is located on the rear of the control box behind the JIB reset switch.

### 1.13 Information Statistics

## 1.13.1 Report Card Statistics

The report card statistics function is used to view a quick report on filtering, OQS, oil quality and frypot utilization.

DISPLAY	ACTION
?	Press the Information button.
	2. Press the Report Card button.
□ TODAY'S REPORT □ YESTERDAY'S REPORT □ WEEKLY REPORT	3. Select the desired report
? 04:09 PM YESTERDAY'S REPORT 03-03-2017  Fryer Grade 'A' 03-03-2017	4. The report will display the grade
FILTRING WHEN PROMPTED  85%  OQSMEASURED  FRYPOT UTILIZATION OPTIMIZED 90%  easy TOUCH	based on if the crew is filtering when prompted; if OQS is being measured regularly; the current quality of the oil; and the fryer usage.
Touch	5. Press the back button to return to menu or the home button to exit.

#### 1.13.2 Oil Statistics

The oil statistics function is used to view the date of last dispose, the number of cooks since last dispose, filters since last dispose, skipped filters since last dispose, current oil life and average number of cooks over the oil life.

DISPLAY	ACTION
<b>?</b>	Press the Home button and then the Information button.

DISPLAY	ACTION
	2. Press the Oil button.
1. LAST DISPOSE DATE	
2. COOKS SINCE LAST DISPOSE	
3. FILTERS SINCE LAST DISPOSE	3. Press the down arrow to scroll to more
4. SKIPPED FILTERS SINCE LAST DISPOSE	statistics.
$\bigcirc$	
5. CURRENT OIL LIFE	
6. AVERAGE COOKS OVER OIL LIFE	
7. DAILY DISPOSE BYPASS COUNT	
8. OIL DRAGOUT PER DISPOSE	4. Press the up arrow to scroll up; the back
9. OIL DRAGOUT PER DAY	button to return to menu or the home button
10. OIL DRAGOUT PER HOUR	to exit.

#### 1.13.3 Life Statistics

The life statistics function is used to view the commission date of the fryer which is automatically set once the fryer has completed 25 cooks, the serial number of the controller, the total time the fryer has operated in hours and the total heat cycle count of the fryer (the amount of times the controller has turned the heat on/off).

DISPLAY	ACTION
<b>?</b>	Press the Home button and then the Information button.
<u>_</u>	2. Press the Life Stats button.
<ol> <li>COMMISSION DATE</li> <li>UNIT SERIAL NUMBER</li> <li>CONTROLLER SERIAL NUMBER</li> <li>TOTAL ON TIME (HOURS)</li> <li>TOTAL HEAT CYCLE COUNT</li> <li>TOTAL ENERGY SAVING TIME</li> <li>TOTAL COOK TIME</li> </ol>	3. Press the back button to return to menu or the home button to exit.

#### 1.13.4 Usage Statistics

The usage statistics displays total cook cycles per vat, number of cook cycles per vat, number of cook cycles exited prior to completion, the number of hours the vat(s) have been on and the date of last usage reset.

DISPLAY	ACTION
<b>?</b>	Press the Home button and then the Information button.
7	2. Press the Usage Stats button.
<ol> <li>USAGE START DATE</li> <li>TOTAL NUMBER OF COOK CYCLES</li> <li>TOTAL NUMBER OF QUIT COOK CYCLES</li> <li>TOTAL VAT ON TIME (HOURS)</li> </ol>	3. Press the back button to return to menu or the home button to exit.

#### 1.13.5 Recovery Time

Recovery is used to determine if the fryer is operating correctly. Recovery is the time required for the fryer to raise the temperature of the oil 50°F (28°C) between 250°F (121°C) and 300°F (149°C). Maximum recovery time should not exceed 1:40 for electric or 3:15 for gas.

DISPLAY	ACTION
?	Press the Home button and then the Information button.
	2. Press the Recovery button. The time is displayed in minutes and seconds.
1. LAST RECOVERY TIME	Press the back button to return to menu or the home button to exit.

#### 1.13.6 Filter Statistics

The filter statistics function is used to view the number of cooks remaining until the next filter, the number of cooks per vat, the number of filters per vat, the number of skipped or bypassed filters per vat and the average number of cook cycles per filter per day.

DISPLAY	ACTION
?	Press the Home button and then the Information button.
	2. Press the Filter button.
□ DAY 1 □ DAY 2 □ DAY 3 □ DAY 4	3. Select and press the desired day.  Press the down arrow to scroll back additional days.

	DISPLAY		ACTION
2.	DAY AND DATE (Day and date of filter statistics displayed) COOKS REMAINING UNTIL NEXT FILTER (Number of times cooks that remain until the next filter prompt.) DAILY NUMBER OF COOKS (Number of cooks that day) DAILY NUMBER OF FILTERS (Number of times vat filtered that day.)	4.	Press the down arrow to scroll to more statistics.
6. 7. 8.	DAILY NUMBER OF SKIPPED FILTERS (Number of times filter was bypassed that day.)  AVERAGE COOKS PER FILTER - (Average number of cook cycles per filter that day.)  WEEKLY NUMBER OF FILTERS - (Number of times vat filtered in the past week.)  WEEKLY NUMBER OF SKIPPED FILTERS (Number of times filters were bypassed in the past week.)  FILTRATION - (Displays if filtration is enabled or disabled. Diagnostic tool to determine status of FIB board.)	5.	Press the up arrow to scroll up or the back button to return to select another day.
		6.	Press the back button to return to menu or the home button to exit.

#### 1.13.7 Software Version

The software version function provides the software versions of the controller and circuit boards in the fryer system; the values of the temperature probe; the values of the AIF RTD probe and the ATO RTD probe and information on any attached gateway.

DISPLAY	ACTION
<b>?</b>	Press the Home button and then the Information button.
$\Box$	2. Press the down arrow button.
11	3. Press Software Version button.

DISPLAY	ACTION
INITIALIZING	4. No action needed.
1. UIB SOFTWARE VERSION	
2. SIB SOFTWARE VERSION	5. Press the down arrow to scroll to additional
3. VIB SOFTWARE VERSION	software versions and probe temperatures.
4. FIB SOFTWARE VERSION	NOTE: Split vats will have an SIB2 and left and
	right vat, AIF, and ATO temperatures.
5. OQS SOFTWARE VERSION	
6. ACTUAL VAT TEMP	
7. AIF RTD TEMP	
8. ATO RTD TEMP	
9. BOARD ID	
$\Box$	6. Press the down arrow to scroll to additional software versions and information.
10. GATEWAY SOFTWARE VERSION	7. Press the up arrow to scroll up; the back button
11. GATEWAY IP ADDRESS	to return to menu or the home button to exit.
12. GATEWAY LINK QUALITY	
13. GATEWAY SIGNAL STRENGTH	
AND NOISE	

**1.13.8 Usage Reset Statistics**The reset function resets all usage data in the usage statistics.

DISPLAY	ACTION
?	Press the Home button and then the Information button.
$\Box$	2. Press the down arrow button.
$\mathbf{C}$	3. Press Usage Reset button.
4321	4. Enter <b>4321</b>
<b>I</b>	5. Press the √ (check) button.
ALL USAGE DATA HAS BEEN RESET	6. Press the √ (check) button.
	7. Press the up arrow to scroll up; the back button to return to menu or the home button to exit.

### 1.13.9 Fresh Oil Statistics

The fresh oil statistics function is used to view information on the current fresh oil.

DISPLAY	ACTION
<b>?</b>	Press the Home button and then the Information button.
Ţ.	2. Press the down arrow button.
	3. Press the Fresh Oil button.
<ol> <li>NUMBER OF COOKS SINCE LAST RESET</li> <li>DISPOSE COUNT COOKS SINCE LAST RESET</li> <li>FRESH OIL COUNTER RESET DATE</li> <li>FRESH OIL COUNTER</li> </ol>	4. Press the back button to return to menu or the home button to exit.

## 1.13.10 Fresh Oil Reset Usage Statistics

The reset function resets all fresh oil data in the fresh oil statistics.

DISPLAY	ACTION
?	Press the Home button and then the Information button.
$\Box$	2. Press the down arrow button.
$\odot$	3. Press Fresh Oil Reset button.
4321	4. Enter <b>4321</b>
	5. Press the √ (check) button.
FRESH OIL DATA HAS BEEN RESET	6. Press the √ (check) button.
	7. Press the back button to return to menu or the home button to exit.

#### 1.13.11 Last Load Statistics

The last load statistics provides data for the last cook cycle.

DISPLAY	ACTION
<b>?</b>	Press the Home button and then the Information button.
	2. Press the Last Load button.
<ol> <li>LAST COOKED PRODUCT</li> <li>LAST LOAD START TIME</li> <li>LAST LOAD COOK TIME</li> <li>LAST LOAD PROGRAM TIME</li> </ol>	3. Press the down arrow to scroll to more statistics.
5. LAST LOAD MAX VAT TEMP 6. LAST LOAD MIN VAT TEMP 7. LAST LOAD AVG VAT TEMP 8. % OF COOK TIME, HEAT IS ON  9. VAT TEMP BEFORE COOK STARTS 10. VAT TEMP AT COOK END	4. Press the down arrow to scroll to more statistics.
	5. Press the up arrow to scroll up; the back button to return to menu or the home button to exit.

## 1.13.12 TPM (Total Polar Material) Statistics

The TPM statistics provides data from the OQS (Oil Quality Sensor). The same data can be accessed by pressing the TPM button on the front of the controller when the TPM button is solid.

DISPLAY	ACTION
	1. Press the Home button.
?	2. Press the Information button.
$\Box$	3. Press the down arrow.
	4. Press the TPM Statistics button. The TPM values for the previous valid thirty (30) days are listed.
	5. Press the up arrow to scroll up; the back button to return to menu or the home button to exit.

## 1.13.13 Filter Reset Statistics

The reset function resets all filter statistics.

DISPLAY	ACTION
?	Press the Home button and then the Information button.
Ţ.	2. Press the down arrow button two (2) times.
· ·	3. Press Filter Reset button.
4321	4. Enter <b>4321</b>
	5. Press the √ (check) button.
CONFIRM? YES NO	6.
FILTER RESET HAS BEEN DONE	7. Press the √ (check) button.
	8. Press the back button to return to menu or the home button to exit.

# CHAPTER 2: FILTERQUICK™ FQ4000 FILTRATION MENU FUNCTIONS INSTRUCTIONS

## 2.1 Filtration Menu

The filtration menu selections are used for filtering, draining, filling, disposing and cleaning the vats.

## **A** DANGER

When using a sediment basket, it MUST be removed and emptied prior and during each filtration. Some food particles can spontaneously combust if left soaking in certain shortening material.

## 2.1.1 Quick Filter - Filter Prompt

Quick Filter is a feature that, after a number of preset cook cycles or time, will automatically prompt to filter the frypots. This function can also be performed on demand as well and is covered in the next section. **Note**: Simultaneous filtering of multiple vats does not occur.

DISPLAY	ACTION
FILTRATION REQUIRED  FILTER NOW?	1. Press the √ (check - YES) button to start filtration. If the X (NO) button is selected, filtering is cancelled, and the fryer resumes normal operation. The filtration button changes to yellow on the first bypass and the QUICK FILTER is highlighted in yellow in the filter menu. On the second bypass, the filtration button changes to red. The controller will prompt again soon to filter the oil. This sequence repeats until a filter is completed. Pressing the filter button when the color has changed will allow a filter to be started.
OIL LEVEL TOO LOW	<ol> <li>Displayed if the oil level is too low. Press the √ (check - YES) button to acknowledge issue and return to idle cook mode.         Check to see if the JIB is low on oil. If JIB is not low and this continues to occur, contact your FAS.     </li> </ol>
SKIM DEBRIS FROM VAT	3. Skim the crumbs from the oil with the skimmer using a front to back motion, removing as many crumbs as possible from each vat. This is critical to optimizing usable oil life and quality in the oil. Press the √ (check- YES) button when complete. Press the X button to cancel the filter.
START FILTRATION	4. Press the BLUE button to start filtration or the X button to cancel the filter.
DRAINING	5. No action required.
FLUSHING	6. No action required.
ALERT DRAIN CLOSING REMOVE TOOLS	7. Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.  DANGER  Keep all items out of drains. Closing actuators may cause damage or injury.
FILLING	8. No action required.
PREHEAT	9. No action required. Displayed until the fryer reaches

DISPLAY	ACTION
	setpoint.
CHECKEN NUGGETS CHECKEN RANGE CHECKEN STROPS CHECKEN FREES SANSAGE SANSAGE FREES CHECKEN FREE SANSAGE CHECKEN FREE SANSAGE SANSAGE CHECKEN FREE SANSAGE SANSAG	10. Fryer is ready for use. Displayed once fryer reaches setpoint.

The complete filtering process takes approximately four minutes with a clean filter.

**NOTE:** If the filter pan is removed during filtration, the filtration process stops and resumes once pan is reseated into place.

Should the quick filtration procedure fail or if <u>ALL</u> the oil isn't completely returned during filtration, the system may proceed to an incomplete filtration function. In some cases, an error message may be generated. Follow the instructions on the controller to clear the error, complete the filter and return <u>ALL</u> the oil.

### **A** DANGER

Keep all items out of drains. Closing actuators may cause damage or injury.

#### 2.1.2 Quick Filter on Demand

Quick Filter on demand filtration is used to manually start a quick filter. **Note**: Simultaneous filtering of multiple vats cannot occur.

DISPLAY	ACTION
CHECKEN FINES CHECKEN FINES CHECKEN CHECKEN FINES CHECKEN FINES CHECKEN FINES CHECKEN FINES CHECKEN FINES FINES CHECKEN FINES	1. The fryer MUST be at setpoint temperature. Press the filtration menu button.  The filtration button is yellow if a bypass has occurred. If the filtration button is red, more than one bypass has occurred.
	2. Select LEFT VAT or RIGHT VAT for split vats.
FILTRATION  GUICK FILTER  CLEAN AND FILTER WITH OQS  DISPOSE  ADVANCED FILTER OPTIONS  CASY TOUCH	3. Select QUICK FILTER. QUICK FILTER is highlighted in yellow in the filter menu if a bypass has occurred.
QUICK FILTER NOW?	4. Press the √ (check - YES) button to start filtration. If the X (NO) button is selected, filtering is cancelled, and the fryer resumes normal operation. The filtration button changes to yellow on the first bypass and the QUICK FILTER is highlighted in yellow in the filter menu. On the second bypass, the filtration button changes to red. The controller will prompt again soon to filter the oil.

DISPLAY	ACTION
	This sequence repeats until a filter is completed.  Pressing the filter button when the color has changed will allow a filter to be started.
OIL LEVEL TOO LOW	5. Displayed if the oil level is too low. Press the √ (check - YES) button to acknowledge issue and return to idle cook mode. Check to see if the JIB is low on oil. If JIB is not low and this continues to occur, contact your FAS.
SKIM DEBRIS FROM VAT	6. Skim the crumbs from the oil with the skimmer using a front to back motion, removing as many crumbs as possible from each vat. This is critical to optimizing usable oil life and quality in the oil. Press the √ (check-YES) button when complete. Press the X button to cancel the filter.
START FILTRATION	7. Press the BLUE button to start filtration or the X button to cancel the filter.
DRAINING	8. No action required as oil drains into filter pan.
FLUSHING	9. No action required as debris is flushed from the vat.
	10. Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.
ALERT DRAIN CLOSING REMOVE	<u></u> DANGER
TOOLS	Keep all items out of drains. Closing actuators may
	cause damage or injury.
FILLING	11. No action required as the vat refills.
PREHEAT	12. No action required as the fryer heats to setpoint.
CHECKEN  CHECKEN  FINES  CHECKEN  NAUGGETS  CHECKEN  SATIS  CHECKEN  SATIS  CHECKEN  FIRST  FISH  FISH  CHECKEN  FIRST  FISH  CHECKEN  FISH  FISH  FISH  CACHE  CAC	13. Fryer is ready for use. Displayed once fryer reaches setpoint.

The complete filtering process takes approximately four minutes with a clean filter.

**NOTE:** If the filter pan is removed during filtration, the filtration process stops and resumes once pan is reseated into place.

Should the quick filtration procedure fail or if <u>ALL</u> the oil isn't completely returned during filtration, the system may proceed to an incomplete filtration function. In some cases, an error message may be generated. Follow the instructions on the controller to clear the error, complete the filter and return <u>ALL</u> the oil.

When FILTER BUSY is displayed, the system is waiting on another vat to be filtered or waiting on another issue to clear. Press the  $\sqrt{\ }$  (check - YES) button and wait 15 minutes to see if problem is corrected. If not, call your local FAS.

#### **▲ DANGER**

Do not drain more than one frypot at a time into the built-in filtration unit to avoid overflow and spillage of hot oil that may cause severe burns, slipping and falling.

## **MARNING**

The filter motor is equipped with a manual reset switch in case the filter motor overheats or an electrical fault occurs. If this switch trips, turn off power to the filter system and allow the pump motor to cool 20 minutes before attempting to reset the switch (see photo below).

## **WARNING**

Use caution and wear appropriate safety equipment when resetting the filter motor reset switch. Resetting the switch must be accomplished with care to avoid the possibility of a serious burn from careless maneuvering around the drain tube and frypot.



Filter Motor Reset Switch

## 2.1.3 Clean and Filter (with OQS [if installed]) (or End of Day Filter)

The clean and filter operation is an extended filtration with additional prompts to thoroughly clean the vat. This typically is done once a day or at the end of the day. Ensure that the filter pad or paper is replaced daily to keep the system operating correctly. For proper operation in high volume or 24-hour stores, the filter pad or paper must be changed twice a day.


If CLOSE DISPOSE VALVE is displayed, close the dispose valve. Press the X (NO) button to exit. Some filtration function options aren't available in all fryers.

#### **NOTICE**

The filter pad or paper must be replaced daily.

#### **▲ WARNING**

Do not drain more than one frypot at a time into the built-in filtration unit to avoid overflow and spillage of hot oil that may cause severe burns, slipping and falling.

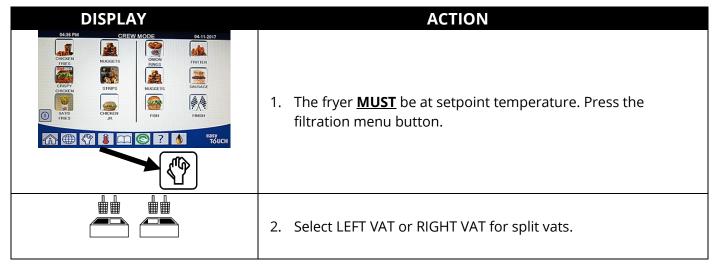

DISPLAY	ACTION
OS-15-2018  FILTRATION  QUICK FILTER  QUICK FILTER  GLEAN AND FILTER WITH OQS  DISPOSE  ADVANCED FILTER OPTIONS  Casy TOUCH	3. Select CLEAN AND FILTER (WITH OQS [Oil Quality Sensor] if installed).
CLEAN NOW?	<ol> <li>Press the √ (check - YES) button to start filtration. If the X (NO) button is selected, filtering is cancelled, and the fryer resumes normal operation.</li> </ol>
SKIM DEBRIS FROM VAT -	5. Skim the crumbs from the oil with the skimmer using a front to back motion, removing as many crumbs as possible from each vat. This is critical to optimizing usable oil life and quality of the oil. Press the √ (check - YES) button when complete. Press the X button to cancel the filter.
ADD FILTER POWDER	6. Add filter powder if prompted.
WEAR PROTECTIVE GLOVES –	7. Press the √ (check - YES) button once all personal protection equipment including heat resistant gloves are in place. Press the X button to cancel the filter.
START FILTRATION	8. Press the BLUE button to start filtration or the X button to cancel the filter.
DRAINING	9. No action required as oil drains into filter pan.
SCRUB INSIDE VAT – PRESS YES	10. Scrub the vat. Press the √ (check - YES) button when complete.
WHEN COMPLETE	<b>⚠</b> DANGER
	Keep all items out of drains. Closing actuators may cause damage or injury.
FLUSHING	11. No action required while the return valve opens, and the vat is flushed with oil from the filter pan. Skip to step 16 if a washdown hose is NOT used.
CONNECT FRONT WASH DOWN HOSE AND PULL HANDLE TO START RINSING	12. Connect the front wash down hose to the quick disconnect of the fryer, by pulling back on the female end collar and pushing firmly onto the male disconnect. Once in place, release the disconnect and ensure that the quick disconnect is fully locked into place. Pull the handle to start rinsing. Press the √ (CHECK) button.

DISPLAY	ACTION
DISPLAT	ACTION
	13. Pull the BLUE handle completely forward to start rinsing.
PULL BLUE HANDLE	13. Full the BLOL Handle Completely forward to start finishing.
USE WASHDOWN HOSE TO	
CLEAN FRYPOT WASH COMPLETE?	14. Use the washdown hose to clean the frypot. Press the √ (check -YES) button when complete.
	15. Press the wash down handle in to stop the flow of oil.  Disconnect the front wash down hose to the quick disconnect
PUSH WASH DOWN HANDLE IN. REMOVE AND STORE WASH DOWN HOSE.	of the fryer. Press the √ (CHECK) button and skip to step 20.
FLUSH AGAIN?	16. The filter pump shuts off. If the vat is clean of debris, press

DISPLAY	ACTION
	the X (NO) button to continue. If crumbs are still present,
	press the √ (check - YES) button and the filter pump runs
	again. This cycle repeats until the X (NO) button is pressed.
	17. Ensure that all tools are removed from the frypot prior to the
	drain closing to prevent damage to the drain.
ALERT DRAIN CLOSING REMOVE	<b>△</b> DANGER
TOOLS	Keep all items out of drains. Closing actuators may
	cause damage or injury.
	18. No action required while the drain valve closes, and the filter
RINSING IN PROGRESS	pump refills the vat. The drain valve opens and rinses the vat.
	19. If the vat is clean of debris, press the X (NO) button to
DINICE ACAIND	continue. If an additional rinse is desired, press the √ (check -
RINSE AGAIN?	YES) button and the rinse repeats until the X (NO) button is
	pressed.
POLISHING	20. No action required while the drain and return valves are open
	and oil is pumped through the frypot for five minutes.
	21. Ensure that all tools are removed from the frypot prior to the
	drain closing to prevent damage to the drain.
ALERT DRAIN CLOSING REMOVE	<b>△</b> DANGER
TOOLS	Keep all items out of drains. Closing actuators may
	cause damage or injury.
	22. No action required while the vat is refilled. If an OQS sensor
FILLING	is installed proceed to next step, otherwise proceed to step
	29.
MEASURING OU OUALITY	23. No action required while the OQS sensor calculates the oil
MEASURING OIL QUALITY	quality value of the oil.
FILLING	24. No action required while the vat is refilled.
	25. If OQS = Text and if TPM reading is below OQS SETUP –
11.6	DISCARD NOW and DISCARD SOON limits, the TPM value is
	shown in the green TPM box in lower right corner. Proceed to
	step 29.
	If OQS = Text and if TPM reading is below OQS SETUP –
21.1	DISCARD NOW but above DISCARD SOON limits, the TPM
21.1	value is shown in the orange TPM box in lower right corner.
	Proceed to DISCARD SOON in step 26.
	If OQS = Text and if TPM reading is above OQS SETUP –
28.3	DISCARD NOW limits; the TPM value is shown in the red TPM
29.9	box in lower right corner. Proceed to DISCARD NOW in step 26.
	If OQS = Number proceed to TPM - XX in step 27.
DISCARD SOON	2 Q2
🗸	26 Press the √ (check -YFS) hutton to continue Skin to sten 29
( )	26. Press the √ (check -YES) button to continue. Skip to step 29
TPM - XX	
TPM - XX	<ul> <li>26. Press the √ (check -YES) button to continue. Skip to step 29</li> <li>27. Press the √ (check - YES) button to continue. If the TPM reading is above OQS SETUP – DISCARD limits, proceed to step</li> </ul>
TPM - XX	


DISPLAY	ACTION
DISCARD NOW	28. Press the √ (check -YES) button to continue. Proceed to DISPOSE in section 2.1.5/6. Press X (NO) to delay the DISPOSE.
IS FRYPOT FULL OF OIL?	29. Press the X (NO) button to run the pump again if the oil level is below the top oil level full line. * Press the √ (check - YES) button once the oil level is at the top oil level full line. If the vat oil level is not completely filled, check the filter pan to see if most of the oil has returned. The pan may have a small amount of oil.
	30. The controller switches off.

\*NOTE: After a clean and filter it is normal to leave some oil in the pan and the level of oil may not return to the level prior to starting clean and filter. Answering YES after two attempts at refilling the vat enables auto top off, if available, to compensate for any loss of oil during filtration.

### 2.1.4 Dispose for Non-Bulk Oil Systems

This option is used to dispose of old oil into either a SDU or a **METAL** container.

When cooking oil is exhausted, dispose the oil into an appropriate container for transport to the waste oil container. Frymaster recommends a Shortening Disposal Unit (SDU). Refer to the documentation furnished with your disposal unit for specific operating instructions. **NOTE:** If using an SDU built before January 2004, the unit will not fit under the drain. If a shortening disposal unit is not available, allow the oil to cool to 100°F (38°C), then drain the oil into a **METAL** container with a capacity of FOUR gallons (15 liters) or larger to prevent oil from spilling.

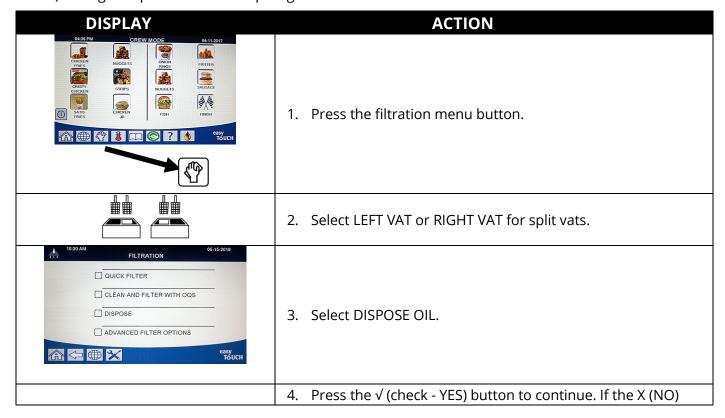

	ACTION
DISPLAY	button is selected, the user returns to the previous state.
DISPOSE NOW?	DANGER Allow oil to cool to 100°F (38°C) before draining into an appropriate METAL container for disposal.
REMOVE FILTER PAN	5. Carefully remove the filter pan from the fryer.  A DANGER  Remove the filter pan slowly to avoid splashing of hot oil that may cause severe burns, slipping and falling.
IS FILTER PAN EMPTY?	6. If the filter pan is empty press the √ (check - YES) button. If the pan is not empty, press the X (NO) button and return to previous state and use the FILL VAT FROM PAN function to return the oil to the vat.
INSERT DISPOSAL UNIT	7. Carefully remove the filter pan from the fryer and insert the
	disposal unit.
	<b>⚠</b> DANGER
П	Remove the filter pan slowly to avoid splashing of hot oil that may cause severe burns, slipping and falling.
	on that may cause severe barns, suppling and family.
	DANGER  When draining oil into a disposal unit, do not fill above the maximum fill line located on the container.
	8. Ensure the SDU or a METAL container with a capacity of FOUR gallons (15 liters) or larger is in place. Press the √ (check - YES) button to continue.
	· ·
IS DISPOSE UNIT IN PLACE?	FOUR gallons (15 liters) or larger is in place. Press the √ (check - YES) button to continue.
IS DISPOSE UNIT IN PLACE?	FOUR gallons (15 liters) or larger is in place. Press the √ (check - YES) button to continue.   DANGER  Allow oil to cool to 100°F (38°C) before draining into an
IS DISPOSE UNIT IN PLACE?	FOUR gallons (15 liters) or larger is in place. Press the √ (check - YES) button to continue.   DANGER  Allow oil to cool to 100°F (38°C) before draining into an appropriate METAL container for disposal.  DANGER  When draining oil into an appropriate SDU or METAL container, make sure the container will hold at least
IS DISPOSE UNIT IN PLACE?	FOUR gallons (15 liters) or larger is in place. Press the √ (check - YES) button to continue.  DANGER Allow oil to cool to 100°F (38°C) before draining into an appropriate METAL container for disposal.  DANGER When draining oil into an appropriate SDU or METAL container, make sure the container will hold at least FOUR gallons (15 liters) or more. Otherwise oil could
IS DISPOSE UNIT IN PLACE?  START DISPOSE	FOUR gallons (15 liters) or larger is in place. Press the √ (check - YES) button to continue.  DANGER  Allow oil to cool to 100°F (38°C) before draining into an appropriate METAL container for disposal.  DANGER  When draining oil into an appropriate SDU or METAL container, make sure the container will hold at least FOUR gallons (15 liters) or more. Otherwise oil could overflow and can cause injury.
	FOUR gallons (15 liters) or larger is in place. Press the √ (check - YES) button to continue.   DANGER  Allow oil to cool to 100°F (38°C) before draining into an appropriate METAL container for disposal.  DANGER  When draining oil into an appropriate SDU or METAL container, make sure the container will hold at least FOUR gallons (15 liters) or more. Otherwise oil could overflow and can cause injury.
	FOUR gallons (15 liters) or larger is in place. Press the √ (check - YES) button to continue.   DANGER  Allow oil to cool to 100°F (38°C) before draining into an appropriate METAL container for disposal.  DANGER  When draining oil into an appropriate SDU or METAL container, make sure the container will hold at least FOUR gallons (15 liters) or more. Otherwise oil could overflow and can cause injury.  9. Press the BLUE button to start filtration or the X button to
START DISPOSE	FOUR gallons (15 liters) or larger is in place. Press the √ (check - YES) button to continue.   DANGER  Allow oil to cool to 100°F (38°C) before draining into an appropriate METAL container for disposal.  DANGER  When draining oil into an appropriate SDU or METAL container, make sure the container will hold at least FOUR gallons (15 liters) or more. Otherwise oil could overflow and can cause injury.  9. Press the BLUE button to start filtration or the X button to cancel the dispose.

DISPLAY	ACTION
	press the √ (check - YES) button to continue.
ALERT DRAIN CLOSING REMOVE TOOLS	13. Ensure that all tools are removed from the frypot prior to
	the drain closing to prevent damage to the drain.
	<u> </u>
10025	Keep all items out of drains. Closing actuators may
	cause damage or injury.
	If using a JIB fresh oil system skip to step 19. If using a bulk fresh oil system type, continue to next step.
FILL VAT FROM BULK?	14. Press the √ (check - YES) button to continue. If the X (NO) button is selected, the user returns to the filtration menu.
START FILLING? PRESS AND HOLD	15. Press and hold the button to fill the vat. The bulk oil refill pump uses a momentary switch. It only pumps if the switch is depressed.
RELEASE BUTTON WHEN FULL	16. Release the button when the vat is filled to the lower fill line.
CONTINUE FILLING?	17. Press the √ (check - YES) button to continue filling. Otherwise press the X (NO) button once the vat is full, to exit and skip to step 19.
REMOVE DISPOSAL UNIT?	18. Remove the disposal unit and press the √ (check - YES) button to continue.
INSERT FILTER PAN	19. Insert the clean and assembled filter pan into place. If shortening rotation is enabled, continue to next step. If not, skip to step 28.
ROTATE SHORTENING NOW?	20. Press the √ (check - YES) button to rotate shortening from another vat to the current vat. If the X (NO) button is selected, continue to step 28.
SELECT VAT TO ROTATE SHORTENING FROM	21. Select the vat to rotate the shortening from and press the press the √ (check - YES) button to continue.
OIL DRAINING TO PAN FROM SELECTED FRYPOT	22. No action is required while the other vat drains oil into the filter pan. Once the shortening is drained into the filter pan, the display of the other vat displays IS VAT EMPTY? Press the √ (check - YES) button to continue.
FILLING	23. No action required while the vat is refilled.
	24. Carefully remove the filter pan from the fryer.
REMOVE FILTER PAN	
IS FILTER PAN EMPTY?	25. If the filter pan is empty press the √ (check - YES) button. If the pan is not empty, press the X (NO) button and return to previous state.
INSERT FILTER PAN	26. Insert the filter pan into place and skip to step 29.
MANUALLY FILL VAT	27. Carefully pour oil into the vat until it reaches the low-level fill line in the fryer. Press the √ (check - YES) button once the vat is full.

DISPLAY	ACTION
	28. The controller switches off. Reinsert the filter pan if not previously inserted.

## 2.1.5 Dispose for Bulk, Wand Front, and Wand External Dispose Waste Oil Systems

This option is used to dispose of exhausted oil into a bulk waste oil system. Bulk oil systems use a pump to move exhausted oil from the fryer to a holding tank. Additional plumbing is used to connect the bulk oil systems to the fryers. Wand Front Dispose systems use a wand, that is connected to the front of the fryer, to pump the oil into a disposal container. Wand External

### **MARNING**

Ensure filter paper or pad is in place prior to draining or disposing of oil. Failure to insert filter paper or pad may result in clogged lines and/or pumps.

Dispose systems use a wand, with an external pump, that pumps the oil from the frypot.

DISPLAY	ACTION
CHECKEN NUCCETS  CHECKE	1. Press the filtration menu button.
	2. Select LEFT VAT or RIGHT VAT for split vats.
OS-15-2016  FILTRATION  QUICK FILTER  CLEAN AND FILTER WITH OQS  DISPOSE  ADVANCED FILTER OPTIONS  Casy Touch	3. Select DISPOSE OIL. If disposing to bulk proceed to the next step. If using a front dispose (Wand Front) system, skip to step 5. If using an external wand system to pump the oil from the fryer, skip to step 6.
DISPOSE NOW?	<ul><li>4. Press the √ (check - YES) button to continue and skip to step</li><li>8. If the X (NO) button is selected, the user returns to the previous state.</li></ul>
IS DISPOSE FROM FILTER PAN WITH WAND?	<ol> <li>Press the √ (check - YES) button to continue and skip to step</li> <li>If the X (NO) button is selected, the user returns to the previous state.</li> </ol>
IS DISPOSE FROM FRYPOT WITH WAND?	6. Press the √ (check - YES) button to continue and skip to step 7. If the X (NO) button is selected, the user returns to the previous state.
IS WAND DISPOSAL SYSTEM IN PLACE?	7. Ensure the external wand disposal system is in place and press the √ (check - YES) button to continue and skip to step 11.
REMOVE FILTER PAN	8. Remove the filter pan.
	9. If the filter pan is empty press the √ (check - YES) button and proceed to the next step. If the pan is not empty, press the

DISPLAY	ACTION
IS FILTER PAN EMPTY?	X (NO) button. The clean function is cancelled and returns to the filtration menu. Remove the oil from the pan and after inserting the filter pan, retry the function. If no pan is detected, the controller displays INSERT PAN until the pan is detected.
INSERT FILTER PAN	10. Push the filter pan fully into place and continue to next step.  Displayed if the filter pan is not fully engaged.
START DISPOSE	11. Press the BLUE button to start filtration or the X button to cancel the dispose. If using an external wand skip to step 23.
BULK TANK FULL?	12. This message is only displayed if the bull tank is full. Press the √ (check - YES) button to acknowledge and call the bulk oil waste provider. The display returns to OFF.
INSERT FILTER PAN	13. Push the filter pan fully into place. Displayed if the filter pan is not fully engaged.
DRAINING	14. No action required as oil drains into filter pan.
IS FRYPOT EMPTY?	15. Once the frypot is empty, press the √ (check - YES) button to continue.
SCRUB FRYPOT COMPLETE?	16. Clean the frypot with a scrub brush and when complete press the √ (check - YES) button to continue.
ALERT DRAIN CLOSING REMOVE TOOLS	17. Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.  If using front dispose (Wand Front) proceed to the next step.  If disposing to bulk skip to step 24.  DANGER  Keep all items out of drains. Closing actuators may cause damage or injury.
POSITION DISPOSAL UNIT	18. Position the disposal unit in front of the fryer and press the √ (check - YES) button to continue.
IS DISPOSE WAND AND DISPOSAL UNIT IN PLACE?	19. Attach the dispose wand by pulling back on the female end collar and pushing firmly onto the male disconnect. Once in place, release the disconnect and ensure that the quick disconnect is fully locked into place. Ensure the disposal unit is in place in front of the fryer and press the √ (check - YES) button to continue.
	DANGER  When draining oil into an appropriate METAL container, make sure the container will hold at least FOUR gallons (15 liters) or more, otherwise hot liquid could overflow and cause injury.
OPEN DISPOSE VALVE PRESS AND HOLD THE FRONT WAND SWITCH	20. Open the left cabinet door and unlock the valve if necessary. Pull the dispose valve completely forward to start disposal. If using front dispose continue to next step.

DISPLAY	ACTION
OT LINES	21. Ensure the wand is in place prior to pressing and holding the dispose switch to start disposing.
DISPOSING RELEASE WAND SWITCH AND CLOSE DISPOSE VALVE WHEN FULL	22. The oil transfers from the filter pan to the disposal unit.  When the pan is empty, release the switch to stop the pump. Close the dispose valve when full by pushing the valve handle toward the rear of the fryer until it stops.  Relock the valve if required by your manager. Skip to step 27.
USE WAND TO EXTRACT OIL FROM FRYPOT	23. Use the external wand to pump oil from the frypot to the disposal unit. Press √ (check - YES) button when complete and proceed to the next step.
OPEN DISPOSE VALVE	24. Open the left cabinet door and unlock the valve if necessary.  Pull the dispose valve completely forward to start disposal and continue to next step.
DISPOSING	25. No action is required while the pump transfers the waste oil from the pan to the waste container. If disposing to bulk proceed to step 27. If using an external wand to pump oil from the frypot proceed to the next step.
IS FRYPOT EMPTY?	26. Once the frypot is empty, press √ (check - YES) button when complete and proceed to the next step.
REMOVE FILTER PAN	27. Carefully pull the filter pan from the fryer.  A DANGER  Open the filter pan slowly to avoid splashing of hot oil that may cause severe burns, slipping and falling.
IS FILTER PAN EMPTY?	28. If the filter pan is empty press the √ (check - YES) button. If using front wand dispose continue to step 31. If disposing to bulk skip to step 34. If disposing to external wand skip to

DISPLAY	ACTION
	step 30. If the pan is not empty, press the X (NO) button; return to step 20 for front dispose; step 24 for bulk; or step 30 for external wand. If the filter pan is not empty and using an external wand continue to next step.
USE WAND TO EXTRACT OIL FROM THE FILTER PAN	29. Use the external wand to pump oil from the filter pan to the disposal unit. Press √ (check - YES) button when complete and proceed to the next step.
REMOVE WAND DISPOSAL SYSTEM	30. Remove the external wand disposal system and skip to next step.
CLEAN FILTER PAN?	31. Clean the filter pan and press √ (check - YES) button when complete and skip to step 34. If using an external wand, proceed to next step.
SCRUB FRYPOT COMPLETE?	32. Clean the frypot with a scrub brush and when complete press the √ (check - YES) button to continue.
IS FILTER PAN DRY?	33. Dry the filter pan and press √ (check - YES) button when complete.
INSERT FILTER PAN	34. Insert the filter pan. If using front wand dispose continue to next step. If disposing to bulk skip to step 37. If using an external wand skip to step 49.
REMOVE DISPOSAL UNIT AND DETACH WAND	35. Disconnect the disposal wand and remove the disposal unit and press √ (check - YES) button when complete. If using a JIB fresh oil system skip to step 49. If using a bulk fresh oil system type, skip to step 38.
CLOSE DISPOSE VALVE	36. Close the dispose valve by pushing the valve handle toward the rear of the fryer until it stops. Relock the valve if required by your manager.  If using a JIB fresh oil system skip to step 49. If using a bulk fresh oil system type, continue to next step.
FILL VAT FROM BULK?	37. Press the √ (check - YES) button to continue. If the X (NO) button is selected, the user returns to the filtration menu.
START FILLING? PRESS AND HOLD	38. Press and hold the button to fill the vat. The bulk oil refill pump uses a momentary switch. It only pumps if the switch is depressed.
RELEASE BUTTON WHEN FULL	39. Release the button when the vat is filled to the lower fill line.
CONTINUE FILLING?	40. Press the √ (check - YES) button to continue filling. Otherwise press the X (NO) button once the vat is full, to skip to step 50.
ROTATE SHORTENING NOW?	41. Press the √ (check - YES) button to rotate shortening from another vat to the current vat. If the X (NO) button is selected, continue to step 49.
SELECT VAT TO ROTATE SHORTENING FROM	42. Select the vat to rotate the shortening from and press the press the √ (check - YES) button to continue.
OIL DRAINING TO PAN FROM SELECTED FRYPOT	43. No action is required while the other vat drains oil into the filter pan. Once the shortening is drained into the filter pan,

DISPLAY	ACTION
	the display of the other vat displays IS VAT EMPTY? Press the
	√ (check - YES) button to continue.
FILLING	44. No action required while the vat is refilled.
	45. Carefully remove the filter pan from the fryer.
REMOVE FILTER PAN	⚠ DANGER Remove the filter pan slowly to avoid splashing of hot oil that may cause severe burns, slipping and falling.
IS FILTER PAN EMPTY?	46. If the filter pan is empty press the √ (check - YES) button. If the pan is not empty, press the X (NO) button and return to previous state.
INSERT FILTER PAN	47. Insert the filter pan into place and skip to step 50.
MANUALLY FILL VAT	48. Carefully pour oil into the vat until it reaches the low-level fill line in the fryer. Press the √ (check - YES) button once the vat is full.
	49. The controller switches off.

## 2.1.6 Night Filter - Prompted

Night Filter is a quick filter, if enabled, that automatically prompts for nightly filters on all vats, starting at a preset time, once the vat is soft powered off. This function can also be performed on demand as well and is covered in the next section. **Note**: Simultaneous filtering of multiple vats does not occur.

DISPLAY	ACTION
NIGHT FILTER REQUIRED? POWER ON AND WAIT FOR FILTER FILTER NOW?	<ol> <li>Press the √ (check - YES) button to start filtration. If the X         (NO) button is selected, filtering is cancelled, and the fryer         turns OFF. The next time the fryer is powered up, if a filter         has not occurred and cooks have occurred since the last         filter, it will prompt for a Quick Filter (see Section 2.1.1).         Other vats may prompt Power On and Wait for Filter or         Waiting to Filter until the filter is complete.</li> </ol>
OIL LEVEL TOO LOW MANUALLY FILL VAT	<ol> <li>Displayed if the oil level is too low. Manually top off the vat with oil. Press the √ (check - YES) button to acknowledge issue and return to idle cook mode. Check to see if the JIB is low on oil. If JIB is not low and this continues to occur, contact your FAS.</li> </ol>
SKIM DEBRIS FROM VAT	3. Skim the crumbs from the oil with the skimmer using a front to back motion, removing as many crumbs as possible from each vat. This is critical to optimizing usable oil life and quality in the oil. Press the √ (check- YES) button when complete. Press the X button to cancel the filter.
START FILTRATION	4. Press the BLUE button to start filtration or the X button to cancel the filter.
DRAINING	5. No action required.
FLUSHING	6. No action required.
ALERT DRAIN CLOSING REMOVE TOOLS	7. Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.

DISPLAY	ACTION
	DANGER Keep all items out of drains. Closing actuators may cause damage or injury.
FILLING	8. No action required.
0	9. The controller switches off. Once a vat completes filtration, press the √ (check - YES) button to start filtration on another vat.

The complete filtering process takes approximately four minutes with a clean filter.

**NOTE:** If the filter pan is removed during filtration, the filtration process stops and resumes once pan is reseated into place.


Should the filtration procedure fail or if <u>ALL</u> the oil isn't completely returned during filtration, the system may proceed to an incomplete filtration function. In some cases, an error message may be generated. Follow the instructions on the controller to clear the error, complete the filter and return <u>ALL</u> the oil.

### **A** DANGER

Keep all items out of drains. Closing actuators may cause damage or injury.

#### 2.1.7 Night Filter on Demand

Night Filter on demand filtration is used to manually start a nightly quick filter. **Note**: Simultaneous filtering of multiple vats cannot occur.

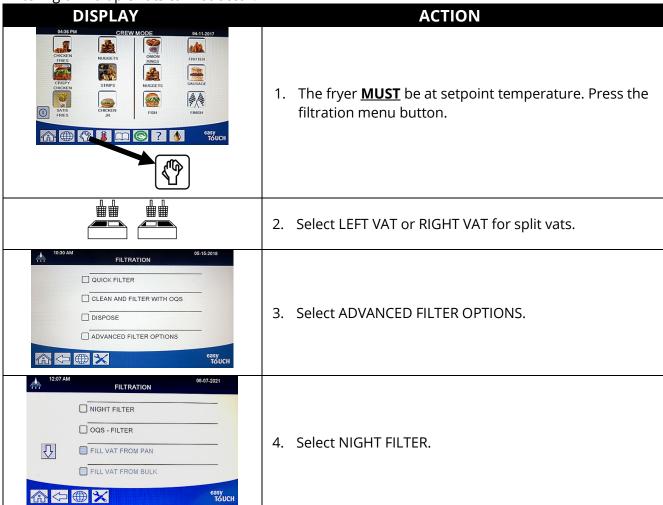

DISPLAY	ACTION
	5. Press the <b>√</b> (check - YES) button to start filtration. If the
•	X (NO) button is selected, filtering is cancelled, and the
NIGHT FILTER NOW?	fryer returns to previous state.
	6. Displayed if the oil level is too low. Manually top off
OIL LEVEL TOO LOW MANUALLY	the vat with oil. Press the √ (check - YES) button to
FILL VAT	acknowledge issue and return to idle cook mode.
	Check to see if the JIB is low on oil. If JIB is not low and
	this continues to occur, contact your FAS.
	7. Skim the crumbs from the oil with the skimmer using a
SKIM DEBRIS FROM VAT	front to back motion, removing as many crumbs as possible from each vat. This is critical to optimizing
SKIN DEBKIS FROM VAT	usable oil life and quality in the oil. Press the √ (check-
	YES) button when complete. Press the X button to
	cancel the filter.
START FILTRATION	
	8. Press the BLUE button to start filtration or the X button to cancel the filter.
DRAINING	9. No action required as oil drains into filter pan.
FLUSHING	10. No action required as debris is flushed from the vat.
	11. Ensure that all tools are removed from the frypot prior
ALERT DRAIN CLOSING REMOVE	to the drain closing to prevent damage to the drain.
TOOLS	<u></u> DANGER
TOOLS	Keep all items out of drains. Closing actuators may
	cause damage or injury.
FILLING	12. No action required as the vat refills.
PREHEAT	13. No action required as the fryer heats to setpoint.
CREW MODE  CHICKEN FIRES  CHICKEN FIRES  SATIS CHICKEN FIRES  CHICKEN FIRES  CHICKEN FIRES  CHICKEN FIRES  CHICKEN FIRES  FIRES  CHICKEN FIRES FIRES  CHICKEN FIRES FIRE	14. Fryer is ready for use. Displayed once fryer reaches setpoint.
100CH	

The complete filtering process takes approximately four minutes with a clean filter.

**NOTE:** If the filter pan is removed during filtration, the filtration process stops and resumes once pan is reseated into place.

Should the filtration procedure fail or if <u>ALL</u> the oil isn't completely returned during filtration, the system may proceed to an incomplete filtration function. In some cases, an error message may be generated. Follow the instructions on the controller to clear the error, complete the filter and return <u>ALL</u> the oil.

When FILTER BUSY is displayed, the system is waiting on another vat to be filtered or waiting on another issue to clear. Press the  $\sqrt{\text{check - YES}}$  button and wait 15 minutes to see if problem is corrected. If not, call your local FAS.

## 2.1.8 OQS (Oil Quality Sensor) Filter

The OQS filter is a function that filters the vat that takes an oil reading to test the TPM (Total Polar Materials) in the oil using the built in OQS sensor. This function is used to determine when the oil has reached the end of its life and when to dispose. Ensure that the filter pad

**NOTICE** 

The filter pad or paper must be replaced daily.

or paper is replaced daily to keep the system operating correctly. For proper operation in high volume or 24-hour stores, the filter pad or paper must be changed twice a day.

If CLOSE DISPOSE VALVE is displayed, close the dispose valve. Press the X (NO) button to exit.

DISPLAY	ACTION
ALL RECIPES  OS-17-2018  OS-17	1. The fryer MUST be at setpoint temperature. Press the filtration menu button or if the TPM button is blinking, press the TPM button.
	2. Select LEFT VAT or RIGHT VAT for split vats.
10:30 AM FILTRATION  QUICK FILTER  QUEEN AND FILTER WITH OQS  DISPOSE  ADVANCED FILTER OPTIONS  Casy Touch	3. Select ADVANCED FILTER OPTIONS.
12:07 AM  FILTRATION  08-07-2021  NIGHT FILTER  OQS - FILTER  FILL VAT FROM PAN  FILL VAT FROM BULK  Casy Touch	4. Select OQS (Oil Quality Sensor) - FILTER.
OQS – FILTER NOW?	<ol> <li>Press the √ (check - YES) button to start filtration. If the X         (NO) button is selected, filtering is cancelled, and the fryer         resumes normal operation.</li> </ol>
OIL LEVEL TOO LOW	6. Displayed if the oil level is too low. Press the √ (check - YES) button to acknowledge issue and return to idle cook mode. Check to see if the JIB is low on oil. If JIB is not low and this continues to occur, contact your FAS.
SKIM DEBRIS FROM VAT	7. Skim the crumbs from the oil with the skimmer using a front to back motion, removing as many crumbs as possible from each vat. This is critical to optimizing usable oil life and quality of the oil. Press the √ (check- YES) button when complete. Press the X button to cancel the filter.

DISPLAY	ACTION
START FILTRATION	8. Press the BLUE button to start filtration or the X button to cancel the filter.
DRAINING	9. No action required as oil drains into filter pan.
FLUSHING	10. No action required while the return valve opens, and the vat is flushed with oil from the filter pan.
ALERT DRAIN CLOSING REMOVE	11. Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.
TOOLS	DANGER  Keep all items out of drains. Closing actuators may cause damage or injury.
FILLING	12. No action required while the vat is refilled.
MEASURING OIL QUALITY	13. No action required while the OQS sensor calculates the oil quality value of the oil.
FILLING	14. No action required while the vat is refilled.
11.6 21.1 28.3	<ul> <li>15. If OQS = Text and if TPM reading is below OQS SETUP – DISCARD NOW and DISCARD SOON limits, the TPM value is shown in the green TPM box in lower right corner. Proceed to step 20.</li> <li>If OQS = Text and if TPM reading is below OQS SETUP – DISCARD NOW but above DISCARD SOON limits, the TPM value is shown in the orange TPM box in lower right corner. Proceed to DISCARD SOON in step 16.</li> <li>If OQS = Text and if TPM reading is above OQS SETUP – DISCARD NOW limits; the TPM value is shown in the red TPM box in lower right corner. Proceed to DISCARD NOW in step 18.</li> <li>If OQS = Number, proceed to TPM - XX in step 17.</li> </ul>
DISCARD SOON	16. Press the √ (check -YES) button to continue. Skip to step 20
TPM - XX	17. Press the √ (check - YES) button to continue. If the TPM reading is above OQS SETUP – DISCARD limits, proceed to step 18, otherwise proceed to step 20.
DISCARD NOW	18. Press the √ (check -YES) button to continue. Proceed to DISPOSE in section 2.1.5/6. Press X (NO) to delay the DISPOSE.
PREHEAT	19. No action required as the fryer heats to setpoint.
CREW MODE  4515277  ANGELS  FINES  FINES  FINES  ANGELS  FISH  FRACE  FR	20. Fryer is ready for use. Displayed once fryer reaches setpoint.

**NOTE:** If the oil isn't completely returned during filtration, the system may proceed to an incomplete filtration function.

## 2.1.9 Fill Vat from (Filter) Pan

The fill vat from pan function fills the vat from the filter pan.

DISPLAY	ACTION
	1. The fryer <u>MUST</u> be OFF.
	2. Press the filtration menu button
	3. Select LEFT VAT or RIGHT VAT for split vats.
FILTRATION  GUICK FILTER  CLEAN AND FILTER WITH OQS  DISPOSE  ADVANCED FILTER OPTIONS  Casy TOUCH	4. Select ADVANCED FILTER OPTIONS.
FILTRATION  1 NIGHT FILTER  1 OQS - FILTER  1 FILL VAT FROM PAN  1 FILL VAT FROM BULK  285Y 76UCH	5. Select FILL VAT FROM PAN. If no pan is detected, the controller displays INSERT PAN until the pan is detected.
FILL FROM PAN?	6. Press the √ (check - YES) button to continue. If the X (NO) button is selected, the controller goes to OFF.
FILLING	7. No action is required while the vat is filling.
IS FRYPOT FULL OF OIL?	8. Press the X (NO) button to run the pump again if the oil level is below the top oil level full line. Press the √ (check - YES) button once the oil level is at the top oil level full line. If the vat oil level is not completely filled, check the filter pan to see if most of the oil has returned. The pan may have a small amount of oil.
	9. The controller switches off.

## 2.1.10 Fill Vat from Bulk


The fill vat from bulk function is used to fill the vat from a bulk oil fresh source.

DISPLAY	ACTION
	1. The fryer <b>MUST</b> be OFF.
	2. Press the filtration menu button

DISPLAY	ACTION
	3. Select LEFT VAT or RIGHT VAT for split vats.
FILTRATION  GS-15-2019  GUICK FILTER  GLEAN AND FILTER WITH OQS  DISPOSE  ADVANCED FILTER OPTIONS  Casy TOUCH	4. Select ADVANCED FILTER OPTIONS.
FILTRATION    NIGHT FILTER   OQS - FILTER   FILL VAT FROM PAN   FILL VAT FROM BULK    Casy Touch	5. Select FILL VAT FROM BULK.
FILL VAT FROM BULK?	6. Press the √ (check - YES) button to continue. If the X (NO) button is selected, the controller goes to OFF.
START FILLING? PRESS AND HOLD	7. Press and hold the button to fill the vat. The bulk oil refill pump uses a momentary switch. It only pumps if the switch is depressed.
RELEASE BUTTON WHEN FULL	8. Release the button when the vat is filled to the lower fill line.
CONTINUE FILLING?	9. Press the √ (check - YES) button to continue filling. Otherwise press the X (NO) button once the vat is full to exit and return to OFF.
	10. The controller switches off.

## 2.1.11 Pan to Waste (Bulk Only)

The pan to waste function is an option that allows bulk oil systems to pump excess oil in the pan, to the bulk oil waste tanks, without draining the existing oil in the vat.

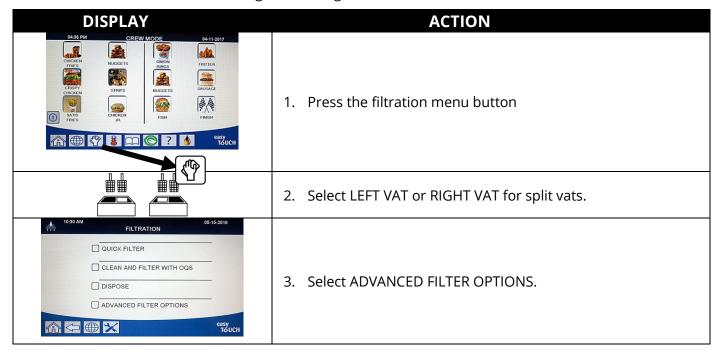


PILL VAT FROM BULK  12:07 AM  PILTRATION  OR -07-2021  OR -FILTER  OQS - FILTER  FILL VAT FROM BULK  CASY TOUCH	4. Press the down arrow.
FILTRATION  PAN TO WASTE  DRAIN TO PAN  BOIL OUT  POLISH  Case of Case of Control of Con	5. Select PAN TO WASTE.
PAN TO WASTE?	6. Press the √ (check - YES) button to continue. If the X (NO) button is selected, the user returns to the previous state. If no pan is detected, the controller displays INSERT PAN until the pan is detected.
BULK TANK FULL?	7. Press the √ (check - YES) button to acknowledge and call the bulk oil waste provider. The display returns to previous state.
OPEN DISPOSE VALVE	8. Open the left cabinet door and unlock the valve if necessary. Pull the dispose valve completely forward to start disposal.
DISPOSING	9. No action is required while the pump transfers the waste oil from the pan to the bulk oil waste tanks for four (4) minutes.
REMOVE PAN	10. Carefully pull the filter pan from the fryer.  DANGER  Open the filter pan slowly to avoid splashing of hot oil that may cause severe burns, slipping and falling.
IS PAN EMPTY?	11. If the filter pan is empty press the √ (check - YES) button. If the pan is not empty, press the X (NO) button and return to step 8.
INSERT PAN	12. Insert the filter pan.

DISPLAY	ACTION
CLOSE DISPOSE VALVE	13. Close the dispose valve by pushing the valve handle toward the rear of the fryer until it stops. Relock the valve if required by your manager.
CHCKEN STREET CHCKEN FIRST CHCK	14. The controller returns to the starting state.

#### 2.1.12 Drain to Pan

The drain to pan function drains the oil from the vat to the filter pan.

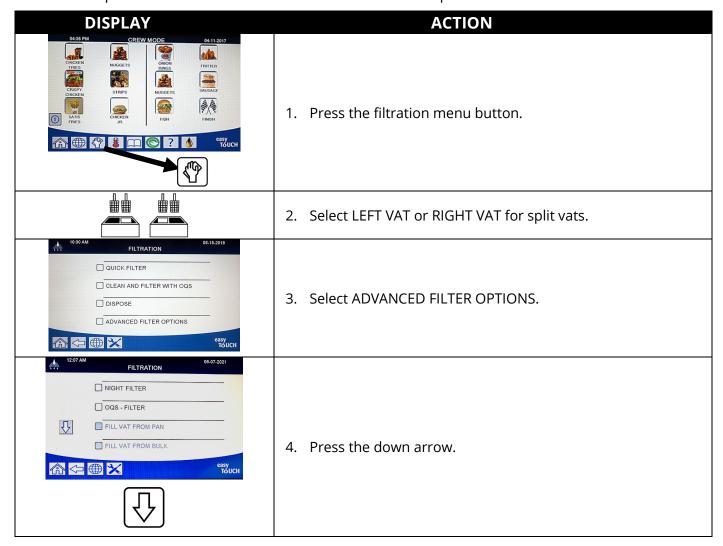

DISPLAY	ACTION
PAN TO WASTE  DRAIN TO PAN  BOIL OUT  POLISH  Casy  Casy  Touch	5. Select DRAIN TO PAN.
DRAIN NOW?	6. Press the √ (check - YES) button to continue. If the X (NO) button is selected, the controller goes to OFF.
START DRAINING	7. Press the BLUE button to start draining or the X button to cancel the function.
DRAINING	8. No action is required while the vat drains the oil into the filter pan.
VAT EMPTY?	9. Once the vat is empty, press the √ (check - YES) button to continue.
ALERT DRAIN CLOSING REMOVE	10. Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.
TOOLS	DANGER  Keep all items out of drains. Closing actuators may cause damage or injury.
	Keep all items out of drains. Closing actuators may cause damage or injury.  11. Press the √ (check - YES) button to refill the vat, otherwise
TOOLS	Keep all items out of drains. Closing actuators may cause damage or injury.
TOOLS  FILL FROM PAN?	<ul> <li>Keep all items out of drains. Closing actuators may cause damage or injury.</li> <li>11. Press the √ (check - YES) button to refill the vat, otherwise skip to step 14.</li> </ul>
FILL FROM PAN?  FILLING	<ul> <li>Keep all items out of drains. Closing actuators may cause damage or injury.</li> <li>11. Press the √ (check - YES) button to refill the vat, otherwise skip to step 14.</li> <li>12. No action is required while the vat is filling.</li> <li>13. Press the X (NO) button to run the pump again if the oil level is below the top oil level full line. Press the √ (check - YES) button once the oil level is at the top oil level full line and skip to step 17. If the vat oil level is not completely filled, check the filter pan to see if most of the oil has returned.</li> </ul>
FILL FROM PAN?  FILLING  IS FRYPOT FULL OF OIL?	<ul> <li>Keep all items out of drains. Closing actuators may cause damage or injury.</li> <li>11. Press the √ (check - YES) button to refill the vat, otherwise skip to step 14.</li> <li>12. No action is required while the vat is filling.</li> <li>13. Press the X (NO) button to run the pump again if the oil level is below the top oil level full line. Press the √ (check - YES) button once the oil level is at the top oil level full line and skip to step 17. If the vat oil level is not completely filled, check the filter pan to see if most of the oil has returned. The pan may have a small amount of oil.</li> <li>14. Carefully pull the filter pan from the fryer.</li> </ul> DANGER Open the filter pan slowly to avoid splashing of hot oil
FILL FROM PAN? FILLING  IS FRYPOT FULL OF OIL?  REMOVE PAN	<ul> <li>Keep all items out of drains. Closing actuators may cause damage or injury.</li> <li>11. Press the √ (check - YES) button to refill the vat, otherwise skip to step 14.</li> <li>12. No action is required while the vat is filling.</li> <li>13. Press the X (NO) button to run the pump again if the oil level is below the top oil level full line. Press the √ (check - YES) button once the oil level is at the top oil level full line and skip to step 17. If the vat oil level is not completely filled, check the filter pan to see if most of the oil has returned. The pan may have a small amount of oil.</li> <li>14. Carefully pull the filter pan from the fryer.</li> <li>DANGER  Open the filter pan slowly to avoid splashing of hot oil that may cause severe burns, slipping and falling.</li> <li>15. If the filter pan is empty press the √ (check - YES) button. If the pan is not empty, press the X (NO) button and return to</li> </ul>

## 2.1.13 Boil-Out or Cold Soak (Clean) for Non-Bulk Oil Systems

The clean mode is used to remove carbonized oil from the frypot. The type of clean (hot or cold) will depend on the manager settings - filter attributes - clean settings (see section 1.8).

	depend on the manager settings - filter attributes - clean settings (see section 1.6).		
DISPLAY	ACTION		
OCHECKIN  CHECKIN  SATIS  SATIS  CHECKIN  STREPS  CHECKIN  STREPS  CHECKIN  STREPS  CHECKIN  STREPS  CHECKIN  FIRST  RANGELE  SAMSAGE  FIRST  FRESH  FRESH  Casy  TOUCH	1. Press the filtration menu button.		
	2. Select LEFT VAT or RIGHT VAT for split vats.		
FILTRATION  QUICK FILTER  QUICK FILTER  CLEAN AND FILTER WITH OQS  DISPOSE  ADVANCED FILTER OPTIONS  Casy Touch	3. Select ADVANCED FILTER OPTIONS.		
FILTRATION    NIGHT FILTER   OQS - FILTER   FILL VAT FROM PAN   FILL VAT FROM BULK    Caby Touch	4. Press the down arrow.		
FILTRATION    PAN TO WASTE     DRAIN TO PAN     BOIL OUT     POLISH     Casy Touch	5. Select BOIL OUT/COLD SOAK (CLEAN).		
COLD SOAK/CLEAN NOW? or BOIL OUT NOW?	6. Press the √ (check - YES) button to continue. If the X (NO) button is selected, the user returns to the filtration menu. If no pan is detected, the controller displays INSERT PAN until the pan is detected.		
SAVING OIL?	7. Press the √ (check - YES) button if saving the oil and the oil is to be reused skip to step 9. If the X (NO) button is selected, continue to next step.		
IS OIL DISPOSED?	8. If the oil has already been disposed and the frypot is empty, press the √ (check - YES) button. If the oil has not been disposed press the X (NO) button.		

DISPLAY	ACTION
	9. Carefully pull the filter pan from the fryer. If the oil is not
REMOVE FILTER PAN	being saved, skip to step 16.
	<u> </u>
	Remove the filter pan slowly to avoid splashing of hot
	oil that may cause severe burns, slipping and falling.
IS FILTER PAN EMPTY?	10. If the oil <u>IS NOT</u> being saved and the filter pan is empty press the √ (check - YES) button and skip to step 24. If the oil <u>IS</u> being saved and the filter pan is empty, press the √ (check - YES) button and continue to next step. Press the X (NO)
INSERT FILTER PAN	button if oil is in the filter pan and continue to step 15.  11. Insert the filter pan and continue to next step.
INSERT FILTER PAIN	12. No action is required while the vat drains the oil into the
DRAINING	filter pan.
IS FRYPOT EMPTY?	13. Press the √ (check - YES) button when the frypot is empty to continue.
	14. Carefully pull the filter pan from the fryer and set aside and skip to step 24.
REMOVE FILTER PAN	<u> </u>
	Remove the filter pan slowly to avoid splashing of hot
	oil that may cause severe burns, slipping and falling.
EMPTY FILTER PAN AND START CLEAN AGAIN	15. Press the √ (check - YES) button and skip to step 48. Dispose of the oil in the filter pan by using the fill vat from pan option and then the dispose option. Once finished start the clean function again.
INSERT DISPOSAL UNIT	16. Insert the disposal unit.
	DANGER Ensure a SDU (Shortening Disposal Unit) or suitable METAL container is in place under the drain with a capacity of FOUR (4) gallons (15 liters) or more. Otherwise, oil could overflow and can cause injury.
IS DISPOSE UNIT IN PLACE?	17. Ensure the SDU or a METAL container with a capacity of FOUR gallons (15 liters) or larger is in place. Press the √ (check - YES) button to continue.
	DANGER Allow oil to cool to 100°F (38°C) before draining into an appropriate METAL container for disposal.
	DANGER  When draining oil into a disposal unit, do not fill above the maximum fill line located on the container.
DRAINING	18. No action is required while the vat drains the oil into the disposal container.
IS FRYPOT EMPTY?	19. Press the √ (check - YES) button when the frypot is empty to continue.

DISPLAY	ACTION
ALERT DRAIN CLOSING REMOVE TOOLS	20. Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.         DANGER
	Keep all items out of drains. Closing actuators may cause damage or injury.
REMOVE DISPOSAL UNIT?	21. Remove the disposal unit and press the √ (check - YES) button.
IS FILTER PAN EMPTY?	22. Press the √ (check - YES) button if the filter pan is empty and skip to step 24. Press the X (NO) button if oil is in the filter pan and continue to next step.
DISPOSE OIL IN FILTER PAN AND RESTART CLEAN AGAIN	23. Press the √ (check - YES) button and skip to step 48. Dispose of the oil in the filter pan by using the fill vat from pan option and then the dispose option. Once finished start the clean function again.
SOLUTION ADDED?	24. Fill the vat to be cleaned with water and cleaning solution mix. Press the √ (check - YES) button to start the cleaning procedure.
CLEANING or BOIL OUT	25. Scrub the vat and then let the solution soak while the cold clean or boil out timer counts down. If a boil out is selected the vat heats to 195° F (91° C) for one hour.
CLEAN DONE or BOIL OUT DONE	26. Press the √ (check - YES) button to silence the alarm.
CLEAN FILTER PAN	27. Remove the crumb basket and hold down ring. Remove the filter paper or pad and dispose. Remove the screen. Clean all the filter pan components and filter pan.
INSERT CLEANING DISPOSAL UNIT changing to IS CLEANING DISPOSAL UNIT IN PLACE?	28. Insert the cleaning disposal unit or disposal pan large enough to contain FOUR gallons (15 liters) or more under the drain and press √ (check-YES).
DRAINING	29. No action is required while the vat drains.
RINSE COMPLETE?	30. Rinse excess solution from vat. Press the √ (check - YES) button when the vat is completely rinsed.
IS SOLUTION REMOVED?	31. Ensure the solution is removed and press the √ (check - YES) button when the vat is completely rinsed.
ALERT DRAIN CLOSING REMOVE TOOLS	32. Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.
	DANGER Keep all items out of drains. Closing actuators may cause damage or injury.
REMOVE THE CLEANING SOLUTION UNIT	33. Remove the cleaning solution unit or disposal pan and press the √ (check - YES) button when finished. If oil was saved, skip to step 38.
IS FILTER PAN CLEAN?	34. Ensure the filter pan and components are clean. Press the √ (check - YES) button when complete. Pressing the X (NO) button if the filter pan is not clean prompts to Clean Filter Pan. Press the √ (check - YES) button when the filter pan is clean and continue to next step.

DISPLAY	ACTION
IS FRYPOT AND FILTER PAN DRY?	35. Ensure the frypot, filter pan and components are completely dry. Press the √ (check - YES) button when finished.  DANGER  Ensure that the frypot and filter pan are completely dry and free of water before filling with oil. Failure to do so will cause splattering of hot liquid when the oil is heated to cooking temperature.
INSERT FILTER PAN	36. Reinstall screen, filter paper or pad, hold down ring and crumb basket removed in step 27. Insert the filter pan.
MANUALLY FILL VAT	37. Carefully pour oil into the vat until it reaches the low-level fill line in the fryer. Press the √ (check - YES) button once the vat is full and skip to step 48.
IS FRYPOT DRY?	38. Ensure the frypot is completely dry. Press the √ (check - YES) button when finished.
	DANGER Ensure that the frypot is completely dry and free of water before filling with oil. Failure to do so will cause splattering of hot liquid when the oil is heated to cooking temperature.
RETURNING SAVED OIL?	39. Press the √ (check - YES) button to continue returning the saved oil.
INSERT FILTER PAN	40. Insert the filter pan with the saved oil removed in step 14.
FILL FRYPOT FROM FILTER PAN?	41. Press the √ (check - YES) button to fill the frypot.
FILLING	42. No action is required while the vat is filling.
IS FRYPOT FULL OF OIL?	43. Press the X (NO) button to run the pump again if the oil level is below the top oil level full line. Press the √ (check - YES) button once the oil level is at the top oil level full line. If the vat oil level is not completely filled, check the filter pan to see if most of the oil has returned. The pan may have a small amount of oil.
REMOVE FILTER PAN	44. Carefully pull the filter pan from the fryer.  DANGER  Remove the filter pan slowly to avoid splashing of hot oil that may cause severe burns, slipping and falling.
CLEAN FILTER PAN	45. Remove the crumb basket and hold down ring. Remove the filter paper or pad and dispose. Remove the screen. Clean all the filter pan components and filter pan.
IS FILTER PAN DRY?	46. Ensure the filter pan and components are completely dry.


DISPLAY	ACTION	
	Press the √ (check - YES) button when finished.	
	<b>⚠</b> DANGER	
	Ensure that the filter pan is completely dry and free of water before filling with oil. Failure to do so will cause splattering of hot liquid when the oil is heated to cooking temperature.	
INSERT FILTER PAN	47. Reinstall screen, filter paper or pad, hold down ring and crumb basket removed in step 45. Insert the filter pan.	
0	48. The controller switches off.	

### 2.1.14 Boil-Out or Cold Soak (Clean) for Bulk, Wand Front, and Wand External Dispose Waste Oil Systems

The clean mode is used to remove carbonized oil from the frypot. The type of clean (hot or cold) will depend on the manager settings - filter attributes - clean settings (see section 1.8).

#### **▲ WARNING**

Ensure filter paper or pad is in place prior to draining or disposing of oil. Failure to insert filter paper or pad may result in clogged lines and/or pumps.

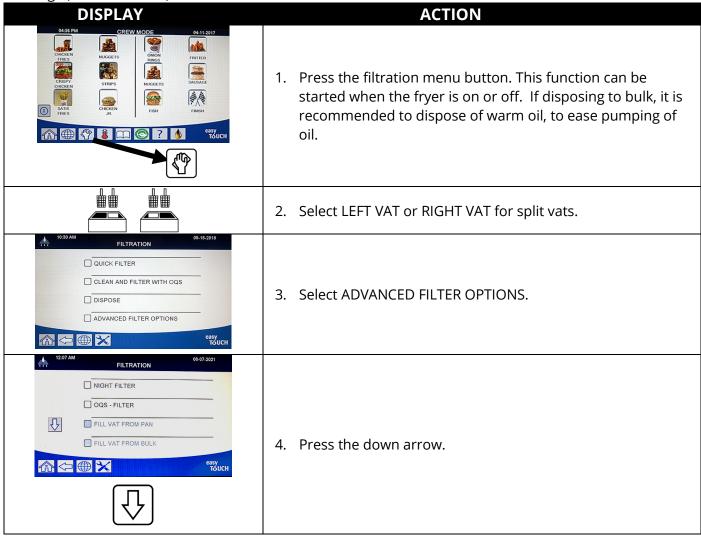

DISPLAY	ACTION		
PAN TO WASTE  DRAIN TO PAN  BOIL OUT  POLISH  Casy Casy Touch	5. Select BOIL OUT/COLD SOAK (CLEAN).		
COLD SOAK/CLEAN NOW? or BOIL OUT NOW?	6. Press the √ (check - YES) button to continue. If the X (NO) button is selected, the user returns to the filtration menu. If no pan is detected, the controller displays INSERT PAN until the pan is detected.		
SAVING OIL?	7. Press the √ (check - YES) button if saving the oil and the oil is to be reused skip to step 10. If the X (NO) button is selected, continue to next step.		
IS OIL DISPOSED?	8. If the oil <u>HAS</u> already been disposed and the frypot is empty, press the √ (check - YES) button and skip to step 10. If the oil <u>HAS NOT</u> been disposed, and is a bulk or front wand dispose, press the X (NO) button and skip to step 15. If the oil <u>HAS NOT</u> been disposed, and is an external wand dispose, press the X (NO) button and skip to step 24. If disposing to bulk and the bulk tank is full, proceed to next step.		
BULK TANK FULL?	<ol> <li>This message is only displayed if the bulk tank on bulk waste systems is full. Press the √ (check - YES) button to acknowledge and call the bulk oil waste provider. The display returns to OFF.</li> </ol>		
REMOVE FILTER PAN	10. Carefully pull the filter pan from the fryer.  DANGER  Remove the filter pan slowly to avoid splashing of hot oil that may cause severe burns, slipping and falling.		
IS FILTER PAN EMPTY?	11. If the oil <b>IS NOT</b> being saved, the filter pan is empty, and a bulk or front wand dispose, press the √ (check - YES) button and skip to step 37. If the oil <b>IS NOT</b> being saved, the filter pan is empty, and an external wand dispose, press the √ (check - YES) button and skip to step 24. If the oil <b>IS</b> being saved and the filter pan is empty, press the √ (check - YES) button and continue to next step. Press the X (NO) button if oil is in the filter pan and continue to step 13.		
INSERT FILTER PAN	12. Push the filter pan fully into place and continue to step 14.		
EMPTY FILTER PAN or EMPTY FILTER PAN AND START CLEAN AGAIN	13. Press the √ (check - YES) button and skip to step 65. Dispose of the oil in the filter pan by using the fill vat from pan option and then the dispose option. Once finished start the clean function again.		
DRAIN TO FILTER PAN?	14. Press the √ (check - YES) button to drain the oil to the filter pan.		

DISPLAY	ACTION	
DRAINING	15. No action required as oil drains into filter pan.	
IS FRYPOT EMPTY?	16. Press the √ (check - YES) button when the frypot is empty to continue.  If the oil <u>IS NOT</u> being saved and if disposing to bulk, skip to step 26. If the oil <u>IS NOT</u> being saved and if using front wand dispose, proceed to the next step. If the oil <u>IS</u> being saved, proceed to step 18.	
SCRUB FRYPOT COMPLETE?	17. Clean the frypot with a scrub brush and when complete press the √ (check - YES) button to continue.	
ALERT DRAIN CLOSING REMOVE TOOLS	18. Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain. If the oil IS being saved, proceed to step 29.  A DANGER  Keep all items out of drains. Closing actuators may cause damage or injury.	
POSITION DISPOSAL UNIT	19. Position the disposal unit in front of the fryer and press the √ (check - YES) button to continue.	
IS DISPOSE WAND AND DISPOSAL UNIT IN PLACE?	20. Attach the dispose wand by pulling back on the female end collar and pushing firmly onto the male disconnect. Once in place, release the disconnect and ensure that the quick disconnect is fully locked into place. Ensure the disposal unit is in place, in front of the fryer and press the √ (check - YES) button to continue.	
	DANGER  When draining oil into an appropriate METAL container, make sure the container will hold at least FOUR gallons (15 liters) or more, otherwise hot liquid could overflow and cause injury.	
OPEN DISPOSE VALVE PRESS AND HOLD THE FRONT WAND SWITCH	21. Open the left cabinet door and unlock the valve if necessary. Pull the dispose valve completely forward to start disposal. If using front dispose continue to next step.	

22. The wand front dispose pump uses a momentary switch. It
only pumps if the switch is depressed. Ensure the wand is in place prior to pressing and holding the dispose switch to start disposing. Continue to press and hold the switch until the pan is empty. When the pan is empty, release the switch to stop the pump.
23. The oil transfers from the filter pan to the disposal unit.  When the pan is empty, release the switch to stop the pump. Close the dispose valve when full by pushing the valve handle toward the rear of the fryer until it stops.  Relock the valve if required by your manager. Skip to step 29.
24. Ensure the external wand disposal system is in place and press the √ (check - YES) button to continue.
25. Use the external wand to pump oil from the frypot to the disposal unit. Press √ (check - YES) button when complete and proceed to step 27.
26. Open the left cabinet door and unlock the valve if necessary. Pull the dispose valve completely forward to start disposal and continue to next step.
27. No action is required while the pump transfers the waste oil from the pan to the bulk oil waste tanks for four (4) minutes or wand external system for two (2) minutes. If disposing to bulk or front wand skip to step 29. If disposing to external wand proceed to next step.
28. Once the frypot is empty, press √ (check - YES) button when complete and proceed to the next step.
29. Carefully pull the filter pan from the fryer. If oil <b>IS NOT</b> being saved proceed to next step. If the oil <b>IS</b> being saved and the filter pan if full of oil, remove the filter pan from the fryer and skip to step 37.  DANGER  Open the filter pan slowly to avoid splashing of hot oil that may cause severe burns, slipping and falling.


DISPLAY	ACTION
IS FILTER PAN EMPTY?	30. If the filter pan <u>IS</u> empty press the √ (check - YES) button.  If disposing to bulk skip to step 35. If using front wand dispose continue to step 33. If disposing to external wand skip to step 32. If the filter pan <u>IS NOT</u> empty, press the X (NO) button; return to step 27 for bulk; step 21 for front dispose; or continue to next step for external wand.
USE WAND TO EXTRACT OIL FROM THE FILTER PAN	31. Use the external wand to pump oil from the filter pan to the disposal unit. Press √ (check - YES) button when complete and proceed to the next step.
REMOVE WAND DISPOSAL SYSTEM	32. Remove the external wand disposal system and proceed to next step.
INSERT FILTER PAN	33. Insert the filter pan. If disposing to bulk or using an external wand, skip to step 37. If using front wand dispose continue to next step.
REMOVE DISPOSAL UNIT AND DETACH WAND	34. Disconnect the disposal wand and remove the disposal unit and press √ (check - YES) button when complete and skip to step 37.
CLOSE DISPOSE VALVE	35. Close the dispose valve by pushing the valve handle toward the rear of the fryer until it stops. Relock the valve if required by your manager.
ALERT DRAIN CLOSING REMOVE TOOLS	36. Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.   A DANGER  Keep all items out of drains. Closing actuators may cause damage or injury.
SOLUTION ADDED?	37. Fill the vat to be cleaned with water and cleaning solution mix. Press the √ (check – YES) button to start the cleaning procedure.
CLEANING or BOIL OUT	38. Scrub the vat and then let the solution soak while the cold clean or boil out timer counts down. If a boil out is selected the vat heats to 195° F (91° C) for one hour.
CLEAN DONE or BOIL OUT DONE	39. Press the √ (check - YES) button to silence the alarm. If saving oil skip to step 41.
CLEAN FILTER PAN	40. Remove the crumb basket and hold down ring. Remove the filter paper or pad and dispose. Remove the screen. Clean all the filter pan components and filter pan.
INSERT CLEANING DISPOSAL UNIT changing to IS CLEANING DISPOSAL UNIT IN PLACE?	41. Insert the cleaning disposal unit or disposal pan large enough to contain FOUR gallons (15 liters) or more under the drain and press √ (check-YES).
DRAINING	42. No action is required while the vat drains.
RINSE COMPLETE?	43. Rinse excess solution from vat. Press the √ (check - YES) button when the vat is completely rinsed.

DISPLAY	ACTION	
IS SOLUTION REMOVED?	44. Ensure the solution is removed and press the √ (check - YES) button when the vat is completely rinsed.	
ALERT DRAIN CLOSING REMOVE TOOLS	45. Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.   DANGER  Keep all items out of drains. Closing actuators may cause damage or injury.	
REMOVE THE CLEANING SOLUTION UNIT	46. Remove cleaning solution unit or disposal pan and press the √ (check - YES) button when finished. If oil was saved, skip to step 50.	
IS FILTER PAN CLEAN?	47. Ensure the filter pan and components are clean. Press the √ (check - YES) button when complete. Pressing the X (NO) button if the filter pan is not clean prompts to Clean Filter Pan. Press once filter pan is clean and continue to next step.	
	48. Ensure the frypot, filter pan and components are completely dry. Press the √ (check - YES) button when finished.	
IS FRYPOT AND FILTER PAN DRY?	DANGER Ensure that the frypot and filter pan are completely dry and free of water before filling with oil. Failure to do so will cause splattering of hot liquid when the oil is heated to cooking temperature.	
INSERT FILTER PAN	49. Reinstall screen, filter paper or pad, hold down ring and crumb basket. Insert the filter pan. If using a JIB fresh oil system skip to step 64. If using a bulk fresh oil system type, skip to step 60.	
IS FRYPOT DRY?	50. Dry the frypot, ensuring it is completely dry. Press the √ (check - YES) button when finished.	
	DANGER  Ensure that the frypot is completely dry and free of water before filling with oil. Failure to do so will cause splattering of hot liquid when the oil is heated to cooking temperature.	
RETURNING SAVED OIL?	51. Press the √ (check - YES) button to continue returning the saved oil.	
INSERT FILTER PAN	52. Insert the filter pan with the saved oil removed in step 29.	
FILL FRYPOT FROM FILTER PAN?	53. Press the √ (check - YES) button to fill the frypot.	
FILLING	54. No action is required while the vat is filling.	
IS FRYPOT FULL OF OIL?	55. Press the X (NO) button to return to previous step and run the pump again, if the oil level is below the bottom oil level line. Press the √ (check - YES) button once the oil level is at or above the bottom oil level line. If the frypot oil level is not at or above the bottom oil level line, check the filter pan to see if most of the oil has returned. The pan may have a small amount of remaining oil.	

DISPLAY	ACTION
REMOVE FILTER PAN	56. Carefully pull the filter pan from the fryer.  DANGER  Remove the filter pan slowly to avoid splashing of hot oil that may cause severe burns, slipping and falling.
CLEAN FILTER PAN	57. Remove the crumb basket and hold down ring. Remove the filter paper or pad and dispose. Remove the screen. Clean all the filter pan components and filter pan. Press the √ (check - YES) button when finished.
IS FILTER PAN DRY?	58. Ensure the filter pan and components are completely dry.  Press the √ (check - YES) button when finished.
	DANGER  Ensure that the filter pan is completely dry and free of water before filling with oil. Failure to do so will cause splattering of hot liquid when the oil is heated to cooking temperature.
INSERT FILTER PAN	59. Reinstall screen, filter paper or pad, hold down ring and crumb basket removed in step 57. Insert the filter pan and skip to step 65.
FILL VAT FROM BULK?	60. Press the √ (check - YES) button to continue. If the X (NO) button is selected, the user returns to the filtration menu.
START FILLING? PRESS AND HOLD	61. Press and hold the button to fill the vat. The bulk oil refill pump uses a momentary switch. It only pumps if the switch is depressed.
RELEASE BUTTON WHEN FULL	62. Release the button when the vat is filled to the lower fill line.
CONTINUE FILLING?	63. Press the √ (check - YES) button to continue filling.  Otherwise press the X (NO) button once the vat is full, to exit and return to OFF.
MANUALLY FILL VAT	64. Carefully pour oil into the vat until it reaches the low-level fill line in the fryer. Press the √ (check - YES) button once the vat is full.
<u>()</u>	65. The controller switches off.

### 2.1.15 Polish

The polish mode is used as an extended filtration to remove impurities from the oil.

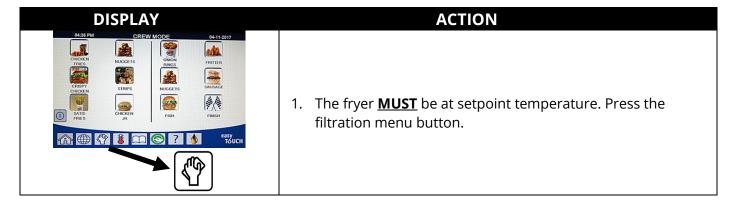

DISPLAY	ACTION
	2. Select LEFT VAT or RIGHT VAT for split vats.
FILTRATION  GUICK FILTER  GLEAN AND FILTER WITH OQS  DISPOSE  ADVANCED FILTER OPTIONS  Casy Touch	3. Select ADVANCED FILTER OPTIONS.
FILTRATION    NIGHT FILTER   OQS - FILTER   FILL VAT FROM PAN   FILL VAT FROM BULK    Casy Touch	4. Press the down arrow.
PAN TO WASTE  DRAIN TO PAN  BOIL OUT  POLISH  CSS.07.2021  CSS.07.2021  CSS.07.2021  CSS.07.2021  CSS.07.2021	5. Select POLISH.
POLISH?	6. Press the √ (check - YES) button to continue. If the X (NO) button is selected, the user returns to the previous state.
SKIM DEBRIS FROM VAT	<ol> <li>Skim the crumbs from the oil with the skimmer using a front to back motion, removing as many crumbs as possible from each vat. This is critical to optimizing usable oil life and quality of the oil. Press the √ (check - YES) button when complete. Press the X button to cancel the filter.</li> </ol>
START POLISH	8. Press the BLUE button to start a polish or the X button to cancel the function. If no pan is detected, the controller displays INSERT PAN until the pan is detected.
DRAINING	9. No action required as oil drains into filter pan.
POLISHING	10. No action required while the drain and return valves are open and oil is pumped through the frypot for an extended period of time.
ALERT DRAIN CLOSING REMOVE TOOLS	11. Ensure that all tools are removed from the frypot prior to the drain closing to prevent damage to the drain.  DANGER  Keep all items out of drains. Closing actuators may cause damage or injury.
FILLING	12. No action required as the vat refills.
PREHEAT START	<ul><li>13. No action required as the fryer heats to setpoint.</li><li>14. Fryer is ready for use. Displayed once fryer reaches setpoint.</li></ul>

# CHAPTER 3: FILTERQUICK™ FQ4000 OPERATOR TROUBLESHOOTING

#### 3.1 Introduction

This chapter provides an easy reference guide to some of the common problems that may occur during the operation of your equipment. The troubleshooting guides that follow are intended to help you correct, or at least accurately diagnose, problems with your equipment. Although the chapter covers the most common problems reported, you may encounter problems that are not covered. In such instances, the Frymaster Technical Services staff will make every effort to help you identify and resolve the problem.

When troubleshooting a problem, always use a process of elimination starting with the simplest solution and working through to the most complex. Most importantly, always try to establish a clear idea of why a problem has occurred. Part of your corrective action involves taking steps to ensure that it doesn't happen again. If a controller malfunctions because of a poor connection, check all other connections. If a fuse continues to blow, find out why. Always keep in mind that failure of a small component may often be indicative of potential failure or incorrect functioning of a more important component or system.

If you are in doubt as to the proper action to take, do not hesitate to call the Frymaster Technical Service Department or your local Frymaster Factory Authorized Servicer for assistance.

### Before calling a servicer or the Frymaster HOTLINE (1-800-551-8633):

- Verify that electrical cords are plugged in and that circuit breakers are on.
- Verify that gas line quick-disconnects are properly connected.
- Verify that any gas line cutoff valves are open.
- Verify that frypot drain valves are fully closed.
- Have your fryer's model and serial numbers ready to give the technician assisting you.



Hot oil will cause severe burns. Never attempt to move this appliance when filled with hot oil or to transfer hot oil from one container to another.



This equipment should be unplugged when servicing, except when electrical circuit tests are required. Use extreme care when performing such tests.

This appliance may have more than one electrical power supply connection point. Disconnect all power cords before servicing.

Inspection, testing, and repair of electrical components should be performed by an authorized service agent only.

## 3.2 Troubleshooting

### 3.2.1 Error Messages and Display Problems

PROBLEM	PROBABLE CAUSES	CORRECTIVE ACTION
No display on the controller.	A. No power to fryer.     B. Failed controller or other component	<ul><li>A. Verify that the fryer is plugged in and that the circuit breaker is not tripped.</li><li>B. Call your FAS for assistance.</li></ul>
FQ4000 displays IS VAT FULL? YES NO after a filtration.	<ul> <li>A. Normal operation during most at the beginning or end of most filtration functions.</li> <li>B. If the display appears many times during a filter it could be an indication of slow oil return.</li> </ul>	<ul> <li>A. Ensure the vat is full of oil and press the √ button.</li> <li>B. See section 2.3 troubleshooting in the FQx30-T IO Manual –Filter Pump runs, but oil return is very slow.</li> </ul>
FQ4000 displays IS DRAIN CLEAR?	Drain is clogged and oil failed to drain.	Clear drain with Fryers Friend and press   √ button. Filtration will resume.
FQ4000 displays CHANGE FILTER PAPER/PAD?	Filter error has occurred, filter paper/pad clogged, 25-hour filter paper/pad change prompt has occurred or change filter paper/pad was ignored on a prior prompt.	Change the filter paper/pad and ensure the filter pan has been removed from the fryer for a minimum of 30 seconds. Do <b>NOT</b> ignore <b>CHANGE FILTER PAPER/PAD</b> prompts.
Controller locks up.	Controller error.	Remove and restore power to the controller. If problem persists, call your FAS for assistance.
FQ4000 displays MISCONFIGURED ENERGY TYPE	Energy type in fryer setup is incorrect.	Ensure that the fryer is configured properly for the correct energy type.
FQ4000 displays VAT ID CONNECTOR NOT CONNECTED	Controller locator missing or disconnected.	Ensure the 6-pin locator is connected to rear of controller and it properly grounded in control box.
FQ4000 displays E19 or E28 HEATING FAILURE.	Gas valve off, failed controller, failed transformer, contactor or open highlimit thermostat.	It is normal for this message to appear during startup if the lines have air in them. Check that the gas valve is on. If the gas is on and it continues shut the fryer down and call your FAS for assistance.
FQ4000 display shows HOT-HI-1.	Frypot temperature is more than 410°F (210°C) or, in CE countries, 395°F (202°C).	Shut the fryer down immediately and call your FAS for assistance.

PROBLEM	PROBABLE CAUSES	CORRECTIVE ACTION
FQ4000 displays RECOVERY FAULT and alarm sounds.	Recovery time exceeded maximum time limit.	Clear error and silence the alarm by pressing the check √ button.  Maximum recovery time for gas is 3:15, electric is 1:40. If the error continues call your FAS for assistance.
FQ4000 display is in wrong temperature scale (Fahrenheit or Celsius).	Incorrect display option programmed.	Toggle between F° to C° by entering Manager settings, temperature and toggling the temperature scale. Turn the controller on to check temperature. If the desired scale is not displayed, repeat.
FQ4000 displays HELP HI-2 or HIGH LIMIT FAILURE DISCONNECT POWER.	Failed high limit	Shut the fryer down immediately and call your FAS for assistance.
FQ4000 displays TEMPRATURE PROBE FAILURE.	Problem with the temperature measuring circuitry including the probe or damaged controller wiring harness or connector.	Shut the fryer down and call your FAS for assistance.
FQ4000 displays SERVICE REQUIRED followed by an error message.	An error has occurred which requires a service technician.	Press X to continue cooking and call your FAS for assistance. In some cases, cooking may not be allowed.
FQ4000 displays NO MENU GROUP AVAILABLE FOR SELECTION	All menu groups have been deleted. NOTE: ALL RECIPES is not a group that can be used to cook recipes.	Create a new MENU group. Once a new menu is created, add recipes to the group (see section 1.10).

3.2.2 Troubleshooting the Auto Filtration

PROBLEM	PROBABLE CAUSES	CORRECTIVE ACTION
Fryer filters after each cook cycle.	Filter after setting incorrect.	Change or overwrite the filter after setting by re-entering the filter after value in Manager Settings, Filter Attributes in section 1.8.
CLEAN AND FILTER won't start.	Temperature too low.	Ensure fryer is at setpoint before starting Clean and Filter.
FQ4000 display shows FILTER BUSY.	<ul><li>A. Another filtration cycle or filter pad change is still in process.</li><li>B. Filter interface board has not cleared checking system.</li></ul>	<ul><li>A. Wait until the previous filtration cycle ends to start another filtration cycle. Change filter pad if prompted.</li><li>B. Wait 15 minutes and try again.</li></ul>

PROBLEM	PROBABLE CAUSES	CORRECTIVE ACTION
FQ4000 displays INSERT PAN.	<ul><li>A. Filter pan is not fully set into fryer.</li><li>B. Missing filter pan magnet.</li><li>C. Defective filter pan switch.</li></ul>	<ul> <li>A. Pull filter pan out and fully reinsert into fryer. Ensure controller does not display P.</li> <li>B. Ensure the filter pan magnet is in place and replace if missing.</li> <li>C. If the filter pan magnet is fully against the switch and controller continues to display INSERT PAN, switch is possibly defective.</li> </ul>
Auto filtration won't start.	<ul> <li>A. Oil level too low.</li> <li>B. Oil temperature is too low.</li> <li>C. Filter Pan out.</li> <li>D. Filtration in recipe settings is set to OFF.</li> <li>E. Filter relay has failed.</li> </ul>	<ul> <li>A. Ensure oil level is at the top oil fill line (at the top oil level sensor).</li> <li>B. Ensure the oil temperature is at setpoint.</li> <li>C. Ensure controller does not display P. Ensure the filter pan is fully seated into fryer. Power cycle the fryer.</li> <li>D. Set filtration in recipes to ON.</li> <li>E. Call your FAS for assistance.</li> </ul>

### 3.2.3 Filter Busy

When **FILTER BUSY** is displayed the filter interface board is waiting on another vat to be filtered or waiting on another function to finish. Wait 15 minutes to see if problem is corrected. If not, call your local FAS.

### 3.2.4 OQS (Oil Quality Sensor) Troubleshooting

Problem	Corrective Action	
No TPM results displayed.	<ul> <li>Check the following items and perform another OQS filter.</li> <li>Ensure the vat is at setpoint temperature.</li> <li>Inspect the pre-screen filter and ensure it is screwed in tightly with the wrench.</li> <li>Inspect the O-rings on the filter pan and ensure they are both present and that they are not missing, cracked or worn. If so replace them.</li> <li>Ensure the filter paper is not clogged and clean filter paper is used. Did the vat refill the first time for the previous filter? If not change the filter paper.</li> </ul>	

**3.2.5 Error Log Codes**See section 1.12.2.1 for instructions to access the Error Log.

Code	ERROR MESSAGE	EXPLANATION
E13	TEMPERATURE PROBE FAILURE	TEMP Probe reading out of range. Call
		service.
E16	HIGH LIMIT 1 EXCEEDED	High limit temperature is past more than
		410°F (210°C), or in CE countries, 395°F
		(202°C)
E17	HIGH LIMIT 2 EXCEEDED	High limit switch has opened. Press high
		limit switch reset under control box if
		applicable.
E18	HIGH LIMIT PROBLEM	Vat temperature exceeds 460°F (238°C) and
	DISCONNECT POWER	the high limit has failed to open.
		Immediately disconnect power to the fryer
		and call service.
E19	HEATING FAILURE – XXX F or XXX C	Heating Control latch circuit failed.
		Heat Contactor failed to latch.
E25	HEATING FAILURE - BLOWER	The air pressure switch(s) failed to close.
E27	HEATING FAILURE - PRESSURE SWITCH - CALL	The air pressure switch has failed closed.
	SERVICE	
E28	HEATING FAILURE – XXX F or XXX C	The fryer has failed to ignite and has locked
		out the ignition module.
E29	TOP OFF PROBE FAILURE - CALL SERVICE	ATO RTD reading out of range. Call service
E32	DRAIN VALVE NOT OPEN - FILTRATION AND	Drain valve was trying to open and
	TOP OFF DISABLED - CALL SERVICE	confirmation is missing
E33	DRAIN VALVE NOT CLOSED - FILTRATION AND	Drain valve was trying to close and
	TOP OFF DISABLED - CALL SERVICE	confirmation is missing
E34	RETURN VALVE NOT OPEN - FILTRATION AND	Return valve or Right valve (multi-return
	TOP OFF DISABLED - CALL SERVICE or RIGHT	valve systems) was trying to open and
	VALVE NOT OPEN for multi- return valve	confirmation is missing
	systems.	
E35	RETURN VALVE NOT CLOSED - FILTRATION	Return valve or Right valve (multi-return
	AND TOP OFF DISABLED - CALL SERVICE or	valve systems) was trying to close and
	RIGHT VALVE NOT CLOSED for multi- return	confirmation is missing
	valve systems.	
E36	VALVE INTERFACE BOARD FAILURE -	Valve Interface Board connections lost or
	FILTRATION AND TOP OFF DISABLED - CALL	board failure. Call service.
F27	SERVICE	ALE DED gooding out of goods. Call consider
E37	AUTOMATIC INTERMITTENT FILTRATION	AIF RTD reading out of range. Call service.
	PROBE FAILURE - FILTRATION DISABLED - CALL	
E20	SERVICE	25 hour timer has evalved as distribites
E39	CHANGE FILTER PAD	25-hour timer has expired or dirty filter
		logic has activated. Change the filter paper
E // 1	OIL IN DAN EDDOD	or pad.
E41	OIL IN PAN ERROR	The system detects that oil may be present
		in the filter pan.

Code	ERROR MESSAGE	EXPLANATION
E42	CLOGGED DRAIN (Gas)	Vat did not empty during filtration. Ensure
		the drain is not clogged and follow
		prompts.
E43	OIL SENSOR FAILURE - CALL SERVICE	Oil level sensor may have failed. Call
		service.
E44	RECOVERY FAULT	Recovery time exceeded maximum time
		limit.
E45	RECOVERY FAULT – CALL SERVICE	Recovery time exceeded maximum time
		limit for two or more cycles. Call service.
E46	SYSTEM INTERFACE BOARD 1 MISSING - CALL	SIB board 1 connection lost or board
	SERVICE	failure. Call service.
E51	DUPLICATE BOARD ID - CALL SERVICE	Two or more controllers have the same
		location ID. Call service.
E52	USER INTERFACE CONTROLLER ERROR - CALL	The controller has an unknown error. Call
	SERVICE	service.
E53	CAN BUS ERROR - CALL SERVICE	Communications are lost between boards.
		Call service.
E54	USB ERROR	USB connection lost during an update.
E55	SYSTEM INTERFACE BOARD 2 MISSING - CALL	SIB board 2 connection lost or board
	SERVICE	failure. Call service.
	AMOGONIFICURED ENERGY TYPE	71.6
E61	MISCONFIGURED ENERGY TYPE	The fryer is configured for the incorrect
F.C.2	VAT NOT HEATING CHECK ENERGY COURSE	energy type. Call service.
E62	VAT NOT HEATING – CHECK ENERGY SOURCE – XXXF OR XXXC	The vat is not heating properly.
E63	RATE OF RISE	Rate of rise error occurred during a
	TOTAL OF MISE	recovery test. Ensure the oil level is at the
		bottom oil level when cold and at the top
		oil level line when at setpoint. On electric
		fryers ensure the probe is not touching the
		elements.
E64	FILTRATION INTERFACE BOARD FAILURE -	Filtration Interface Board connections lost
	FILTRATION AND TOP OFF DISABLED - CALL	or board failure. Call service.
	SERVICE	
E65	CLEAN OIB SENSOR – XXX F OR XXX C - CALL	Gas -The oil is back sensor or float switch
	SERVICE or CLEAN FLOAT SWITCH	does not detect oil. Clean optional oil
		sensor or float switch.
E66	DRAIN VALVE OPEN – XXXF OR XXXC	Drain valve is opened during cooking.
E67	SYSTEM INTERFACE BOARD NOT CONFIGURED	Controller is turned on when the SIB board
	- CALL SERVICE	is not configured. Call service.
E68	OIB FUSE TRIPPED – CALL SERVICE	The VIB board OIB fuse has tripped and
		didn't reset. Call service.
E69	RECIPES NOT AVAILABLE – CALL SERVICE	The controller has not been programmed
		with product recipes. Replace controller
		with factory programmed controller.

Code	ERROR MESSAGE	EXPLANATION
E70	OQS TEMP HIGH	Oil temperature is too high for a valid OQS
		reading. Filter at a temperature between
		300°F (149°C) and 375°F (191°C).
E71	OQS TEMP LOW	Oil temperature is too low for a valid OQS
		reading. Filter at a temperature between
F70	TRAIL DANIES LOW	300°F (149°C) and 375°F (191°C).
E72	TPM RANGE LOW	The TPM is too low for a valid OQS reading.
		This may also be seen with fresh new oil. The incorrect oil type may be selected in
		the setup menu. The sensor may not be
		calibrated for the oil type. See oil type chart
		in instruction document 8197316. If issue
		continues contact a FAS.
E73	TPM RANGE HIGH	The TPM reading is too high for a valid OQS
		reading. Dispose the oil.
E74	OQS ERROR	The OQS has an internal error. If issue
		continues contact a FAS.
E75	OQS AIR ERROR	The OQS is detecting air in the oil. Check
		the O-rings and check/tighten prescreen
		filter to ensure no air is entering the OQS sensor. If issue continues contact a FAS.
E76	OQS ERROR	The OQS sensor has a communication
L/0	OQ3 LKKOK	error. Check connections to the OQS
		sensor. Power cycle the entire fryer battery.
		If issue continues contact a FAS.
E81	SAFE MODE FAILURE ERROR	The system has detected the fryer is not
		heating properly due to low oil conditions.
		Ensure the fryer has oil to the bottom fill
		line or higher. If not, add oil to the bottom
		fill line. If issue continues contact a FAS.
E82	LOW OIL DETECTED	This is only visible in the cloud. It's not
		visible on the UI. The vat doesn't have
		enough oil to cover the AIF/ATO probes. Fill the vat with oil.
E83	TOP OFF EMPTY	This is only visible in the cloud. It's not
		visible on the UI. The JIB is out of oil.
		Replace the JIB and top off the vat.
E85	LEFT RETURN VALVE or LEFT VALVE NOT OPEN	Left return valve was trying to open, and
	VALVE NOT OPE - FILTRATION AND TOP OFF	confirmation is missing
	DISABLED - CALL SERVICE	
E86	LEFT RETURN VALVE or LEFT VALVE NOT	Left Return valve was trying to close, and
	CLOSED - FILTRATION AND TOP OFF DISABLED	confirmation is missing
	- CALL SERVICE	Bill a la contract
E87	RIGHT RETURN VALVE or CENTRAL VALVE NOT	Right return valve or Central Valve was
	OPEN - FILTRATION AND TOP OFF DISABLED - CALL SERVICE	trying to open, and confirmation is missing
	CALL SERVICE	

Code	ERROR MESSAGE	EXPLANATION
E88	RIGHT RETURN VALVE or CENTRAL VALVE NOT	Right return valve or Central Valve was
	CLOSED - FILTRATION AND TOP OFF DISABLED	trying to close, and confirmation is missing
	- CALL SERVICE	



800-551-8633 318-865-1711

<u>WWW.FRYMASTER.COM</u> EMAIL: <u>FRYSERVICE@WELBILT.COM</u>



Welbilt offers fully-integrated kitchen systems. Welbilt's portfolio of award-winning brands includes Cleveland", Convotherm, Crystal Tips, Dean, Delfield, Fabristeel, Frymaster, Garland, Inducs, Koldtech, Kolpak, Lincoln, McCann's", Merco, Merrychef, Multiplex, RDI, SerVend", SunFire, U.S. Range", and WMaxx". Supported by service brands: FitKitchen, kitchen systems; and KitchenConnect, cloud-based open platform.

Bringing innovation to the table · welbilt.com

©2024 Frymaster LLC. except where explicitly stated otherwise. All rights reserved. Continuing product improvement may necessitate change of specifications without notice.