

FQ4000 FQ80/100/120 Basic Operation



Turn Fryer ON or OFF

Press and hold button 3 seconds to switch on.

Press button to switch off.



Changing a Product

Press and hold the product button to change. The outline of the button changes from gray to red and then to solid red. Select another product.

 


Start a Cook Cycle

Press the product button to start a cook. The timer will start counting down.

Cancel a Cook Cycle

Press the RED "X" button next to the desired product.

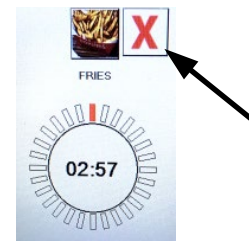


Cancel Shake/Stir Alarm

Shake or stir the product and press button under active display if not set to auto cancel.



Cancel an end of Cook (REMOVE) Alarm

 Press REMOVE or CHECK button under active display.

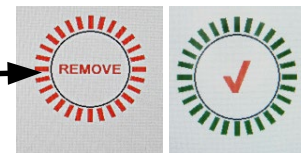

Check Temperature and Setpoint

Press temperature button. Displays actual temperature and setpoint temperature.



Home Button
(Settings, Recipes and
Information Statistics)

Information
Statistics

Change Language Filter Menu Temp Menu Energy Saver OQS (TPM)



Frymaster



FRY_QR_8197647 01/2024

Cooking with the FQ4000

 
- 1** A product is shown in display. Choose a different product press and hold the product button to change. The outline of the button changes from green to red and then to solid red. Select another product.




- 2** Press the product button to begin the cook cycle.




- 3** Display changes to timer with remaining cook time.



 
- 4** SHAKE alternating with basket is displayed when it is time to shake the fry basket.

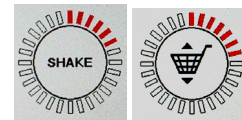

 
- 5** Press SHAKE/BASKET button to cancel SHAKE alarm.



 - 6** REMOVE alternating with the CHECKMARK is displayed when the cook cycle is complete.



 - 7** Press the REMOVE/CHECKMARK button to cancel alarm.



- 8** HOLD TIMERS run in the background and are not displayed until the hold timer expires.

- 9** A HOLD TIMER EXPIRED PRODUCTS screen displays products that have expired hold timers.



- 10** Pressing the PRODUCT button(s) selects the products and changes the border color. Pressing the CHECKMARK button cancels the hold timers and restores the display to normal operation and the unit is ready for cooking.



Frymaster[®]