

# FQ80 FilterQuick™ easyTouch® Quick Start:


**A: FQ4000:** Programmable for automatic filtering. Press (YES) button to respond YES to filter prompt.

**B: Power switch:** One in cabinet (electric only) under each fryer.

**D: Pre-Filter Wrench**

**E: Filter Pan**

**C: Pre-Filter**

1. Fill vats with oil to lower fill line.
2. Ensure the pre-filter (C) is secured tightly with the pre-filter wrench (D) .
3. Turn on power switch(es) if applicable (B). 
4. Turn controllers on by pressing the power button.
5. Controller (A) displays "CHANGE FILTER PAD? YES/NO"
6. Press (YES) and controller displays "REMOVE PAN"
7. Remove filter pan (E) and computer displays "CHANGE FILTER PAD"
8. Assemble filter pan, ensuring pan is out 30 seconds. Re-install filter pan (E) .
9. Ensure a "P" is not in the upper right corner of the display, which indicates the filter pan is not properly placed. Reseat the filter pan if necessary.
10. While cooking, respond YES to the Filter Now Prompt in display (A) by pressing the (YES) button.

## *Frymaster*®

**NOTE:** The Frymaster FQ80 FilterQuick™ fryer requires a start-up, demonstration and training before normal restaurant operations can begin.

 


8 1 9 7 7 8 4

FRY\_QR\_8197784 01/2024

# Daily Filter Pan Cleaning and Preparation

The filter paper in a FilterQuick™ fryer must be replaced at least once daily. In high-volume stores it should be replaced more often.

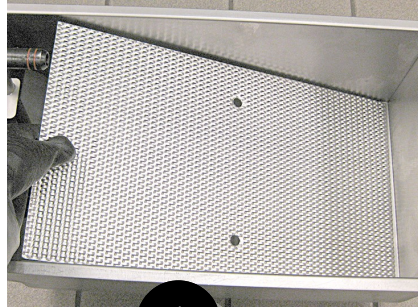


1



2



 4

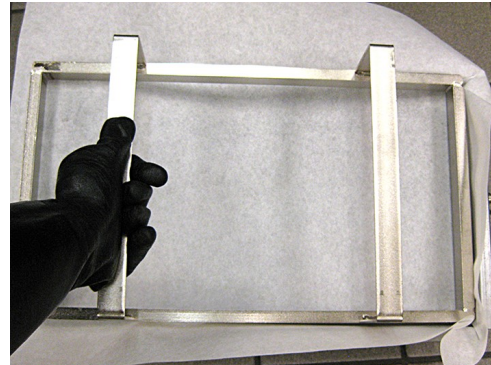

3



5

Replace O-rings every 90 days.

The filter pan must be cleaned daily and the filter paper/powder replaced. Follow these instructions to prepare the filter pan:

Remove and disassemble the pan. Discard old filter paper. Clean thoroughly. **Do NOT leave any water in the pan.**

Reassemble the pan in this or-

der:

1. Position the inner screen.
2. Place the filter paper on the pan.
3. Position the hold-down ring on the filter paper and lower into the pan.
4. Ensure the filter paper is folded up around the hold down ring and

filter powder spread over the paper.

5. Position the crumb tray.
6. Firmly seat the filter pan in the fryer. Ensure the "P" is **NOT** visible on the display in upper right corner.