

McDonald's Intuition™ LOV™ easyTouch® Quick Start:

A: easyTouch® Controller:
Programmable for automatic filtering. Press ✓(YES) button to respond YES to filter prompt.

G: Top off reset button:
Press and hold after replacing the oil until top off empty notice goes out.

H: Reset Power switch: One in cabinet under the USB port.


C: Power switch:
One in cabinet under each controller (not shown, domestic electric only).

D: Filter Pan

E: Pre-Screen Filter

B: Gas Valve Switch

F: Oil/Shortening Container:
Holds oil/shortening for automatic top-off system. It's not used to fill the vats, just to maintain the oil level. Use only fresh oil in top off system.

1. Fill vats with oil to **lower** fill line.
2. Turn on **ALL** gas valve switches (**B**) (gas only).
3. Turn on **ALL** power switches (**C**) (electric only).
4. Turn controllers on by pressing and holding the  for three seconds until the display changes.
5. Controller (**A**) displays "Change filter media?".
6. Press ✓ and controller displays "Remove Filter Pan".
7. Remove filter pan (**D**) and controller displays "Change Filter Media".
8. Change filter and reassemble filter pan, ensuring pan is out 30 seconds. Re-install filter pan and press ✓.
9. Position oil container in the right cabinet, placing pick-up tube in open container (**F**).
10. Press and hold the top off reset switch until JIB is full or Top Off Empty display goes out on controller. (**G**).
11. A "P" indicates the filter pan is not properly placed. Reseat the filter pan if necessary until the "P" is not visible.
12. Press the ✓ button when the Filter Now prompt is displayed (**A**).
13. Respond to the empty oil container Top Off Empty notification by replacing the oil container (**F**) and resetting the top off reset switch (**G**) or refilling the oil container with bulk oil system.

Frymaster®



NOTE: The Frymaster McDonald's Intuition™ LOV™ fryer requires a start-up, demonstration and training before normal restaurant operations can begin.



FRY_QS_8197945 06/2024

Daily Filter Pan Cleaning and Preparation


The filter pad/paper in a LOV™ fryer must be replaced at least once daily. In high-volume stores it should be replaced more often.



1



2

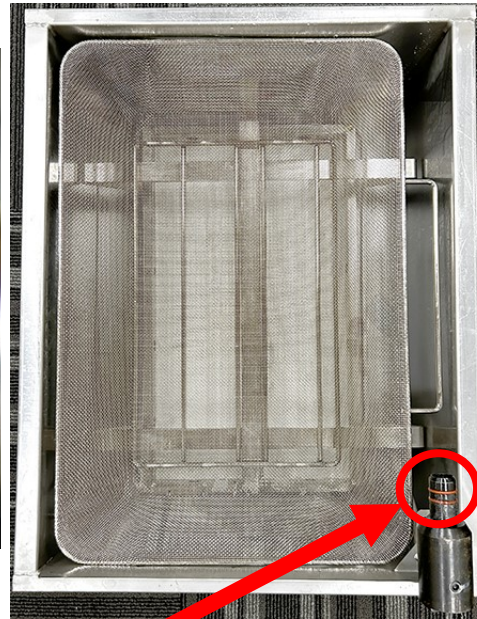

Replace O-rings every 90 days.



3



4

The filter pan **MUST** be cleaned daily and the filter pad/paper replaced. Follow these instructions to prepare the filter pan: Remove and disassemble the pan. Discard old filter pad/paper. Clean thoroughly.

DO NOT leave any water in the pan.

Reassemble the pan in this order:

1. Position the inner screen.
2. Place the filter paper, or if using a filter pad, textured side up, in the pan.

3. Position the hold-down ring on the filter pad/paper.
4. Position the crumb tray.
5. Firmly seat the filter pan in the cabinet. Ensure the controller does not display "P".