

FilterQuick™ - Intuition™ easyTouch® Quick Start

A: easyTouch® Controller: Programmable for automatic filtering. Press ✓ (YES) button to respond YES to filter prompt.

D: Top off reset button: Press and hold after replacing the oil until top off empty notice goes out.


G: Gas Valve Switch

B: Reset Power switch: One in cabinet under the USB port.

C: Filter Pan

F: Pre-Screen Filter

E: Oil Container: Holds oil for automatic/manual top-off system. It's not used to fill the vats, just to maintain the oil level. Use only fresh oil in top off system.

1. Fill vats with oil to **lower** fill line.
2. Turn on **ALL** gas valve switches (**G**) (gas only).
3. Turn on **ALL** power switches (electric only).
4. Turn controllers on by pressing and holding the  button for three seconds until the display changes.
5. Controller (**A**) displays “**Change filter media?**”.
6. Press ✓ and controller displays “**Remove Filter Pan**”.
7. Remove filter pan (**C**) and controller displays “**Change Filter Media**”.
8. Change filter and reassemble filter pan, ensuring pan is out 30 seconds. Re-install filter pan and press ✓.
9. Position oil container in the right cabinet, placing pick-up tube in open container (**E**).
10. Press and hold the top off reset switch until JIB is full or Top Off Empty display goes out on controller. (**D**).
11. A “**P**” indicates the filter pan is not properly placed. Reseat the filter pan if necessary until the “**P**” is not visible.
12. Press the ✓ button when the Filter Now prompt is displayed (**A**).
13. Respond to the empty oil container Top Off Empty notification by replacing the oil container (**E**) and resetting the top off reset switch (**D**) or refilling the oil container with bulk oil system.

Frymaster®


NOTE: The Frymaster FilterQuick™ Intuition™ fryer requires a start-up, demonstration and training before normal restaurant operations can begin.




FRY_QR_8197969 06/2024

Daily Filter Pan Cleaning and Preparation


The filter paper in a FilterQuick™ Intuition fryer must be replaced at least once daily. In high-volume stores it should be replaced more often. Use Frymaster PN 8030445 16.5"x 25.5" filter paper.

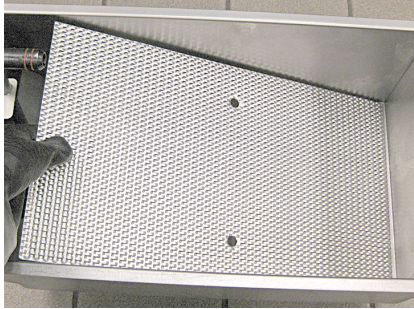

1

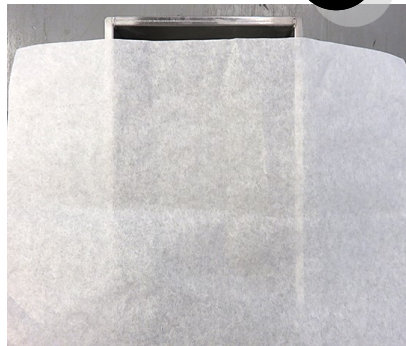

2

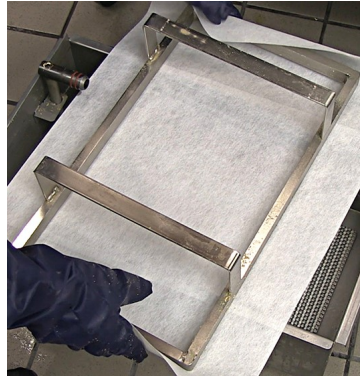

3



4



5

Replace O-rings every 90 days.

The filter pan must be cleaned daily and the filter paper replaced. Follow these instructions to prepare the filter pan:

Remove and disassemble the pan. Discard old filter paper. Clean thoroughly. **Do NOT leave any water in the pan.**

Reassemble the pan in this order:

1. Position the inner screen.
2. Place the filter paper on the pan.
3. Position the hold-down ring on the filter paper and lower into the pan.

4. Ensure the paper is folded up around the hold down ring.
5. Position the crumb tray.
6. Firmly seat the filter pan in the fryer. Ensure the controller does **NOT** display **P**.