

FilterQuick™ easyTouch® MF Quick Start:


E: Oil Container

(Optional) : Holds oil for automatic top-off system. It's not used to fill the vats, just to maintain the oil level. Use only fresh oil in top off system.

A: FQ4000: Programmable for automatic filtering. Press (YES) button to respond YES to filter prompt.

F: Top off reset button:

Press and hold orange button after replacing the oil until top off empty notice goes out.

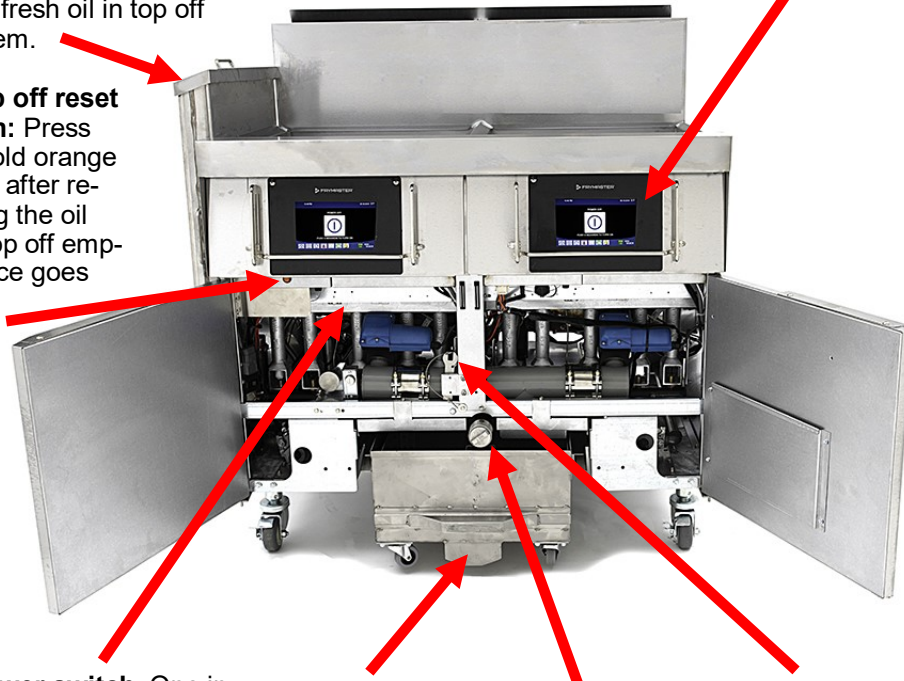



B: Power switch: One in cabinet (electric only) under each fryer.

G: Filter Pan

C: Pre-Filter

D: Pre-Filter Wrench

1. Fill vats with oil to lower fill line.
2. Ensure the pre-filter (C) is secured tightly with the pre-filter wrench (D) .
3. Turn on power switches if applicable (B). 
4. Turn controllers on by pressing the power  button.
5. Controller (A) displays "CHANGE FILTER PAD? YES/NO"
6. Press (YES) and controller displays "REMOVE PAN"
7. Remove filter pan (G) and computer displays "CHANGE FILTER PAD"
8. Assemble filter pan, ensuring pan is out 30 seconds. Re-install filter pan.
9. Position oil saddle reservoir on the fryer (E), if applicable.
10. Press and hold the top off reset switch (F) until oil saddle is full (if using a bulk fresh oil system) or Top Off Empty display goes out on controller (A).
11. Ensure a "P" is not in the upper right corner of the display, which indicates the filter pan is not properly placed. Reseat the filter pan if necessary.
12. While cooking, respond YES to the Filter Now Prompt in display (A) by pressing the (YES) button.
13. Respond to the empty oil container Top Off Empty notification by filling the oil saddle reservoir (E), if applicable, and resetting the top off reset switch (F) or refilling the oil container with bulk oil system, if applicable.

Frymaster®



NOTE: The Frymaster Touch FilterQuick™ fryer requires a start-up, demonstration and training before normal restaurant operations can begin.



FRY_QR_8198024 12/2023

Daily Filter Pan Cleaning and Preparation

The Masterfil filter in a FilterQuick™ fryer must be scraped whenever it slows down filtering.

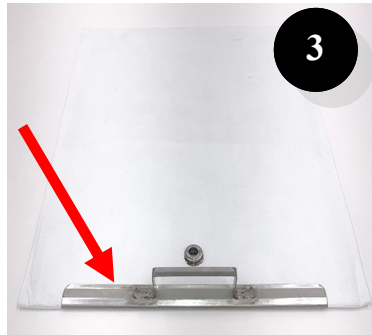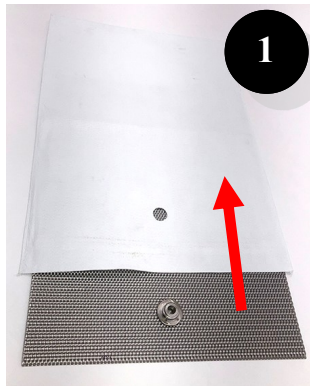

Replace O-rings every 90 days.



The filter must be scraped whenever it slows down filtering. The filter should last at least 10 days before replacing. Follow these instructions to replace the filter envelope:

Remove and disassemble the assembly. Discard old filter envelope. Clean and dry **ALL** parts thoroughly. **DO NOT leave any water in the pan.**

Reassemble the pan in this order:

1. Insert the inner screen into the envelope.
2. Fold the end of the envelope over the screen.
3. Slide the large clip over the folded end.
4. Slide the small clip over the other end.
5. Securely screw the fitting to the screen.
6. Slide pick up tube over fitting
7. Insert the filter into the pan. Ensure the pick up tube is in the pan bracket.
8. Insert filter pan into fryer. Ensure the "P" is **NOT** visible on the display in upper right corner.