

Cleveland
Convotherm®
Deane®
Delfield®

Frymaster®
Garland®
Harford
Jackson

Kolpak®
Koolaire®
Kysor Panel Systems®
Kysor/Warren®

Lincoln
Lincoln Smallwares
Manitowoc® Ice
Manitowoc® Beverage Systems

McCall®
McCann's®
Merco®
Merrychef®

Multiplex®
RDI
Savory®
Servend®

US Range
Varimixer®



Introducing the UHC-HD for McDonald's



The new cabinet has six rows, as opposed to the earlier cabinet's four. Its also has:

- The same footprint as the earlier unit.
- Manual programming with an onboard keyboard.

6/16/2010

Controls are all Onboard



ON/OFF

Keypad: Used for programming, responding to changes.

Global Timer:
Reveals remaining time on all active timers.

Global Temp:
Reveals actual temperature on all rows.

Row Displays



Row Mode: Press to scroll through row's menu choices. Choice is confirmed with OK button, which is illuminated.

Timer Buttons



Timer Button:
Brightens when
pressed.

Row Temperature Setting



Row Temperature: Pressing the temperature button causes the left display to scroll the top and bottom temperatures. Like earlier units, only menu items with the same holding temperature can be placed on the same row.

Master Control

Return Key: Use to back out of programming; lit when active.



Programming Button:
Use to enter programming, a pass code is needed to advance.

Master Display: Shows cabinet menu, scrolls instructions while programming.

Master Control

Keypad: Use to enter programming, holding times, temperatures.



Navigation Buttons: Use to scroll cabinet or display options, move cursor.

OK: Use to accept changes, programming entries.

Master Control



Illuminated Buttons: During programming or other interaction with the master control, relevant buttons are lit when active.

Adding Product to Cabinet



Press the timer button for the appropriate row position: The button brightens; the product name brightens if it is the only row position timing down that product.

First-In-First-Out Light Guide



Timer Buttons:

Illuminate when pressed, indicating the row position is timing down

Product Display: Bright for row position with least remaining holding time; dim for all other rows timing the same product. Use product from the row with the bright product name display.

Two Ways to Change the Cabinet

Menu changes:

The cabinet has five menu choices:


- Breakfast
- Change Over
- Regular Menu
- Custom 1
- Custom 2
- Clean



Changing the Cabinet a Row at a Time

Row Changes:

Pressing the row mode button changes the rows individually. The change has to be accepted by pressing the OK button.

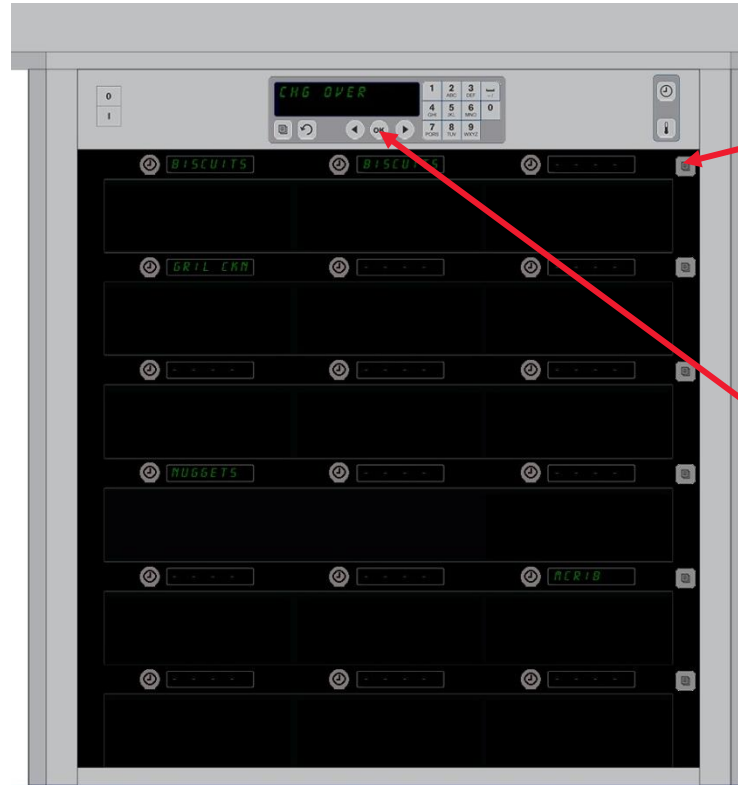


Press Row Mode Button: Scroll menu choices for an individual row.

Press OK:
Approves change

Changing the Cabinet a Row at a Time


Active Timers: Changing a menu on a row with active timers is not allowed if the menu chosen has a different holding temperature than the current items.

If the row temperature is the same, the displayed name of the active timer will remain until the product times out, changing then to the new name.

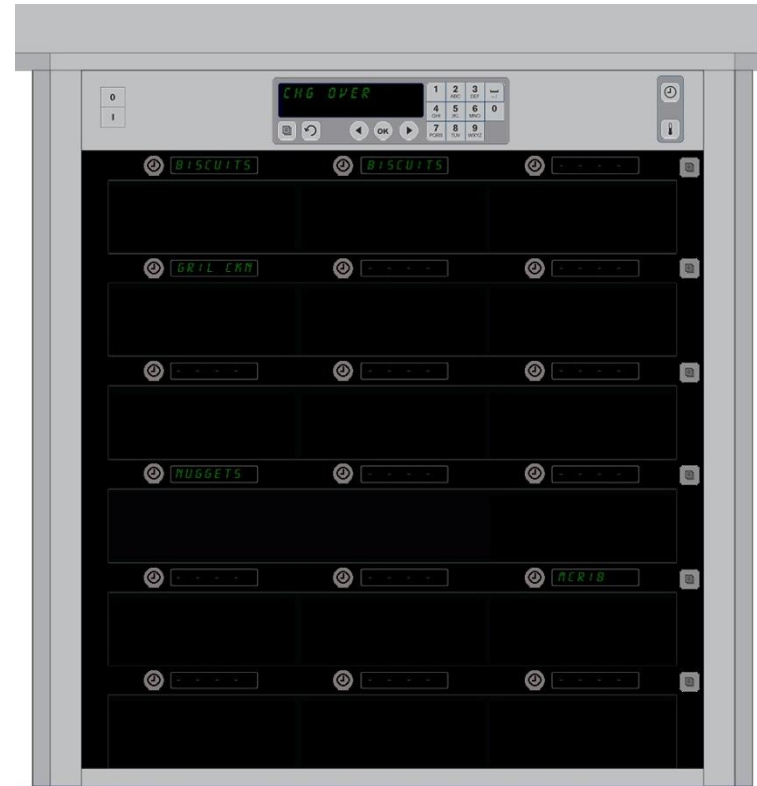

Changing the Displayed Menu Globally

**Changing the Cabinet
Globally Requires Entering
the Programming Mode.**

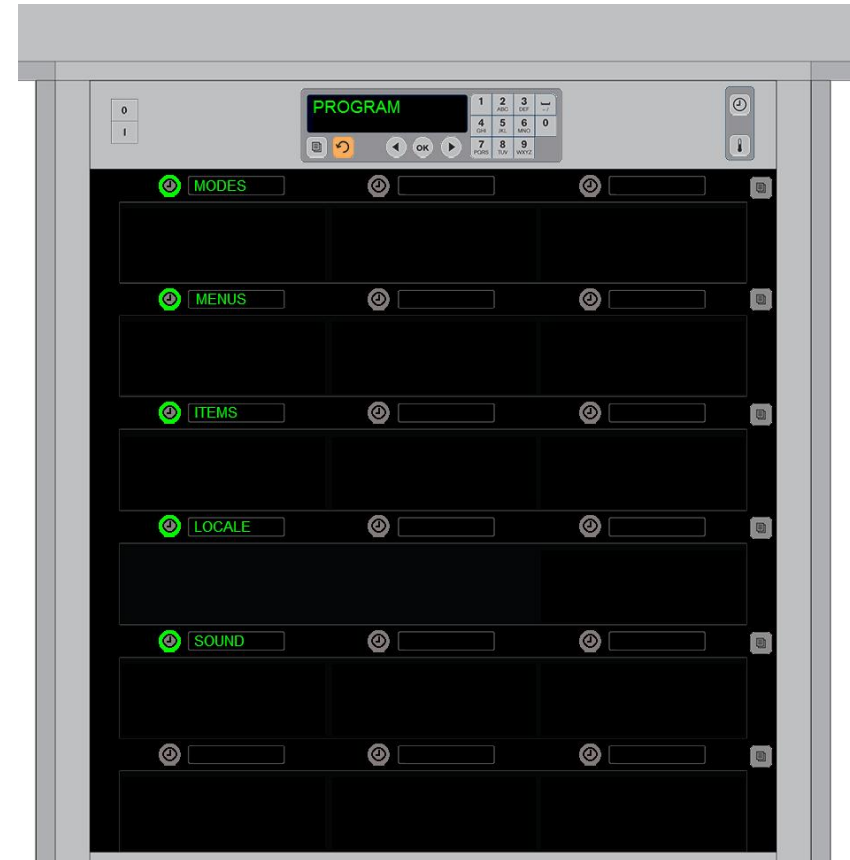


Entering Programming

Press the program button and the display changes to CODE.

Enter 1955 with the keypad and press OK.


The cabinet's first column of displays becomes: Modes, Menus, Items, Locale and Sound.

Press Modes. It is where the displayed menu is changed.

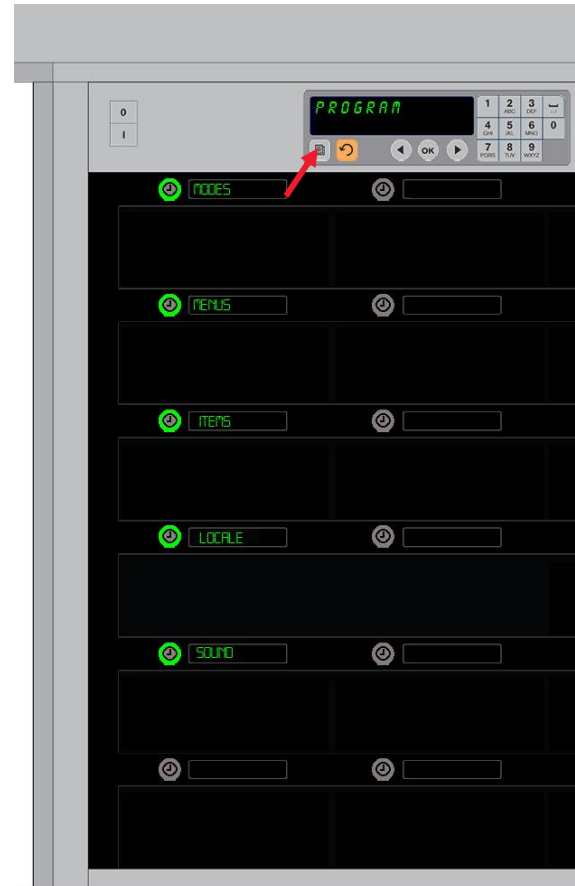

Changing Cabinet Globally

Press the timer button next to the desired menu.

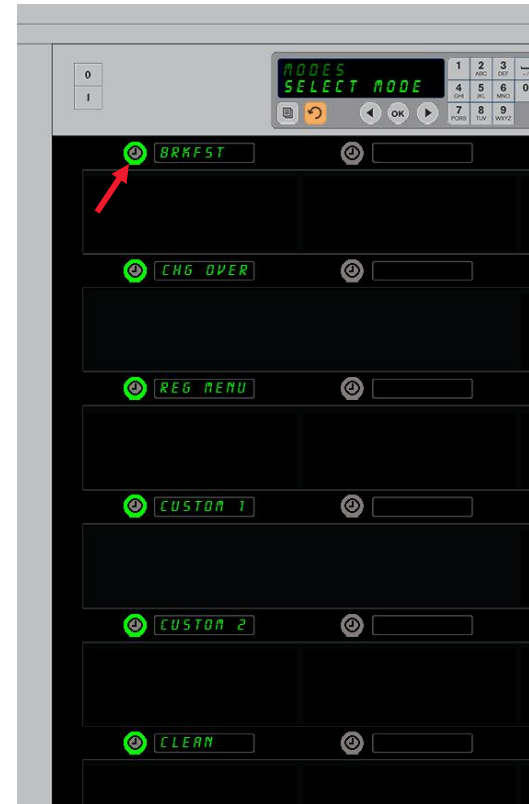

Changing Cabinet Globally

All row positions display the choice.



Changing Cabinet Globally

Master display scrolls Press OK to confirm mode change.



Press OK.

Press arrow key three times to back out of programming, returning the cabinet to operation in the new menu mode.

Changing Cabinet Globally

The cabinet returns to operation, globally changed to the selected menu mode.




Programming Display

The cabinet, after entering the 1955 programming code, displays Modes and the following options:

Menus, allows changing menu configuration.

Items, allows adding, changing or deleting menu items.

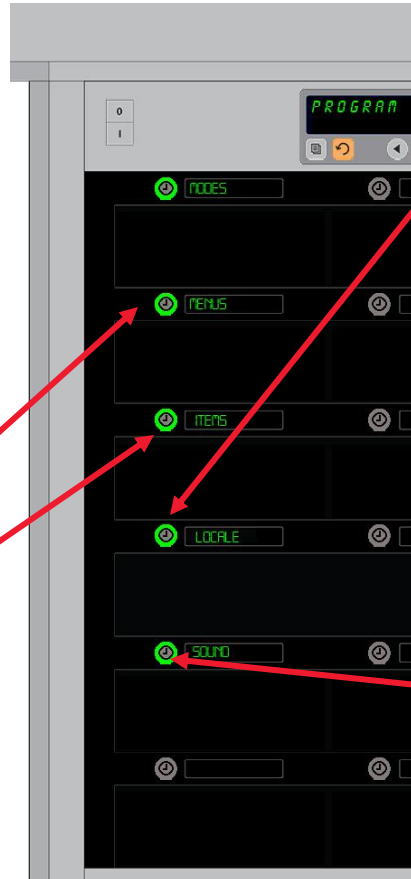

Locale, allows change of displayed language and temperature range.

Sound, allows adjustment of sound level.


Changing Menu Configuration

Press the program button and the display changes to CODE.

Enter 1955 with the keypad and press OK.

The cabinet's first column of displays becomes: Modes, Menus, Items, Locale and Sound.


Menus is where the displayed menu's cabinet configuration is changed.

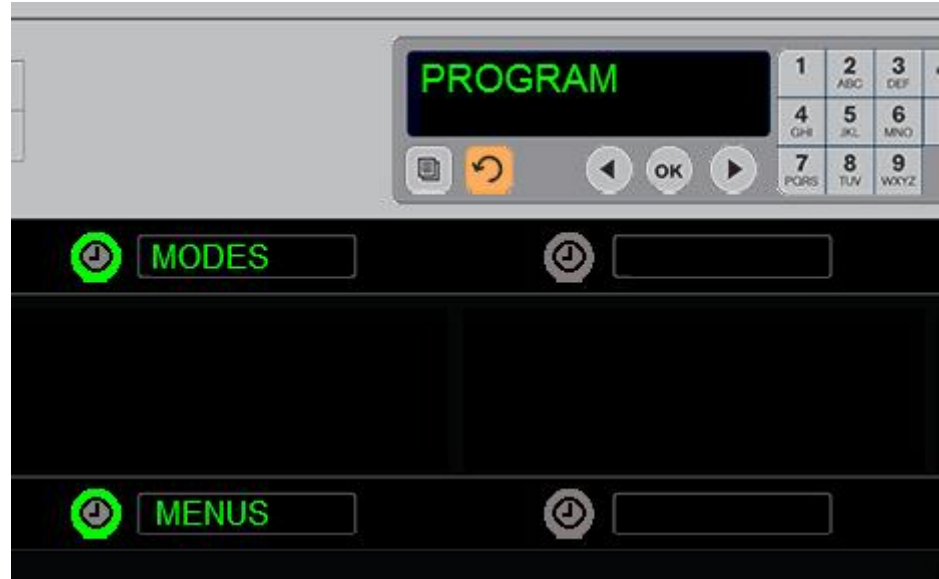

Changing Menu Configuration

Press the timer next to the menu configuration to be changed.

That configuration is displayed.

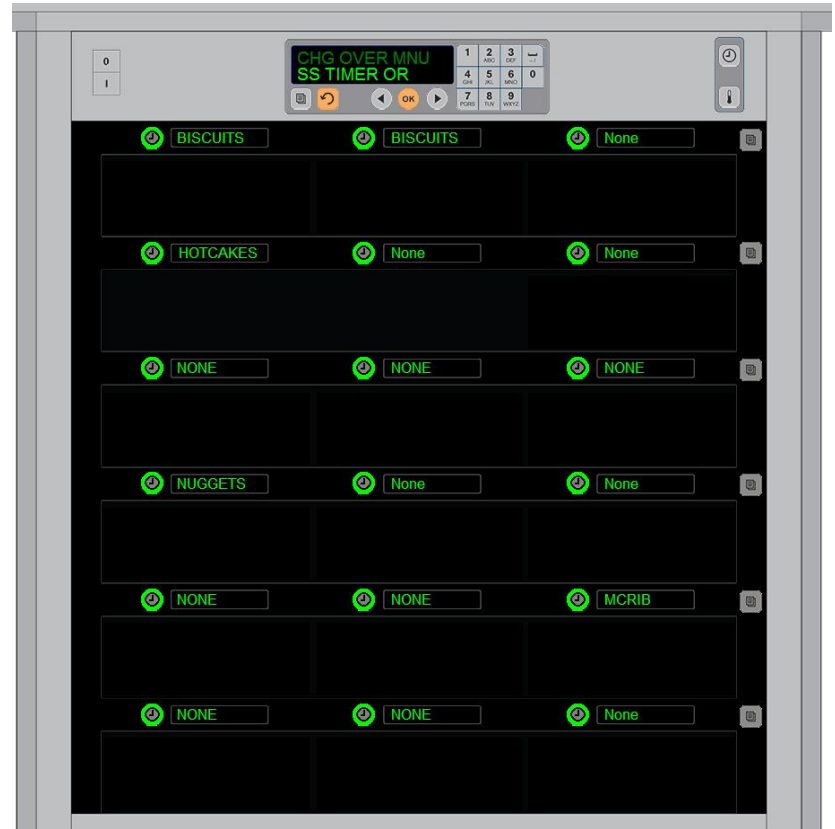

Changing Menu Configuration



Press the timer key next to the row position to be changed.



Scroll to the desired item. Release the timer button.

The leftmost row position item sets the temperature for the row. Scrolling the center and right positions will only display items with the same holding temperature at the leftmost item.

Changing Menu Configuration

Master display scrolls Press OK to confirm mode change.



Press OK.

Press arrow key three times to back out of programming, returning the cabinet to operation with the new menu item in place.

Language, Sound Changes




Pressing the timer key next to Locale produces the choices shown. Here the displayed language and temperature range can be changed. The change is approved with the OK button.

Changing Sound Level


Pressing the timer key next to Sound produces the choices shown. The top display shows the current setting. Press the timer key next to a displayed choice to change the level.

Press OK to complete change and press the return key to back out of the programming mode, returning the cabinet to operation with the new sound level.

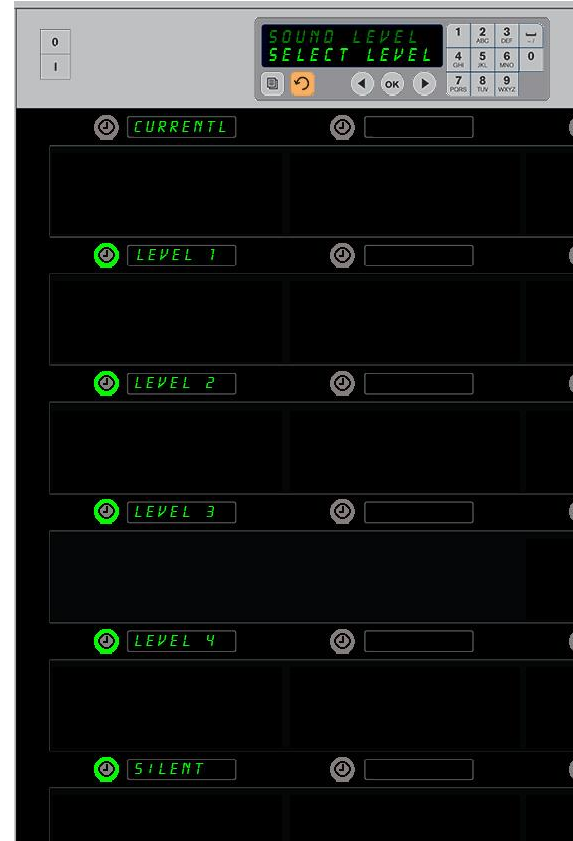

Adding a Product

Adding a new product involves more steps, but it is no more complicated.

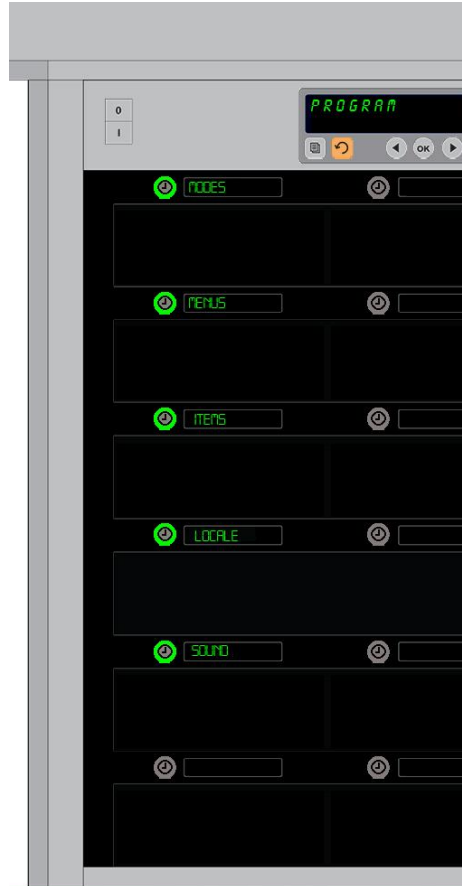

Press the program button and the display changes to CODE.

Enter 1955 with the keypad and press OK.

The cabinet's first column of displays includes Items.

Items is where the new products are added.

Adding New Products

Pressing the timer key next to Items produces the choices shown.

- ADD ITEM
- CHG ITEM
- DEL ITEM




Adding New Products

Pressing the timer key next to ADD ITEM produces the choices shown:

- New Item Name
- Top Temp
- Bot Temp
- Cook Now

The master display scrolls Select Setting to Change or Press OK to Save.

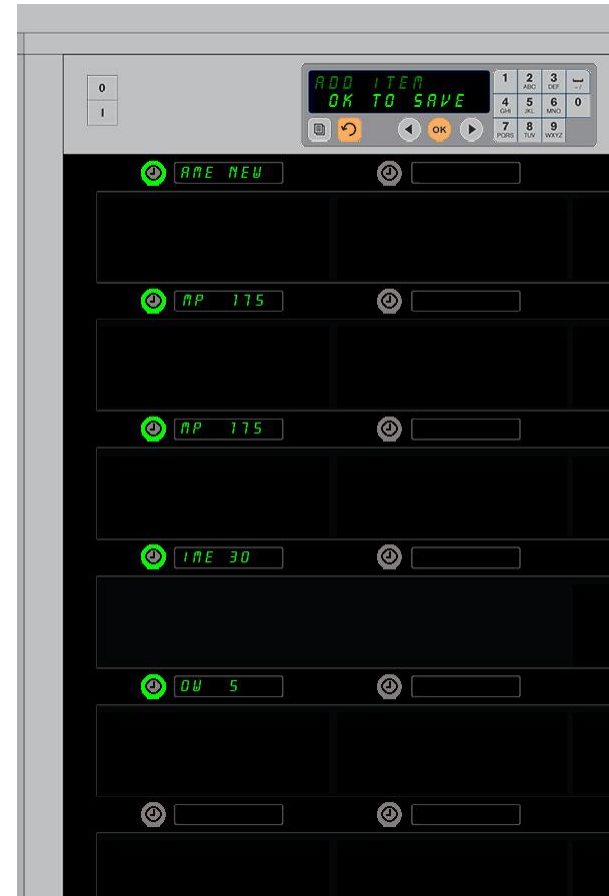

Adding New Product



Press the timer key next to New Item Name.

Use the keypad to enter the product name.

Press the Return Arrow Key to accept name and return to New Item Name, Top Temp, Bot Temp, Cook Now screen.

Press the timer next to Top Temp.

Adding New Product



Use the keypad to enter top temperature.
Press the ↻ Key to accept top temperature and return to New Item Name, Top Temp, Bot Temp, Cook Now, screen.


Adding New Product

Repeat steps to enter:

- Bottom Temperature
- Hold Time
- Cook Now

With all the parameters entered, Press OK to save the new product.

Press the return arrow three times to back out of the programming mode.

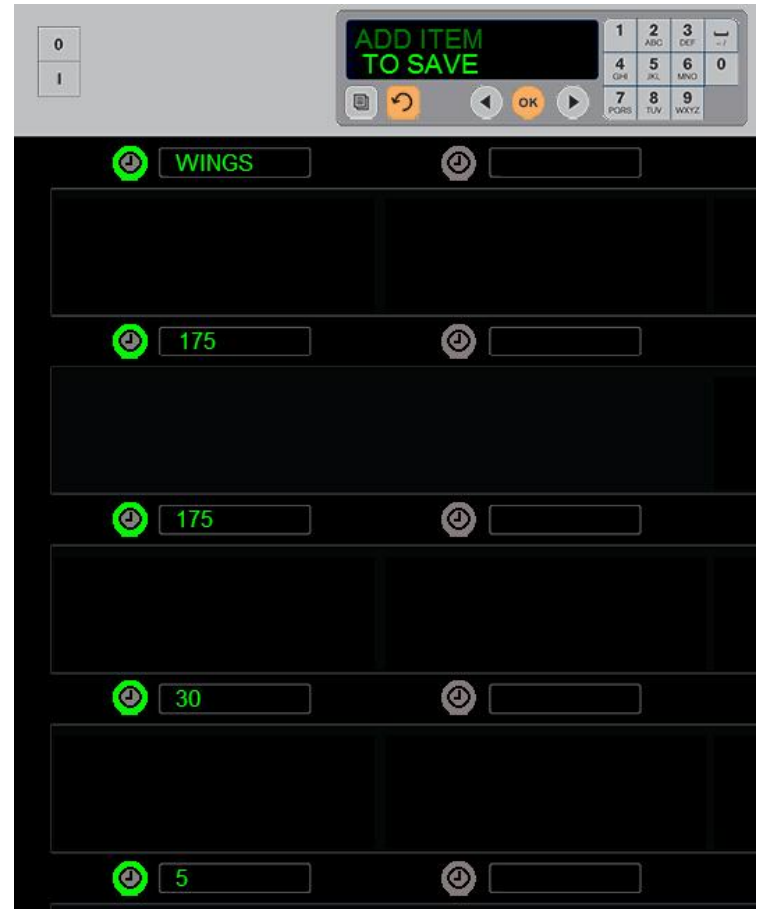

Adding New Product

The new product will have to be added to a cabinet menu configuration.

