


CASTER/LEG LOCATING INSTRUCTIONS FOR GF14, MJ35, GF40, AND MJCF FRYERS

SINGLE UNIT OPTIONS


SINGLE UNIT
ONE-PIECE BASE




LEGS	P/N	QTY	CASTERS	P/N	QTY
1. STANDARD HARDWARE	8063811 8090563	1 16	○ REAR	8100378	2
2. S.S. HARDWARE	8101205 8261676	4 1	# FRONT	8100357	2
3. SHIPBOARD HARDWARE	8231769 8261676	4 1	HARDWARE	8261676	1

(BOLD LINES INDICATE WHERE FRYERS ARE BATTERED TOGETHER)


2 - BATT





3 - BATT



4 - BATT



5 - BATT

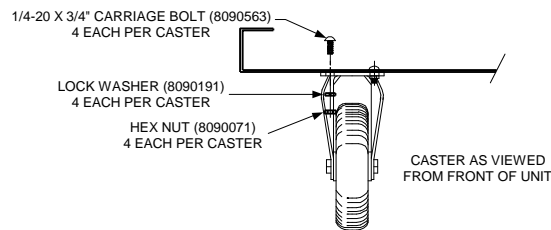

INSTALLATION NOTES:

TORQUE EACH NUT TO 50 INCH LBS. MINIMUM. SEE DIAGRAM ABOVE FOR PROPER LOCATION OF LOCKWASHERS.

LOCATION NOTES:

- X = P/N 8100356 = 6.00" CASTER, 5.00" DIA. WHEEL WITHOUT BRAKE
(USED ONLY ON REAR CASTER MOUNTS)
- # = P/N 8100357 = 6.00" CASTER, 5.00" DIA. WHEEL WITH BRAKE
(USED ONLY ON FRONT CASTER MOUNTS)
- O = P/N 8100378 = 6.00" RIGID CASTER, 5.00" DIA. WHEEL WITHOUT BRAKE
(USED ONLY ON SINGLE UNIT REAR CASTER MOUNTS)

FOR LEGS ONLY OR LEG/CASTER COMBINATIONS, USE 8065043 (1 EA.) OR 8063811 (4 EA.) IN POSITIONS INDICATED FOR CASTERS (X, #, OR O).

CAUTION! CASTER OPTION REQUIRES INSTALLATION OF CASTERS WITH BRAKE ON FRONT OF UNIT. LEG/CASTER COMBINATIONS REQUIRE INSTALLATION OF LEGS ON FRONT OF UNIT WITH CASTERS ON REAR.