



M2000 Quick Reference


Changing from Breakfast to Lunch

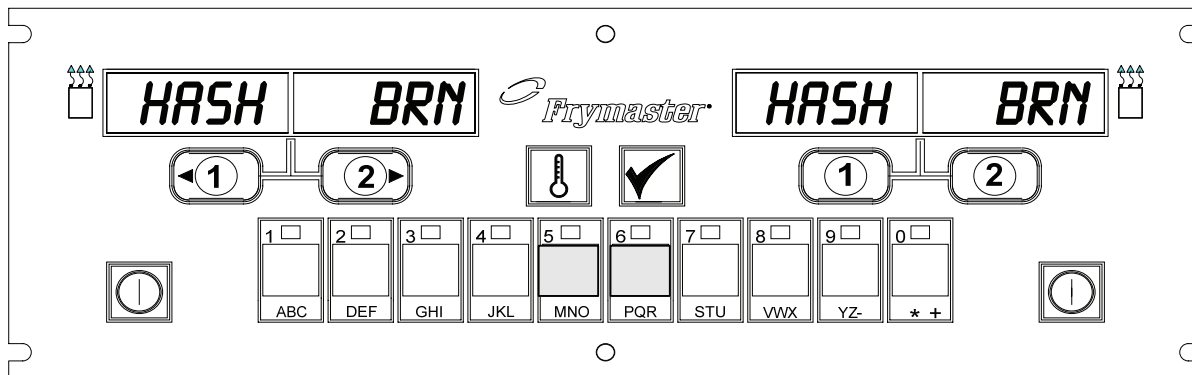

- 1 Press product button for french fries.



- 2 Computer will change from Hash Brn to <<<<<>>>>

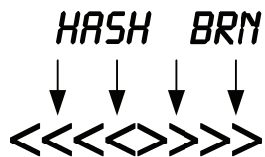


- 3 Press and hold the cook channel button under the display for five seconds.




- 4 Display changes to **FR FRIES**

Change both displays to FR FRIES


Changing from Lunch to Breakfast

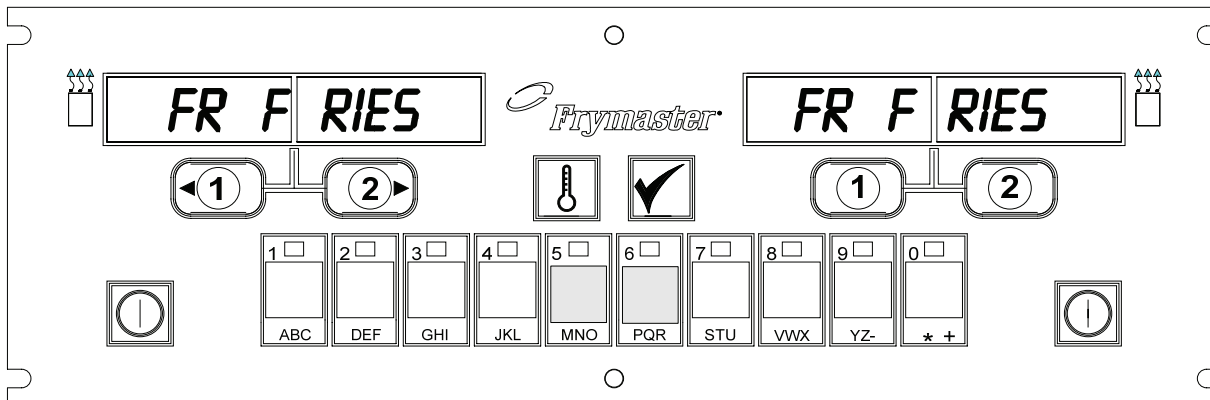

- 1 Press product button for hash browns.



- 2 Computer display will change from FR Fries to <<<<<>>>>

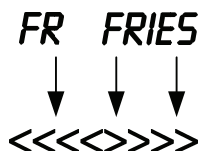


- 3 Press and hold the cook channel button under the display for five seconds.



- 4 Display changes to **HASH BRN**

Change both displays to HASH BRN

Cooking With Dedicated Display

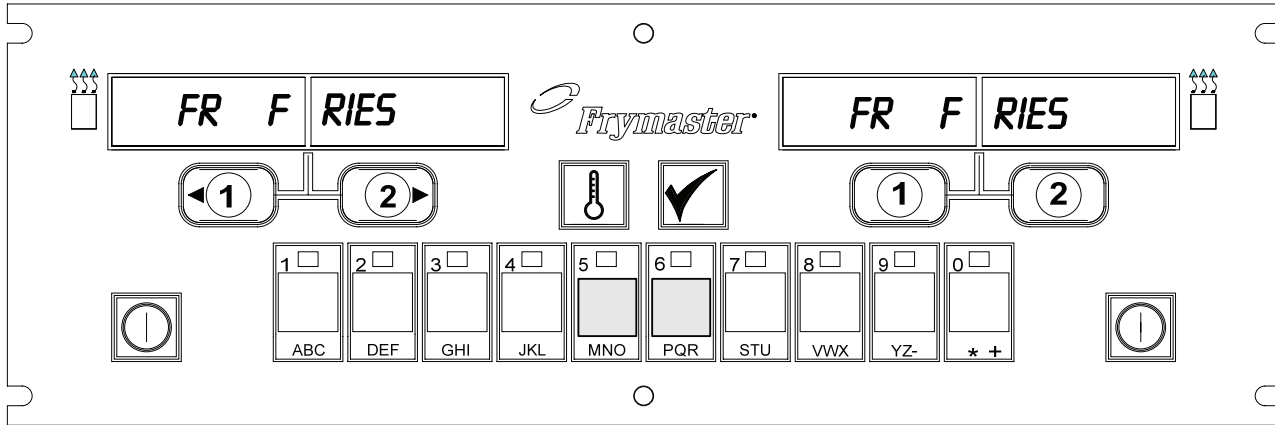


1 Press cook channel button under menu item.



2 Pull is displayed when the cook cycle is complete.

PULL

3 Press cook channel button to cancel alarm.

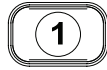

4 Q7 is displayed and alternates with FRIS as the quality time counts down. Press the cook channel button to launch a cook cycle and end the quality countdown.


Q7 ↔ **FRIS**

Q7 ↔ **FRIS**

5 QA is displayed when the quality time has elapsed.


QA

6 Pressing the cook channel button restores the display to FR FRIES and the unit is ready for cooking.



FR FRIES

Cooking With Multi-Product Display

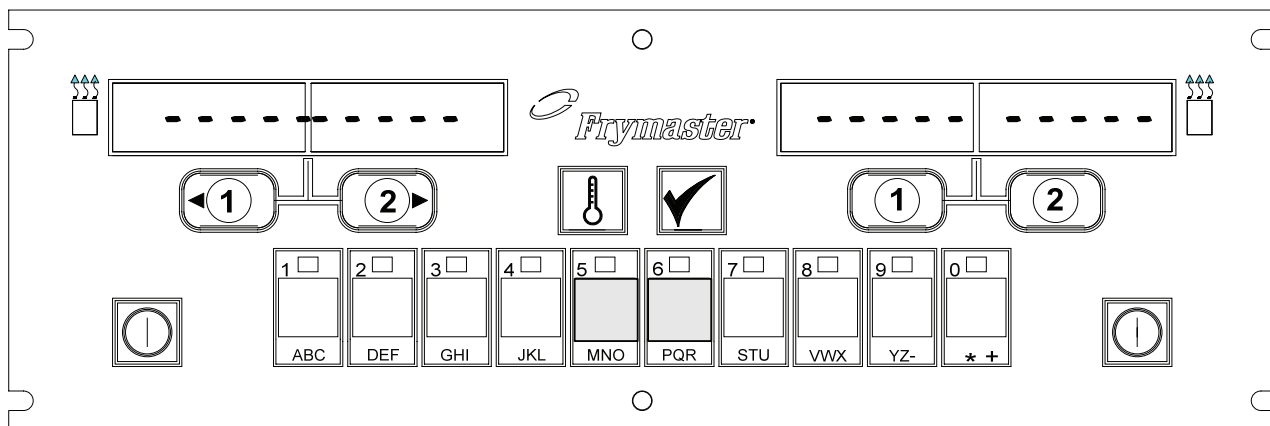

1 Press a product button.



2 Vat with appropriate setpoint displays

MC CHICK

3 Vat with inappropriate setpoint displays:

<<<<>>>>

4 Press a cook channel button under the display showing Mc Chick.



5 Pull is displayed when the cook time is complete; an alarm sounds.

PULL

6 Press cook channel button under PULL display to end alarm. Dashed lines reappear in display.

