

Frymaster®

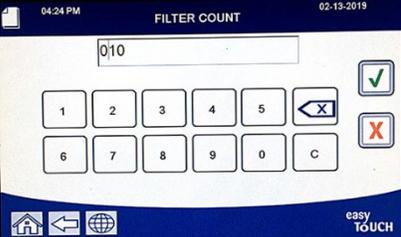

FilterQuick Touch FQ4000 Product Programming

DISPLAY	ACTION
	1. Press the Home button.
	2. Press the Recipes button.
1 6 5 0	3. Enter 1650
	4. Press the ✓ (check) button.
	5. Choose the product icon to edit or press the + to add a new product.
	6. Press the pencil icon at the bottom of the screen to edit an existing product.
	7. Enter or change the name of the product using the keyboard.
	8. Press the ✓ (check) button.
	9. This screen displays the current setpoint, cook time, sensitivity, hold timer, shake timers and filter settings. To edit a parameter, press the item to edit.
	10. To edit temperature, press the temp button.
	11. Use the keypad to enter or edit the cook temperature for the product.



DISPLAY	ACTION
	12. Press the √ (check) button.
	13. Press the cook time button.
	14. Use the keypad to enter or edit the cook time in minutes and seconds.
	15. Press the √ (check) button.
	16. Press the load compensation or sensitivity button.
	<p>17. Use the up and down arrows to change the load compensation or sensitivity setting recommended for this product.</p> <p>This setting allows the product compensation (sensitivity) to be changed. Some menu items may need an adjustment, depending on their cooking characteristics. NOTE: It is highly recommended to NOT adjust this setting, as it could have an adverse effect on the products cooking cycles. (The default setting for product compensation is set to four (4).)</p>
	18. Press the √ (check) button.
	19. Press the Shake Timer 1 button.
	20. Enter the time in minutes and seconds for the first shake to be performed.
	21. Press the √ (check) button.
	22. Press the Shake Timer 2 button if an additional shake is needed, otherwise skip to step 26.

DISPLAY	ACTION
	<p>23. Enter the time in minutes and seconds for the second shake to be performed.</p>
	<p>24. Press the ✓ (check) button.</p>
	<p>25. Press the down arrow to scroll to more settings.</p>
	<p>26. Press the Filter button. (NOTE: ON or OFF is displayed for current selection.)</p>
	<p>27. Ensure that the filter button is ON to enable auto filtration for this product. This setting is used to prevent co-mingling of product specific oils. For products such as FISH, select NO to prevent auto filtration if desired.</p>
	<p>28. Press the Hold Timer button.</p>
	<p>29. Enter the time in minutes and seconds for the product hold time.</p>
	<p>30. Press the ✓ (check) button.</p>
	<p>31. Press the Instant On button.</p>
	<p>32. This is the time, in seconds, the fryer heats at 100%, after the product button is pressed before the controller adjusts the temperature. Enter the time in minutes and seconds for the instant on time (ie. 00:30=30 seconds). (0=OFF). NOTE: Instant on time may need to be adjusted for light cooking loads.</p>
	<p>33. Press the ✓ (check) button.</p>
	<p>34. Press the Filter Count button.</p>

DISPLAY	ACTION
	<p>35. Enter the number of cooking cycles which occur for this product before the filtration prompt is displayed. This is for product only and is not to be confused with a global filter count. If no prompts are desired set to 0 to disable.</p>
	<p>36. Press the ✓ (check) button.</p>
	<p>37. Choose the icon to associate with the product recipe that is being entered or edited.</p>
	<p>38. Press the ✓ (check) button.</p>
	<p>39. Choose the menu(s) to associate with the product recipe that is being entered or edited.</p>
	<p>40. Press the ✓ (check) button.</p>
	<p>41. The controller displays SAVED.</p>
	<p>42. Press the ✓ (check) button.</p>
	<p>43. Select another product to edit or press the + key to add additional products. If finished press the home button.</p>
 <p>CREW MODE</p>	<p>44. Press the Crew Mode button to return to main screen.</p>