


Frymaster LOV Touch Fryer with M4000 Controller

Adding the Chicken Big Mac

These instructions are for Frymaster Gas and Electric 30-pound LOV (Low Oil Volume) fryers, with model numbers that begin with BIELA or BIGLA using the M4000 touch screen controller (see photo on right).

1. Press the **HOME** button .
2. Press the **RECIPES** button .
3. Enter **4321** using the number keys and Press the **CHECK** button .
4. Press the “+” button to add a new product.
5. Type in the name **CHK MAC** and press the **CHECK** button .
6. The recipe details will now be displayed on the screen.
7. Press the **COOK TEMP** button .
8. Use the keypad to enter **360F** and press the **CHECK** button .
9. Press the **COOK TIME** button .
10. Use the keypad to enter or edit the product cook time in minutes and seconds **[03:20]** and press the **CHECK** button .
11. Press the **LOAD COMP** button. .
12. Use the up/down arrows to enter **4** and press the **CHECK** button .
13. Press the **DUTY TIME** button .
14. Use the keypad to enter in **[00:30]**.
15. Press the **CHECK** button  two times.
16. Select an **ICON** (pic) for the product display and then press the **CHECK** button .
17. Select “ALL RECIPES” and press the **CHECK** button .
18. A pop-up will appear “SAVED”. Press the **CHECK** button .
19. When complete, press the **HOME** button .
20. Press the **CREW MODE** button.
21. Choose the lane that you want to cook the product and then scroll through the icons and select **CHK MAC**.

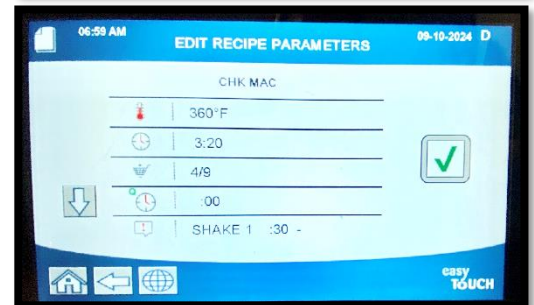

8198037MC CBMM4K
Chicken Big Mac M4K 12/2025