




Intuition™ easyTouch® Basic Operation

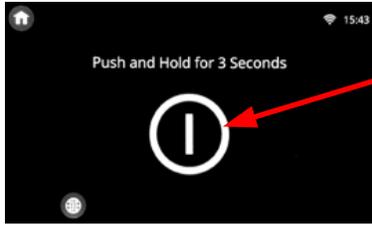


Turn Fryer ON or OFF
 Press and hold button 3 seconds to switch on. Press button to switch off. Select button on desired side of a split vat. If the frypot is **FULL** of oil press the check ✓ button.

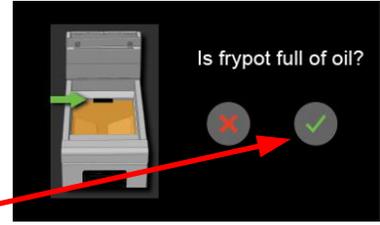

Start a Cook Cycle
 Press the product button to start a cook. The timer will start counting down.

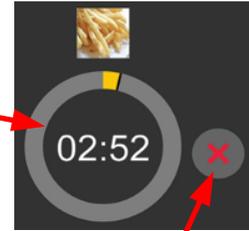

Cancel a Cook Cycle
 Press the **RED "X"** button next to the timer.

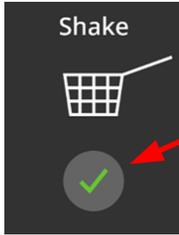



Cancel Shake Alarm
 Press ✓ button.
Cancel an end of Cook (Remove) Alarm
 Press Remove button.



Selecting a Product with a Different Setpoint
 If the product is shaded in black and white (different setpoint), press and hold desired product until screen changes to **Changing Setpoint**.



Check Temperature and Setpoint
 Press Displays setpoint and actual temperature.

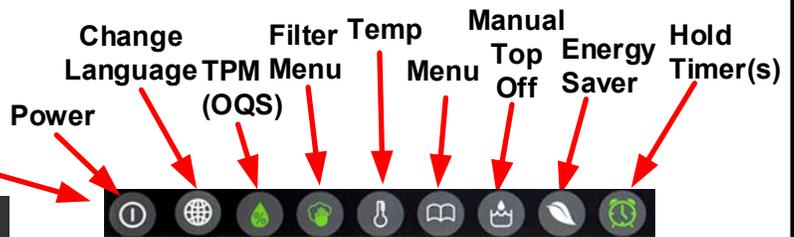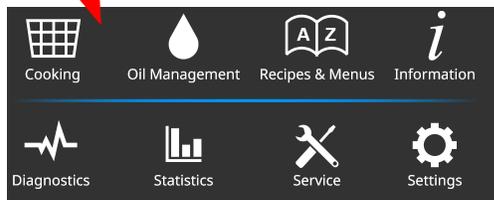

Frymaster®



8 1 9 7 9 7 0

FRY_QR_8197970 10/2025

Cooking with the Intuition™ easyTouch®

Products are shown in the display.

- 1 When choosing a product in black and white (different setpoint), press and hold the product button until screen changes to **Changing Setpoint**.



- 2 Press the product button to begin the cook cycle.



- 3 Display changes to timer with remaining cook time.




- 4 **Shake** is displayed when it is time to shake the fry basket.



- 5 Press ✓ button to cancel **Shake** alarm.



- 6 **Remove** is displayed when the cook cycle is complete.

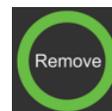

- 7 Press the **Remove** button to cancel **Remove** alarm.



- 8 A green hold timer button indicates an active hold timer. Hold timers run in the background and are not displayed until the hold timers expire.



- 9 A red hold timer button indicates an expired hold timer.



- 10 The **Hold Timers** screen displays active and expired hold timers. Press the **X** button to cancel the alarm.

