

McDONALD'S CAP-N-SPLASH FIELD CONVERSION INSTRUCTIONS – ELECTRIC FRYER (SEE REVERSE FOR GAS FRYER)

If adding a Cap-N-Splash:


Remove parts A, B, D, and E and install the Cap-N-Splash (part C).

If removing a Cap-N-Splash:

Remove part C and install parts A (P/N 8240541) and/or B (P/N 9107443). (Part A is used on split vats only, part B is used on full vats only).

If the fryer is used under a universal hood system, install part D (P/N 910-2441 for 2-Fryer Battery, 9102440 for 3-Fryer Battery, or 9102439 for 4-Fryer Battery) using #10 truss head screws (part E – P/N 809-0449).

NOTE: 3-Fryer Battery Illustrated as Typical

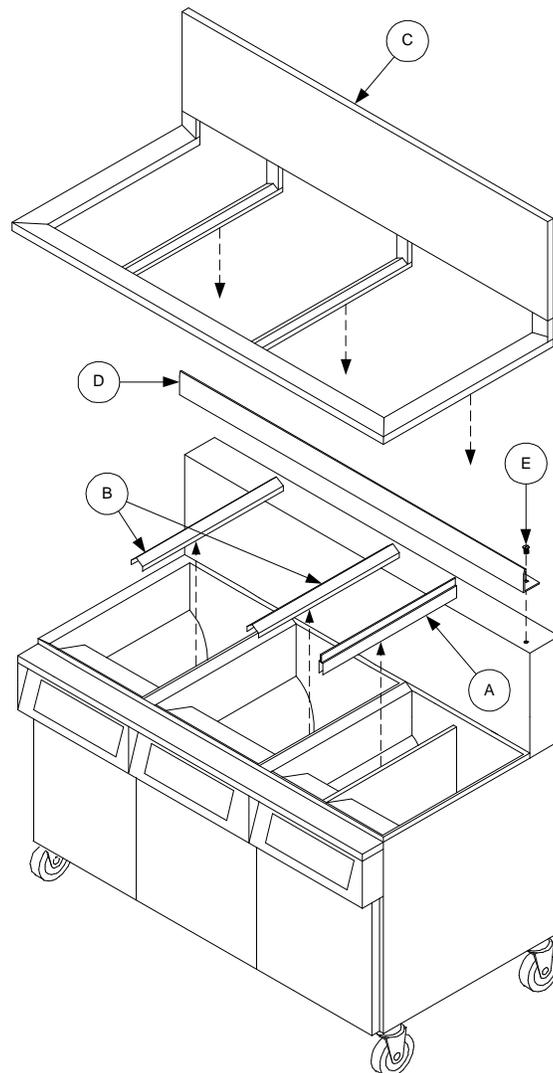

McDONALD'S CAP-N-SPLASH FIELD CONVERSION INSTRUCTIONS – GAS FRYER (SEE REVERSE FOR ELECTRIC FRYER)

If adding a Cap-N-Splash:

Remove parts A and B and install the Cap-N-Splash (part C).

If removing a Cap-N-Splash:

Remove part C and install parts A (P/N 8240541) and/or B (P/N 9107443). (Part A is used on split vats only, part B is used on full vats only).

NOTE: 3-Fryer Battery Illustrated as Typical

