


FILTER SHIELD AND POWER CORD STRAIN RELIEF INSTALLATION INSTRUCTIONS

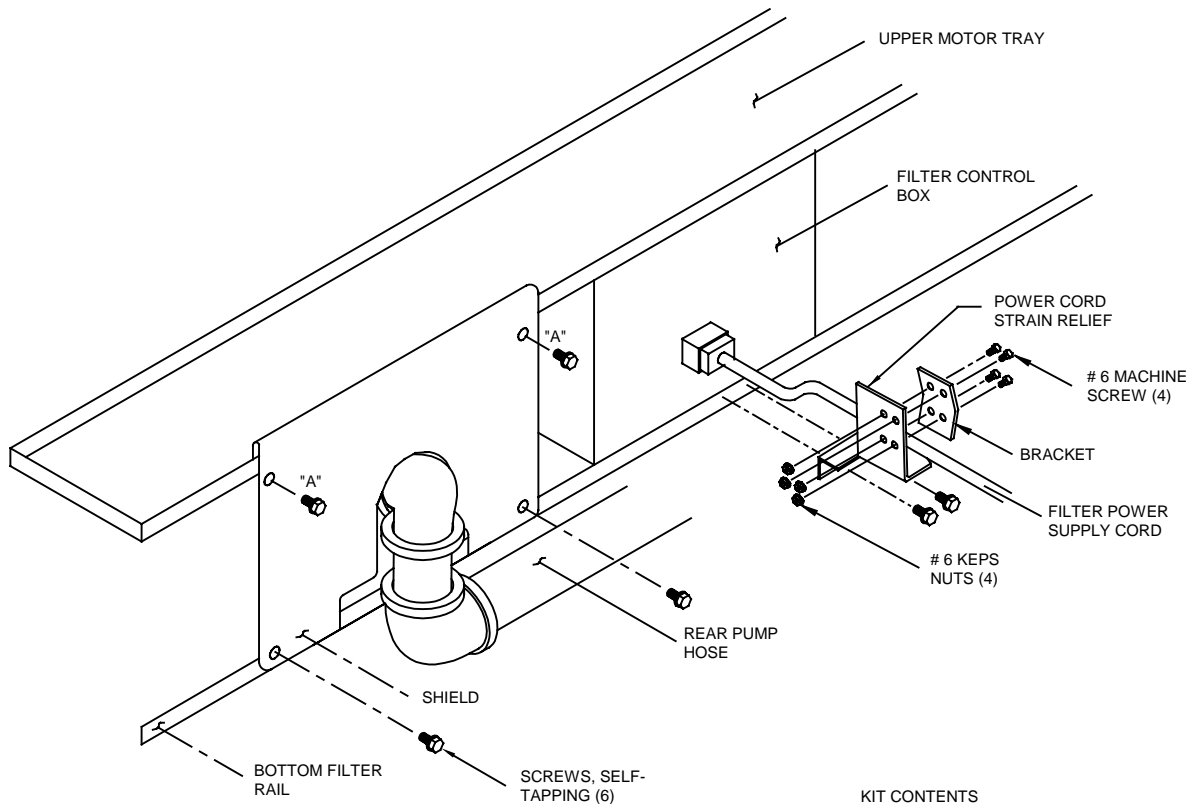

KIT CONTENTS

- (1) SHIELD, REAR FILTER
- (2) POWER CORD STRAIN RELIEF
- (4) SCREWS, #6 MACHINE
- (4) NUTS, # 6 KEPS
- (6) SCREWS, SELF-TAPPING
- (1) BRACKET

1. PLACE THE SHIELD OVER THE REAR PUMP HOSE AS SHOWN IN THE ILLUSTRATION ABOVE. ATTACH THE SHIELD TO THE BOTTOM FILTER RAIL WITH TWO SELF-TAPPING SCREWS.
2. LIFT UP ON THE UPPER MOTOR TRAY AND INSERT THE RIM OF THE TRAY INTO THE LIP OF THE SHIELD. SECURE THE SHIELD IN PLACE WITH TWO SELF-TAPPING SCREWS AT THE POINTS MARKED "A" IN ILLUSTRATION ABOVE.
3. PLACE THE POWER CORD STRAIN RELIEF AGAINST THE BOTTOM OF THE FILTER RAIL AND IN CONTACT WITH THE FILTER POWER SUPPLY CORD. SECURE WITH TWO SELF-TAPPING SCREWS.
4. ATTACH THE BRACKET TO THE POWER CORD STRAIN RELIEF WITH THE FILTER POWER SUPPLY CORD POSITIONED BETWEEN THE BRACKET AND THE STRAIN RELIEF. SECURE BRACKET IN PLACE WITH FOUR #6 MACHINE SCREWS AND KEPS NUTS.