


# MOISTURE CONTROL KIT 826-1492 INSTALLATION INSTRUCTIONS

1. Disconnect the unit from the electrical power supply.
2. Shut off the gas supply to the unit and disconnect the unit from the gas supply line.
3. Shut off the water supply to the unit and disconnect the unit from the water supply line(s).
4. Disconnect the drain pipe assembly from the bottom of the cookpot and remove it from the unit.
5. Position the vapor shield in the bottom of the cabinet so that the large hole is in the right front and the flange is down and flush against the rear channel.

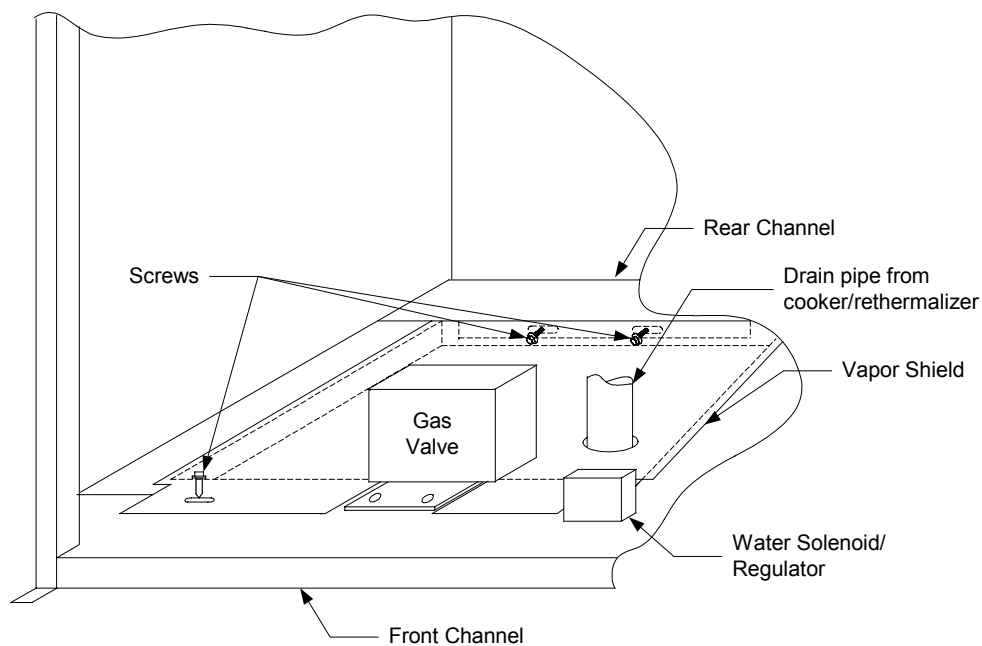

6. Secure the front edge of the shield to the front channel using one of the drill-point screws provided in the kit.
7. Carefully tilt the front of the unit up to gain access to the flange and secure the rear of the shield in place using the remaining two screws.
8. Reverse steps 1-4 to complete the installation.
9. Check the gas supply line connections with a solution of soapy water to verify that there are no leaks before returning the unit to operation.