


# 826-1569

## Navy Submarine Frypot Retrofit


Follow these instructions to install this deep-pot assembly in in Navy H14 Submarine Fryers with model number H114030. These fryers were manufactured prior to 6/99.

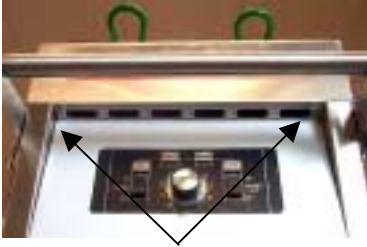

**Fig: 1**  
Remove screws securing top of controller.



**Fig: 2**  
Remove top cap.

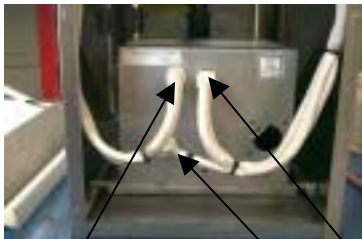

**Fig: 3**  
Unplug elements, probes from contactor box. (Shown from rear.)

Right element connection

Left element connection

Probe connection

In This Kit		
Quantity	Description	Part No.
1	Deep-pot assembly	806-9879
2	Fry baskets	812-1386
1	Frypot cover	806-8558
1	Installation instructions	819-5736

1. Remove power from fryer.
2. Drain frypot
3. Remove drain elbow from drain assembly.
4. Open cabinet door. Reach over and behind contactor box and unplug element and probe plugs. **Fig: 3**
5. Remove screws securing controller/top cap in place. **Fig. 1**
6. Remove top cap. **Fig: 2**
7. Remove screw securing front of frypot. **Fig: 4**
8. Lift frypot from cabinet. **Fig: 4**
9. Reverse procedure to install new frypot.

