
OVER-THE-FRYER CRUMB DUMP: INSTALLATION INSTRUCTIONS






Remove existing top screws (2) from back of fryer flue (\mathbf{A}) .

Place the crumb dump assembly on top of fryer flue. (NOTE: The crumb dump back panel should be on top of the flue deflector). Secure the crumb dump to the flue deflector with screws and locknuts provided (**B**).

Replace sheet metal screws on the back of flue (A).

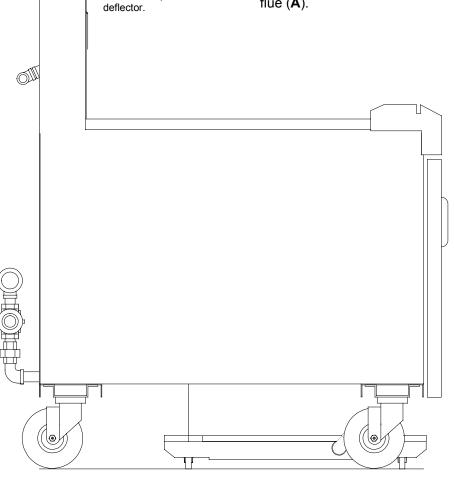

Ensure back panel goes

over the top of the flue