



BUN BUFFER LANDING ZONE (BBLZ) INSTALLATION INSTRUCTIONS

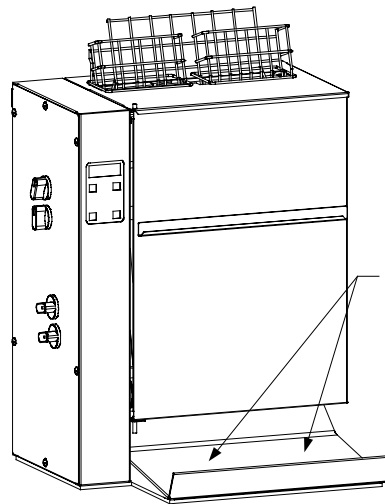

After toasting, the buns drop onto the bun tray, heels to the left and crowns to the right.

Check the temperature at these locations.

1. Before installing the Bun Buffer Landing Zone (BBLZ), the temperature of the bun tray must be checked for proper temperature. Turn on the toaster and allow it to warm up for at least 30 minutes, then using a calibrated pyrometer, check the areas shown in the illustration above. The minimum temperature must be 130°F. If the temperature is lower than this, call your local Factory Authorized Service Center (FASC) for service.
2. Once the temperatures have been confirmed, install the BBLZ as shown in the illustrations below.

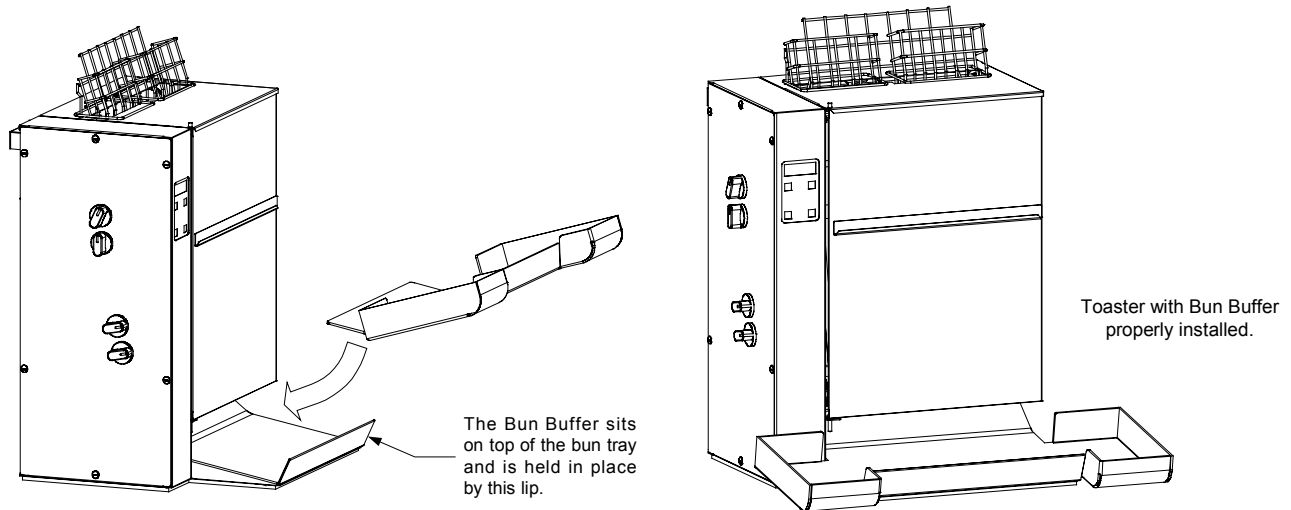

3. After installation, use the toaster and BBLZ as instructed by the Bun Buffer Landing Zone training materials received from McDonald's Corporate.