

D65 Fryer Assembly Instructions

The D65 chicken fryer is delivered in two pieces, which must be put together before placement under the hood. Carefully remove the two fryers from the shipping pallets and follow these instructions to connect the two pieces of the fryer system together:

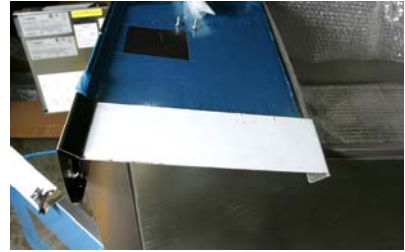


Figure 1: The topcap joiner strip is shown in place on the filter-equipped cabinet.

1. Align the fryers with the open side ports facing.
2. Slide the connecting stainless piece onto the topcap of the filter-equipped cabinet. **See figure 1.**
3. Slide the two fryer cabinets together, slipping the topcap joiner piece onto the smaller cabinet. Leave enough space to access the wiring, flex hose and drain manifolds in the filter- cabinets.
4. Align the oil return flex line visible in the filter-equipped cabinet and connect to the smaller fryer cabinet. **See figure 2**
5. Connect the wires near the return line to their corresponding connections in the smaller cabinet. **See figure 2.**
6. Attach the drain manifold from the larger cabinet to the manifold in the smaller cabinet. **See figure 2.**
7. Assemble the gas manifold, attaching the larger assembly to the filter-equipped larger cabinet. **See figure 3.**
8. Assemble the smaller gas manifold, attaching it to the larger fryer and the smaller cabinet. **See figure 4.**



Figure 2: The drain manifold, oil return flex line and the wiring necessary to attach the filter-equipped cabinet to the smaller cabinet are visible above. The fryers must be removed from the pallet before battering.



Figure 3: The larger gas manifold assembly is shown attached to the filter-equipped cabinet.



Figure 4: The smaller gas manifold is shown attached to the filter-equipped cabinet and held where it would be attached to the smaller cabinet. Note the closer spacing of the gas connections on the extension, which accommodates the more closely spaced gas lines on the non-filter cabinet.



Figure 5: A joiner strip straddles the two fryer sides, holding them tightly together at the frypots.

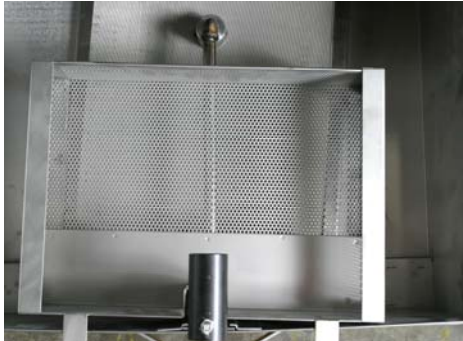


Figure 7: Assemble the components of the filter pan, ensuring the crumb tray is in place. See the filter manual for detailed instructions on assembling the inner filter screen.



Figure 9: The menu strip below the buttons must be changed to reflect the menu chosen for the computer.



Figure 10: Attach the splash guard, if needed, on the outside frypot.



Figure 6: An attaching piece, which joins the fryer cabinets at the door frame, is shown held in place in the door facing of the filter-equipped cabinet.



Figure 8: Place the flue attachment with a basket rack above the vat intended for french fries.

9. Align the joiner strip, which connects the two fryers at the frypots. **See figure 5.**
10. Remove the filter-equipped fryer's door, which is adjacent to the smaller unit. Position the attaching piece and secure the two cabinets together with screws. Replace the door. **See figure 6.**
11. Assemble the filter screen assembly, and install the filter pan. **See figure 7.**
12. Position the basket-rack equipped flue attachment above the french fry vat. **See figure 8.**
13. Position the computer-mounted menu strip on the fryer vat set for french fries. **See figure 9.**
14. Attach, if needed, the frypot splash guard. **See figure 10.**

Call 800-551-8633 with any questions

