
Heat Station Cabinet Upper Tray Installation Instructions

The tray for this cabinet is shipped in a lowered position. It's telescoped into the cabinet. It must be raised to its operating height and a tray stop, which secures the product tray, installed when the unit is placed in a restaurant. Follow the steps below to raise the tray and install the stop:

Tray is shown in the lowered shipping position here. The dotted line drawing represents the raised operating position.

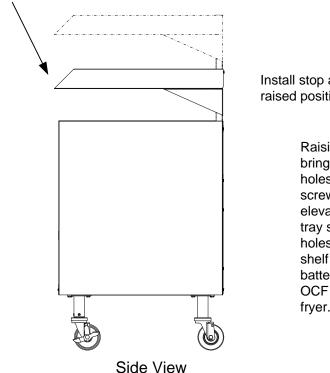

Install stop after the tray is in the raised position.

Raising the tray brings pre-drilled holes into view for screws to secure the elevated tray and the tray stop. Use lower holes, which raise the shelf higher, when battering station to an OCF gas or electric fryer.

- Raise the tray to its operating height. Install the screws (A), which hold it at the proper height.
- Attach the stop, which prevents rearward motion of the product tray, in position B shown in the right drawing.

Back View