


# LOV Automatic Top-Off Kit

826-2894, 2895, 2896, 2897

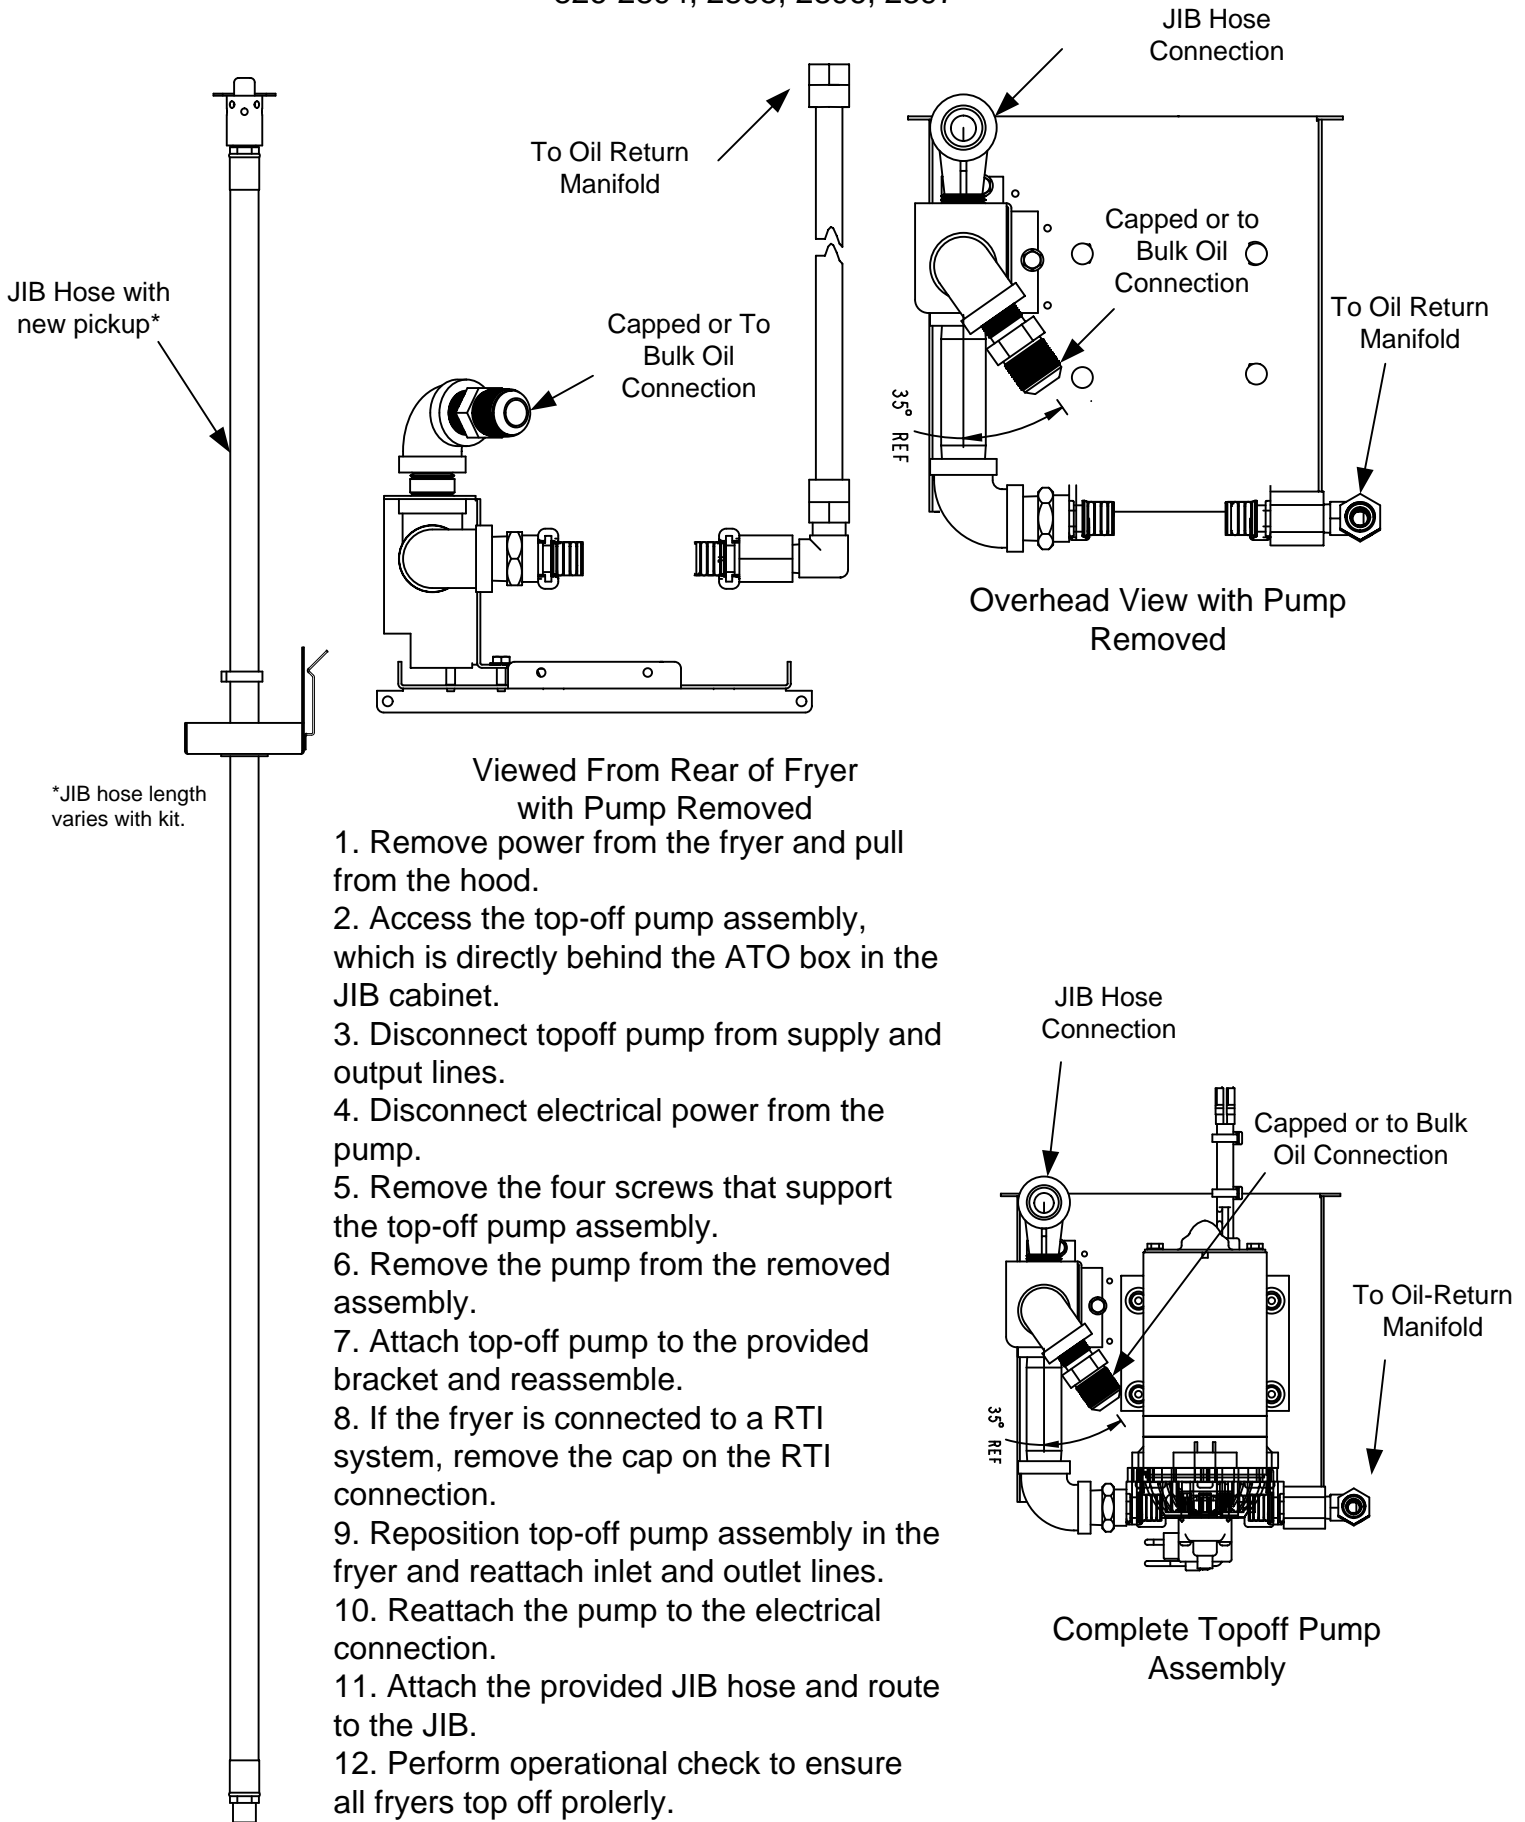

- Viewed From Rear of Fryer with Pump Removed
1. Remove power from the fryer and pull from the hood.
  2. Access the top-off pump assembly, which is directly behind the ATO box in the JIB cabinet.
  3. Disconnect topoff pump from supply and output lines.
  4. Disconnect electrical power from the pump.
  5. Remove the four screws that support the top-off pump assembly.
  6. Remove the pump from the removed assembly.
  7. Attach top-off pump to the provided bracket and reassemble.
  8. If the fryer is connected to a RTI system, remove the cap on the RTI connection.
  9. Reposition top-off pump assembly in the fryer and reattach inlet and outlet lines.
  10. Reattach the pump to the electrical connection.
  11. Attach the provided JIB hose and route to the JIB.
  12. Perform operational check to ensure all fryers top off properly.