


CABINET LOCKING BRACKETS

STEP 1: REMOVE THE FAR RIGHT AND LEFT DOORS FROM THE CABINET.

STEP 2: PLACE THE BRACKET UP AGAINST THE CABINET SIDE AS SHOWN.

STEP 3: LOCATE THE MOUNTING HOLE OF THE HOOD AND ALIGN WITH THE SLOT OF THE BRACKET.

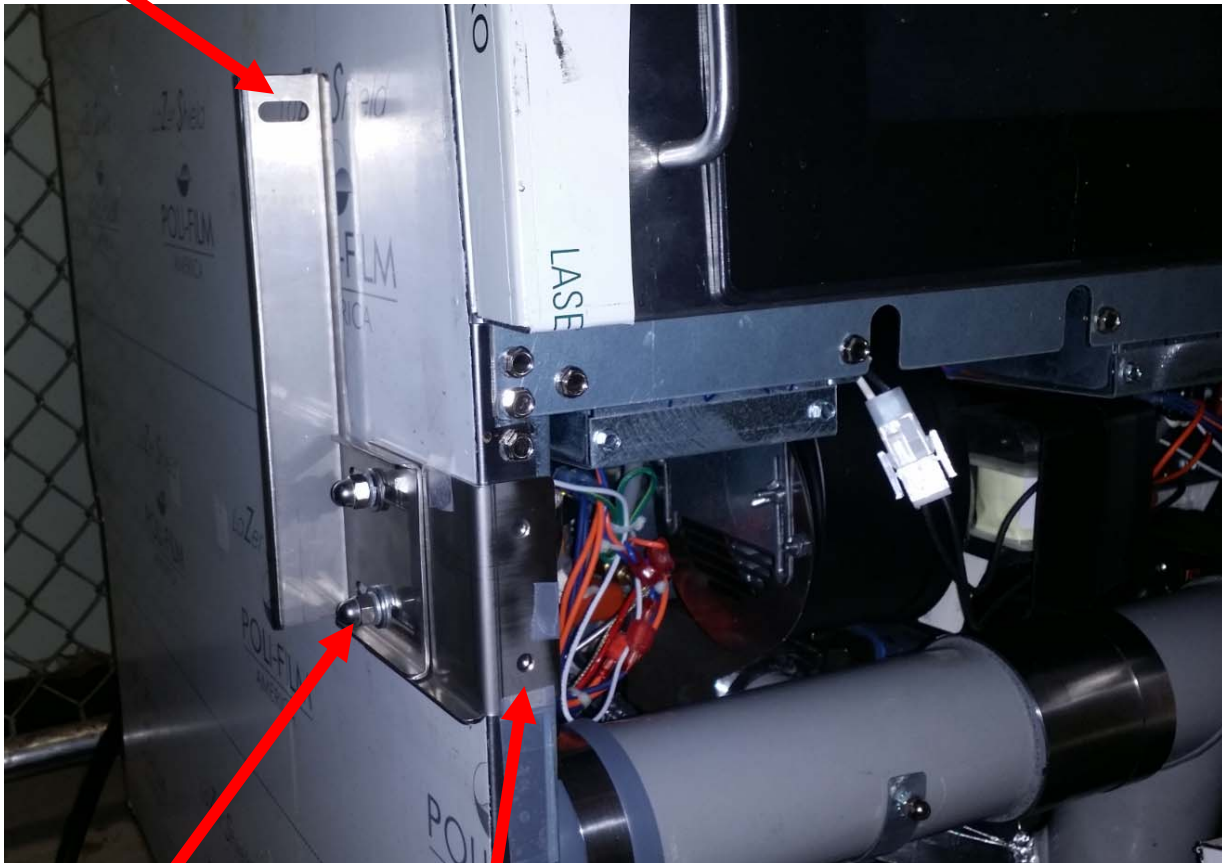

STEP 4: ONCE THE LOCATION IS FOUND. MARK WHERE THE BRACKET WILL BE MOUNTED TO THE CABINET SIDE AND DRILL A .145 DIA HOLE. USE THE SUPPLIED CABINET SCREWS TO SCREW THE BRACKET IN PLACE.

STEP 5: LOOSEN THE ACORN NUTS TO ADJUST THE FRONT TO BACK ALIGNMENT. TIGHTEN WHEN FINISHED.

STEP 6: REPEAT THE STEPS FOR THE BRACKET ON THE RIGHT HAND SIDE. PLACE THE DOORS BACK ONTO THE CABINET.