

Instruction Sheet

Subject: Basket Banger Installation Instructions

This kit places a perforated plate above the foam deck for dislodging oil from fry baskets. Follow these instructions to install a basket banger kit on a Frymaster fryer.

Installation requires a nut driver extension and a rubber mallet.

1. Turn fryer off and allow it to cool.
2. Move the fryer from the hood to gain access to the back.
3. Remove the screws securing the upper back panel. Some screws in slotted holes can be loosened. (See **Figure 1**.)
4. Remove screws securing flue to fryer. This requires a nutdriver with an extension.(See **Figure 2**.)
5. Use a rubber mallet and blunt object to tap the existing joiner strip from between the frypots.
6. Slip the upward extended lip of the joiner from under the



Figure 1



Figure 2: Remove top back panel (top) and four screws (two at each end) securing the flue. (See inset images above).

top cap by elevating the joiner strip on the opposite end. (See **Figure 3**).

7. Slip the extended lip of the new joiner strip, with the banger-holding brackets near the front of the fryer, under the top cap and slip the new joiner strip into place between the frypots. The rear upturn will be under the flue when it is returned to the fryer. (See **Figures 4,5**.)



Figure 3



Figure 4



Figure 5: The new joiner strips, right and left, with a basket banger brackets are shown on the right side of the fryer.

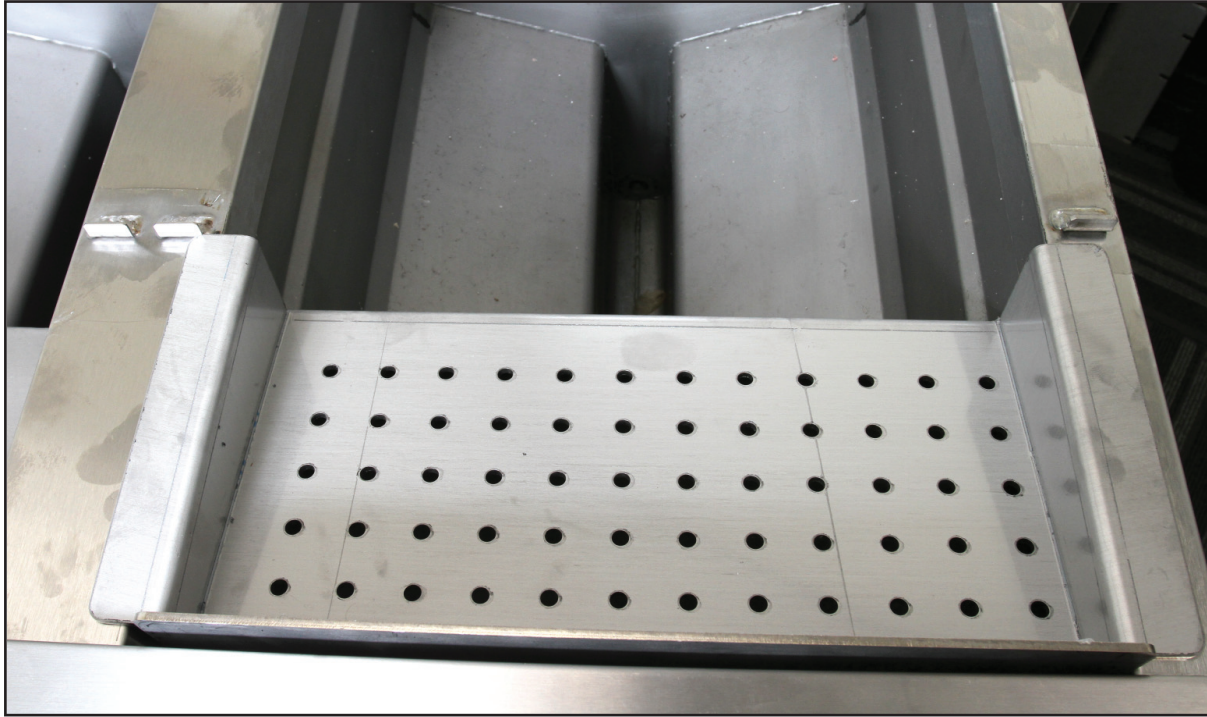


Figure 6

8. Position the bracket-equipped right and left strips. (See **Figure 5.**)
9. Replace the upper back panel.
10. Return the flue to the fryer.
11. Position the banger (See **Figure 6.**) behind the brackets on the installed joiner strips.
12. Return the fryer to service.