

Instruction Sheet

Subject: Front Gas Connection Plumbing Assembly Installation Instructions

Models affected: H55 Single Footprint
03/10/2022

1. After removing unit from crating ensure that the circled elbow is oriented as shown (see Figure 1). If there is a need to adjust this elbow only do so by tightening the plumbing.
2. Using supplied Loctite 567 sealant (see Figure 2).



Figure 1



Figure 2

3. Apply sealant to plumbing extension as shown (see Figure 3).



Figure 3

4. Fasten plumbing extension to elbow circled in step 1 being sure to tighten so that there are not leaks. Plumbing should now be as shown in Figure 4.



Figure 4

Continue to Page 2

5. Tighten plumbing as shown in circled elbow and move gas line extension so that it is parallel with the cabinet side (see Figure 5).



Figure 5

6. Loosely attach bracket to plumbing with supply U-bolt hardware (see Figure 6).



Figure 6

7. Remove cabinet screw and lift plumbing to attached bracket as shown then tighten U-bolt hardware (see Figure 7).

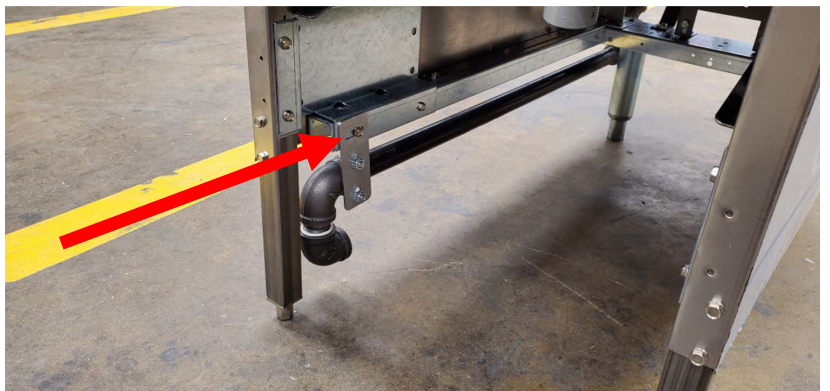


Figure 7