

# Instruction Sheet

Follow these instructions to install a rear cover on an SPV PowerRunner Fryer.

**Subject: 8263750 Attaching a PowerRunner SPV Rear Cover**

**Models affected: PowerRunner SPV Fryers**

In This Kit		
Part #	Description	Qty
2201847	COVER, REAR	1
8090412	SCRW, #10-1/2 HX WSHR HD NP	6
8090361	SCRW, DRLL #8X1/2 HX HD ZP	6
8198000	INSTRUCTIONS	1

1. Remove the rear cover of the fryer.
2. Starting at the top of the fryer, align the new rear cover to the existing holes on the rear of the fryer and attach using the 5/16" head screws removed in step # 1 (see Figure 1). Ensure the top of the rear cover is angled towards the front of the fryer.
3. Attach the lower five (5) holes shown in Figure 2 with the supplied 1/4" head drill point screws. There are no holes in the existing cabinet and a 1/4" impact or power drill is required.



Figure 1

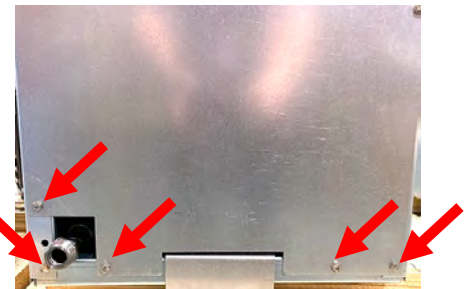


Figure 2