


NEW STYLE ONE-PIECE FILTER MAGIC II FILTER PAN

This new one-piece pan replaces both inner and outer pan assemblies.

When this pan is used in older FM II Frymaster fryers in place of the previous two-piece Filter Magic II pan assembly:

1. Be certain that the heater contacts in the white nylon contact block below the filter pump slip fitting are recessed (inset about 1/8"-1/4"). If contacts are NOT recessed, unplug fryer from the wall. Either remove or cut the wires going to the block and insulate the ends, or remove the entire block and insulate the wire ends.
2. The green "FILTER READY" light will not illuminate. This is normal.

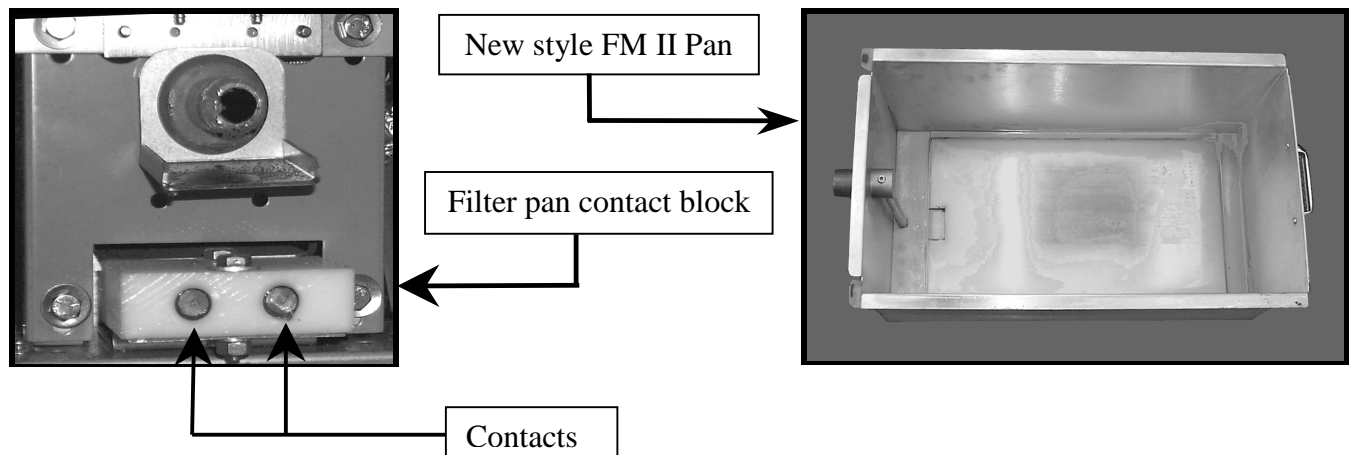

Additional information:

- ◆ **This pan is designed to be used with filter paper or 19" x 10" aftermarket pads only.** Due to the built-in pump connector on this pan, it may not be possible to use some aftermarket filter screen or pad systems.
- ◆ A pan heater is no longer used. In this new pan, the suction tube runs inside the pan and is heated by the hot drained shortening.
- ◆ The old style inner filter pan is not used with the new pan.
- ◆ The filter paper hold-down ring and crumb screen are the same as the previous style.
- ◆ If your present flat filter support screen will fit, use it. If it is the "Sana-Grid" aluminum mesh and is too long for the new pan, you may cut 5/8" off one end. If your screen is another style and won't fit into the recess in the new pan, contact your local service company to order a replacement screen. The part number for the correct screen is 810-1229.