


INSTALLATION INSTRUCTIONS

MECHANICAL BASKET LIFT TIMER REPLACEMENT KIT (826-1552)

1. DISCONNECT UNIT FROM POWER SUPPLY.
2. MARK WIRES AND DISCONNECT FROM TIMER TO BE REPLACED.
3. REMOVE TIMER TO BE REPLACED.
4. FOR THE TIMER BEING REPLACED, REAM OUT EXISTING HOLES 1/4" TOWARDS CENTER OF PANEL AS SHOWN IN ILLUSTRATION.
5. INSTALL NEW TIMER AND RECONNECT WIRES DISCONNECTED IN STEP 2.

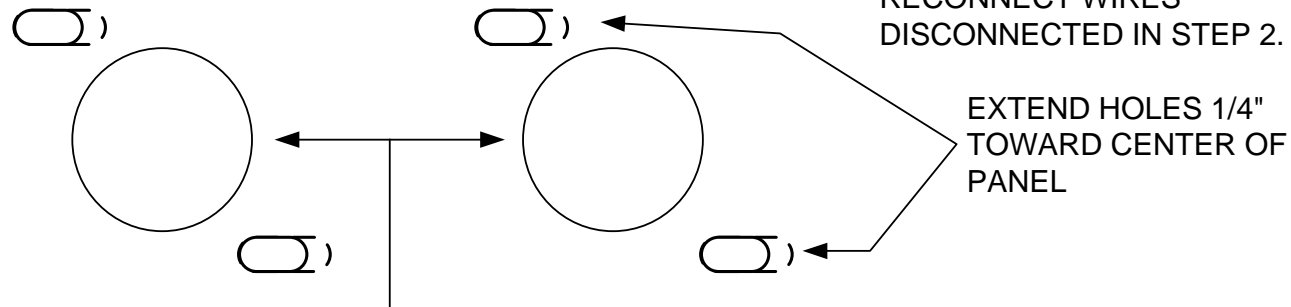

NOTE: IF NECESSARY TO OBTAIN CLEARANCE BETWEEN NEW TIMER AND FRAME, EXTEND THESE HOLES TOWARD CENTER OF PANEL ALSO.