



Wingstreet Gas Fryer K3000 Controller and Drain Switch Wiring Kit

826-3025, 826-2858


1. Remove power from the unit.
2. Remove the screws attaching the bezel and remove the bezel. Discard the bezel.

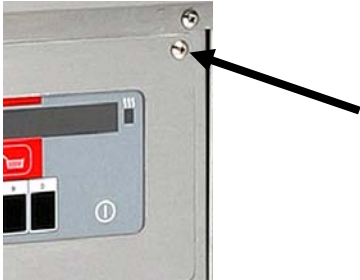


3. Remove the screws and lower the controller.

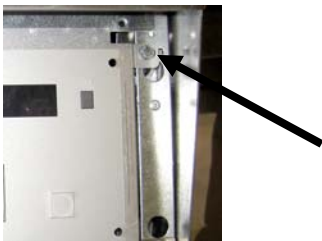

4. Unplug the controller cable and ground wire.

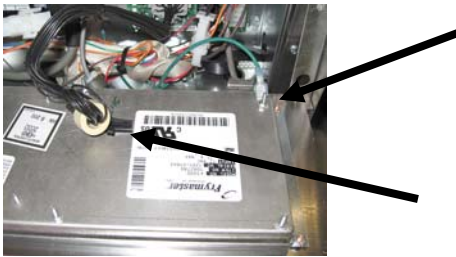

5. Remove the old controller.
6. Unplug the two-pin plug in the component box, leading to the drain switch. This plug is identified by black and brown wires on one side of the plug and black and red on the other side.

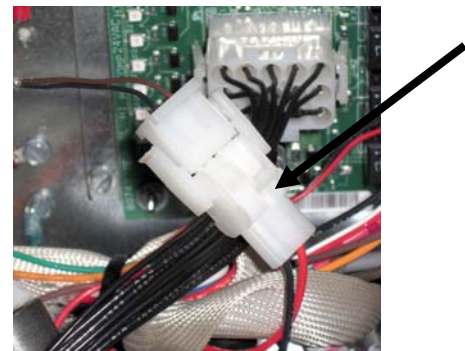

In This Kit*		
*A bezel, not included in the kit, is required for two and three-vat fryers.		
Part No.	Description	Qty
108-3827	WingStreet K3000 114 Old Style (only in kit 8263025)	1
108-2728	WingStreet K3000 114 New Style (Only in kit 826-2858)	1
823-8352	Control Panel (only in kit 826-3025)	1
230-8309	Bezel 114 (Only in kit 826-2858)	1
807-4977	Menu Strip	1
819-6943	Wingstreet K3000 Manual	1
819-6944	Wingstreet K3000 QR	1
819-6662	K3000 Setup Instructions	1
819-6941	Drain Switch Wiring Instructions	1
819-0359	Screws	2
108-3828	Harness Hi-Limit	1
807-5361	Harness Drain	1

*NOTE: **Two-vat** fryers will require a new bezel not included in this kit for: **230-7406 for new style FPP.**


Three-vat fryers will require bezel **230-8310 for new style FPP.**

Older non-FPP fryers used single bezels.


Wingstreet Gas Fryer K3000 Controller and Drain Switch Wiring Kit

826-3025, 826-2858

7. Insert the two-pin jumper wire into the female end of the two-pin plug, unplugged in step 6, with the red and black wires. This will jump out the circuit between the interface board and high limit. Refer to wiring diagram on the following page.

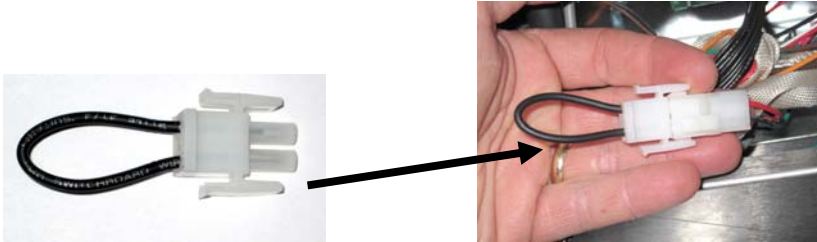


8. Plug the new supplied harness into the male end of the two-pin plug drain switch, unplugged in step 6, with the brown and black wires. Refer to wiring diagram on the following page.

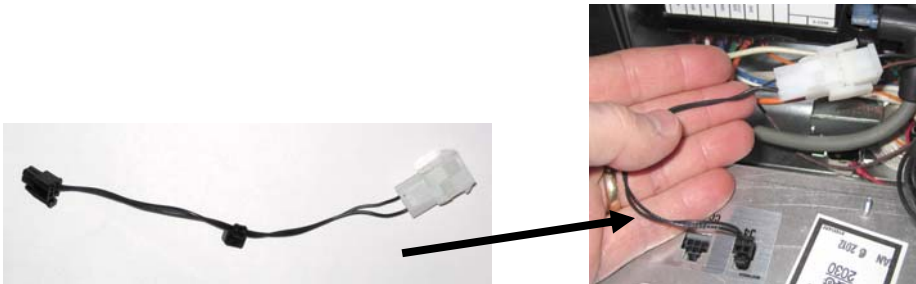

9. Install the new controller into the slots. Plug the 20-pin plug and the new 4-pin harness, attached in step 8, into J4 on the controller as shown in the photo below. Attach the ground wire to the corner spade shown below.



10. Install menu strip by sliding into the slot on the left side of the controller.

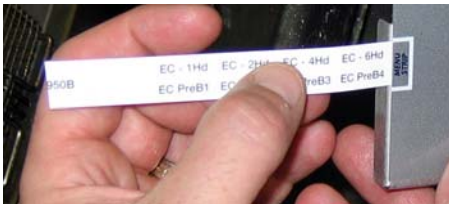

11. Raise the new controller up and install screws.

Wingstreet Gas Fryer K3000 Controller and Drain Switch Wiring Kit

826-3025, 826-2858

12. Install the new bezel using the enclosed screws.
13. Restore power to the fryer and test operation. (If controller does not power up, ensure all the connections to the controller are seated correctly).
14. Refer to 819-6662 K3000 Setup Instructions to program the controller.

Wiring Diagram

