


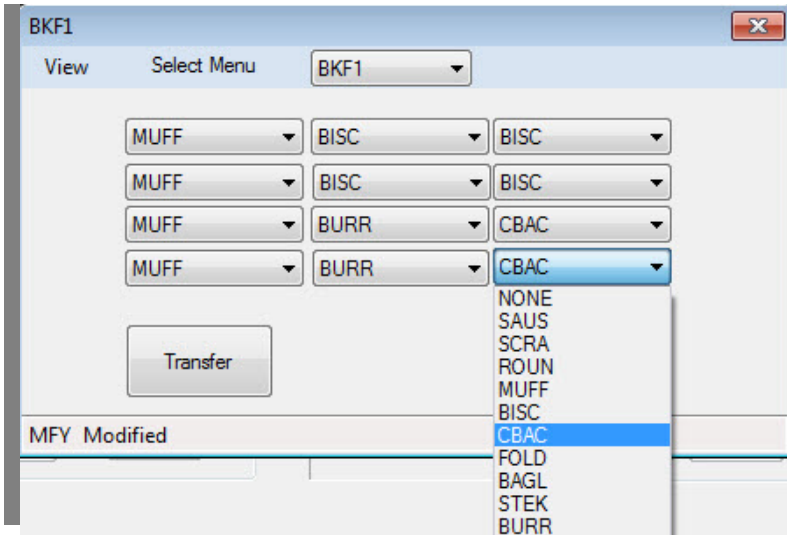

UHC-P

Mini Computer-Based Software Instructions



Frymaster, a member of the Commercial Food Equipment Service Association, recommends using CFESA Certified Technicians.



24-Hour Service Hotline 1-800-551-8633
Email: service@frymaster.com

Price: \$6.00
819-6790
SEPT 13

NOTICE

IF, DURING THE WARRANTY PERIOD, THE CUSTOMER USES A PART FOR THIS MANITOWOC EQUIPMENT OTHER THAN AN UNMODIFIED NEW OR RECYCLED PART PURCHASED DIRECTLY FROM FRYMASTER/DEAN, OR ANY OF ITS AUTHORIZED SERVICE CENTERS, AND/OR THE PART BEING USED IS MODIFIED FROM ITS ORIGINAL CONFIGURATION, THIS WARRANTY WILL BE VOID. FURTHER, FRYMASTER/DEAN AND ITS AFFILIATES WILL NOT BE LIABLE FOR ANY CLAIMS, DAMAGES OR EXPENSES INCURRED BY THE CUSTOMER WHICH ARISE DIRECTLY OR INDIRECTLY, IN WHOLE OR IN PART, DUE TO THE INSTALLATION OF ANY MODIFIED PART AND/OR PART RECEIVED FROM AN UNAUTHORIZED SERVICE CENTER.

THE UHC-P IS NOT SUITABLE FOR OUTDOOR USE. WHEN OPERATING THIS UNIT, IT MUST BE PLACED ON A HORIZONTAL SURFACE.

THE UHC-P IS NOT SUITABLE FOR INSTALLATION IN AN AREA WHERE A WATER JET CAN BE USED. THIS APPLIANCE MUST NOT BE CLEANED WITH A WATER JET.

FOR YOUR SAFETY

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

DO NOT OPERATE OR SERVICE THE UHC-P WITHOUT FIRST READING THIS MANUAL.

DO NOT OPERATE THE UHC-P UNLESS IT HAS BEEN PROPERLY INSTALLED AND CHECKED.

DO NOT OPERATE THE UHC-P UNLESS ALL SERVICE AND ACCESS PANELS ARE IN PLACE AND PROPERLY SECURED.

DO NOT ATTEMPT TO REPAIR OR REPLACE ANY COMPONENT OF THE UHC-P UNLESS ALL POWER TO THE UNIT HAS BEEN DISCONNECTED.

USE CAUTION WHEN SETTING UP, OPERATING, OR CLEANING THE UHC-P TO AVOID CONTACT WITH HEATED SURFACES.

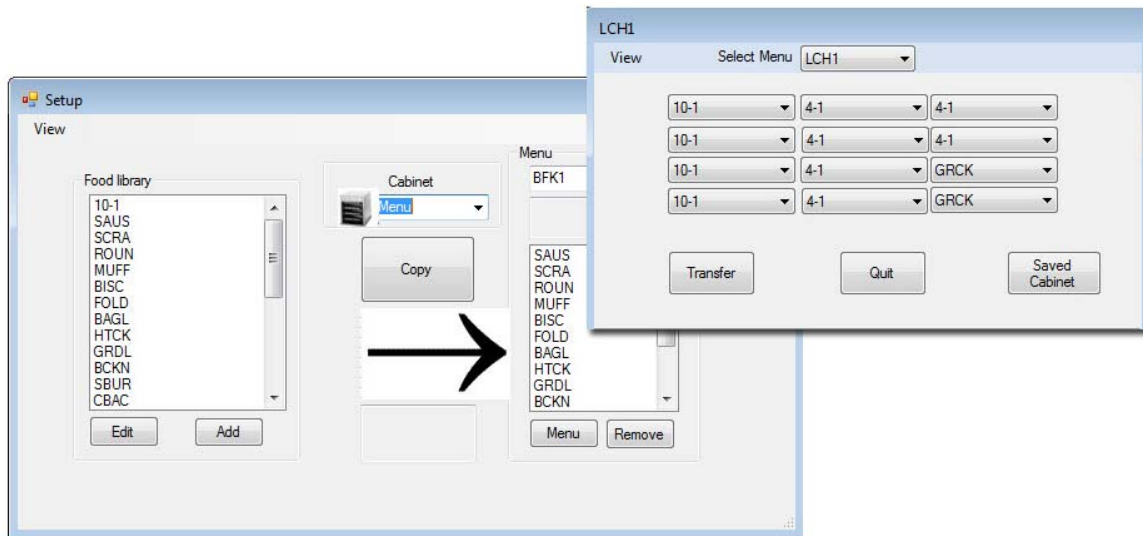


Table of Contents

Chapter	Page
Warranty/Software/Hardware Availability	i
Before You Start	1-1
Getting Started: Choosing Cabinet Size, Language	2-1
Software Interface Annotation	3-1
Building Menus	4-1
Configuring Cabinets	5-1
Entering/Editing Products	6-1
Transferring Data to the Cabinet	7-1
Saving Cabinet Configurations	8-1
Communication Troubleshooting	9-1



Please note, the mini computer, the UHC-P software and the IR dongle are all specially configured by Frymaster for communication with the UHC-P cabinet. The computer and the dongle ARE NOT available from their original manufacturers or other suppliers configured for the cabinet. Replacements must be ordered from Frymaster.



Warranty

The mini computer is warranted for 10 months from date of receipt by its manufacturer. **You must register it at upon receipt.** Computer issues should be coordinated with the computer manufacturer. Do not return the computer to Frymaster.

The dongle is warranted for 10 months from date of receipt by Frymaster.

1 Before You Start

- All cabinet configuration work with the minicomputer and the software should be done in the back office. **Only bring the computer into the kitchen when ready to update the cabinets.**

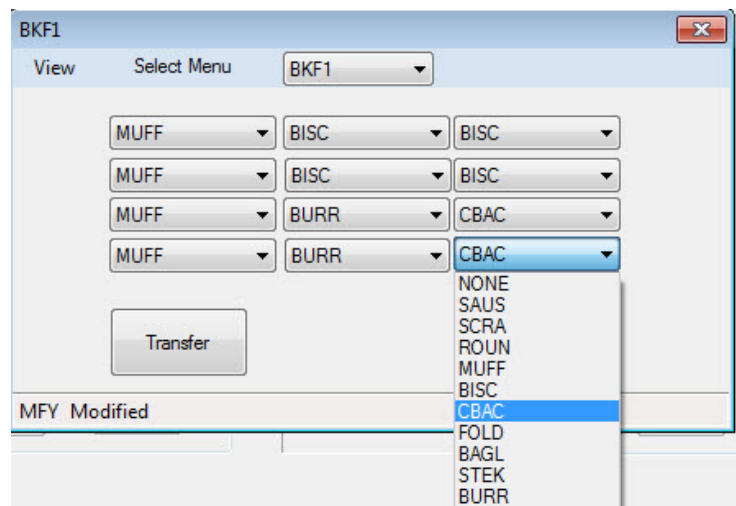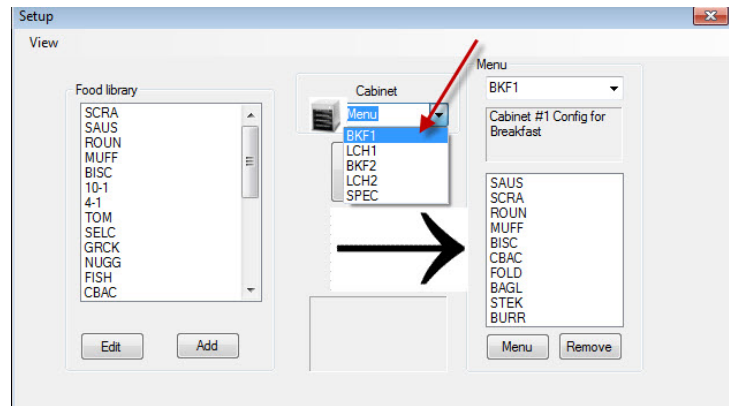


- Cabinets should be labeled — UHC1, UHC2 — to ensure the menus/configurations and cabinets are properly matched when updating UHC-P's.

2 Getting Started: Choosing Cabinet Size, Language



1

1. Scroll to the UHC-P icon with the **►** key. Ensure it is encircled by the highlight box.*
2. Hit Enter.
3. The login screen appears.
4. Click Login

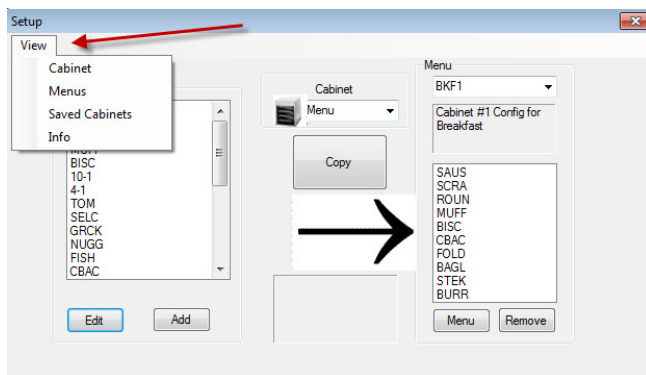


3

1. The setup screen appears.
2. Click on View.
3. In the pulldown, select Cabinet.


*Launch instructions are for Windows 8 operating systems. On earlier operating systems, the UHC-P icon is visible on the desktop. Double-click the icon to start the program. The program and all dialog boxes are the same on either operating system.

***NOTE:** Serial port number is displayed only if the dongle is attached. The number displayed with the dongle attached is assigned by the computer and may not match number shown here.

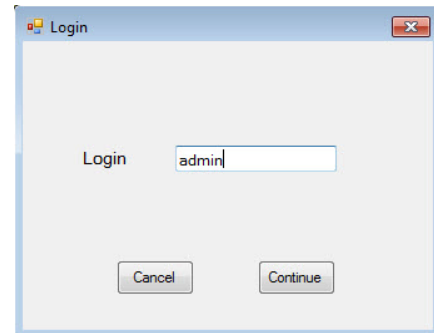

2

1. Click in the Login window and type admin. Click Continue.

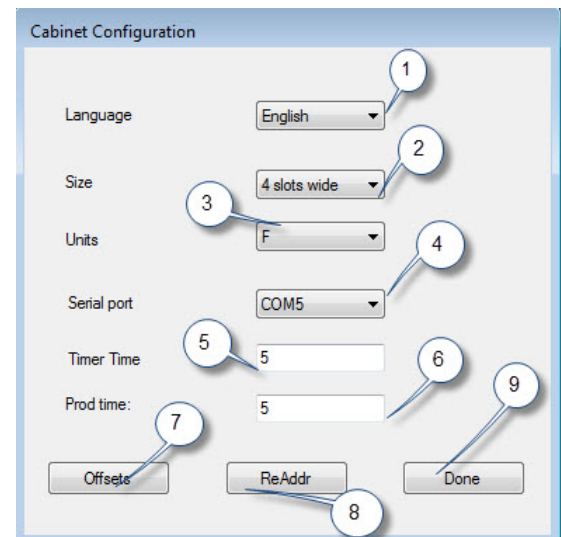

4

1 Language: Choose a language for the software interface and the cabinet's menu from the pulldown.

2 Size: Choose the size of the cabinet to be programmed: 4-slot wide, 2- slot wide or narrow.

3 Units: Choose the temperature scale to be displayed F for Fahrenheit, C for Celsius.

4 Serial Port:* Com port selection; handled by software. Communication troubleshooting covered in Chapter 9.

5 Prod Time: The amount of time the product name is displayed on the cabinet before switching to the remaining hold time for the product.

6 Timer Time: The amount of time the remaining hold time is displayed before switching to the product name.


7 Offsets: Used in calibrating the cabinet. Covered in Chapter 8.

8: Re-Addr: A technical function covered in the service manual.





9 Done: Used to save changes and exit the screen.

3 Software Interface Introduction

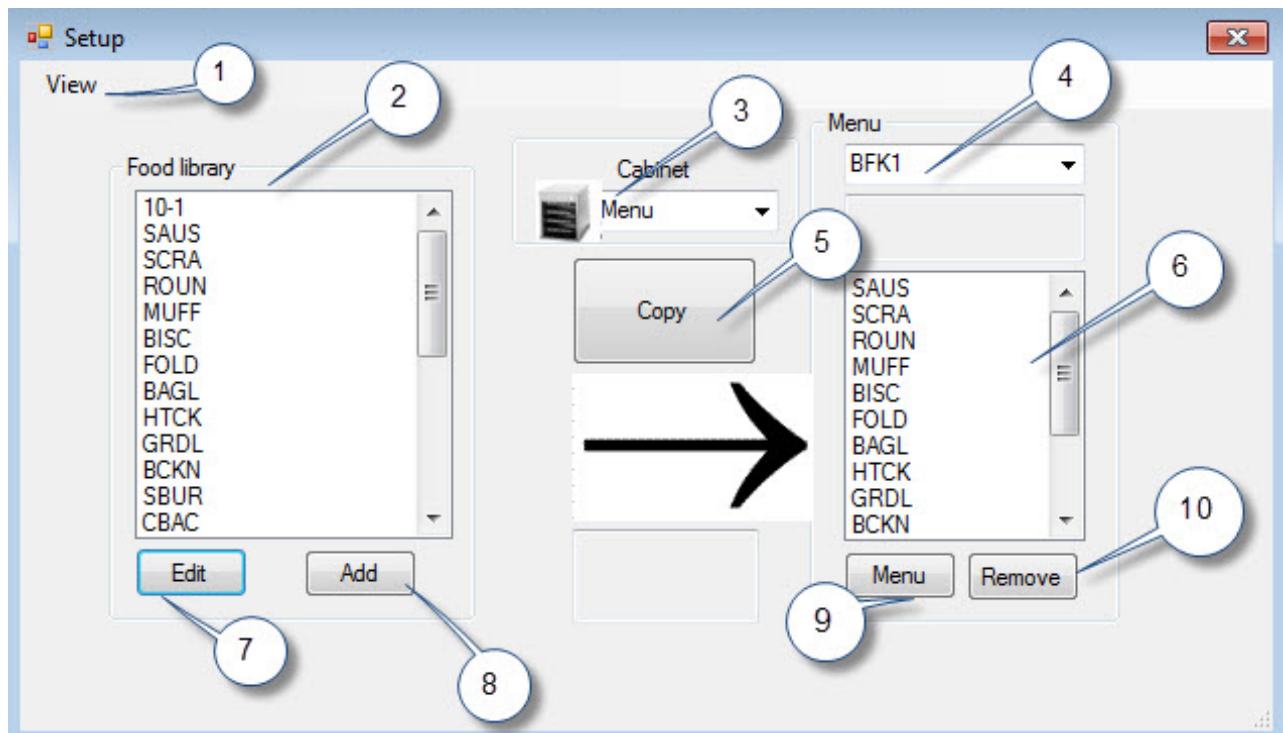A number of screens are used to navigate the UHC-P software. The features of the software are annotated below:



Setup Screen Feature	Image
1 View: Click here to view: <ul style="list-style-type: none"> Cabinet, where cabinet is configured for language, size, temperature range. Interface is in this section. Also described in Chapter 2. Menus, described in Chapter 4. Saved Cabinets, covered in Chapter 8. Info, software version data. 	
2 Food Library: Food items and their holding parameters are entered and stored here. They must be moved to a menu on the opposite side to be accessible on the cabinet.	
3 Cabinet: Used to display cabinet configured for chosen menu or to display for reconfiguring of selected menu.	
4. Menu: Use to select menu to build in the menu window.	
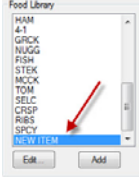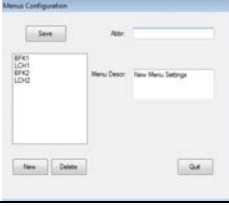
<p>5 Copy: 1 Highlight an item in the Food Library. 2 Click on Copy. 3 It moves to the displayed menu.</p>	
<p>6 Menu: View items in the menu for use on a cabinet configuration.</p>	
<p>7 Edit: Use to edit the holding parameters for an existing product or to establish the parameters for a new product. Featured covered in Chapter 6</p>	
<p>8 Add: Click to begin the process of adding a new product.</p>	
<p>9 Menu: Displays existing menus and allows for the creation of additional menus. Five is the maximum. Feature covered in Chapter 4.</p>	
<p>10 Remove: Click after highlighting an item in the Menu window.</p>	

The image shows a 'Cabinet Configuration' screen with the following settings and callouts:

- Language:** English (Callout 1)
- Size:** 4 slots wide (Callout 2)
- Units:** F (Callout 3)
- Serial port:** COM5 (Callout 4)
- Timer Time:** 5 (Callout 5)
- Prod time:** 5 (Callout 6)
- Buttons:** Offsets (Callout 7), ReAddr (Callout 8), Done (Callout 9)


Cabinet Configuration Feature	Explanation
1: Language	Select language for software graphics and menu.
2: Size	Set size of cabinet, two, three slots or narrow.
3: Units	Set temperature scale displayed, Celsius or Fahrenheit.
4: Serial port*	Establishes the computer port being used by the IR device.
5: Timer Time	The length of time, in seconds, the remaining hold time is displayed on an active timer before displaying the product name.
6: Prod Time	The length of time, in seconds, the product name is displayed on an active timer before displaying the remaining holding time.
7: Offsets	Used to calibrate the cabinet.
8: Re-Addr	Used by a technician when a board or display is changed.
9: Done	Used to exit the screen.

***NOTE:** Serial port number is displayed only if dongle is attached.


The number displayed with the dongle attached is assigned by the computer and may not match number shown here.

4 Building Menus


The cabinet has four menu configurations, which are assembled from food items created and stored in the software's food library. Below is a view of the cabinet's setup screen. Items are created and stored in the food library and moved, as necessary, to the menu column where they will be available to populate row positions on the cabinet as it is configured.

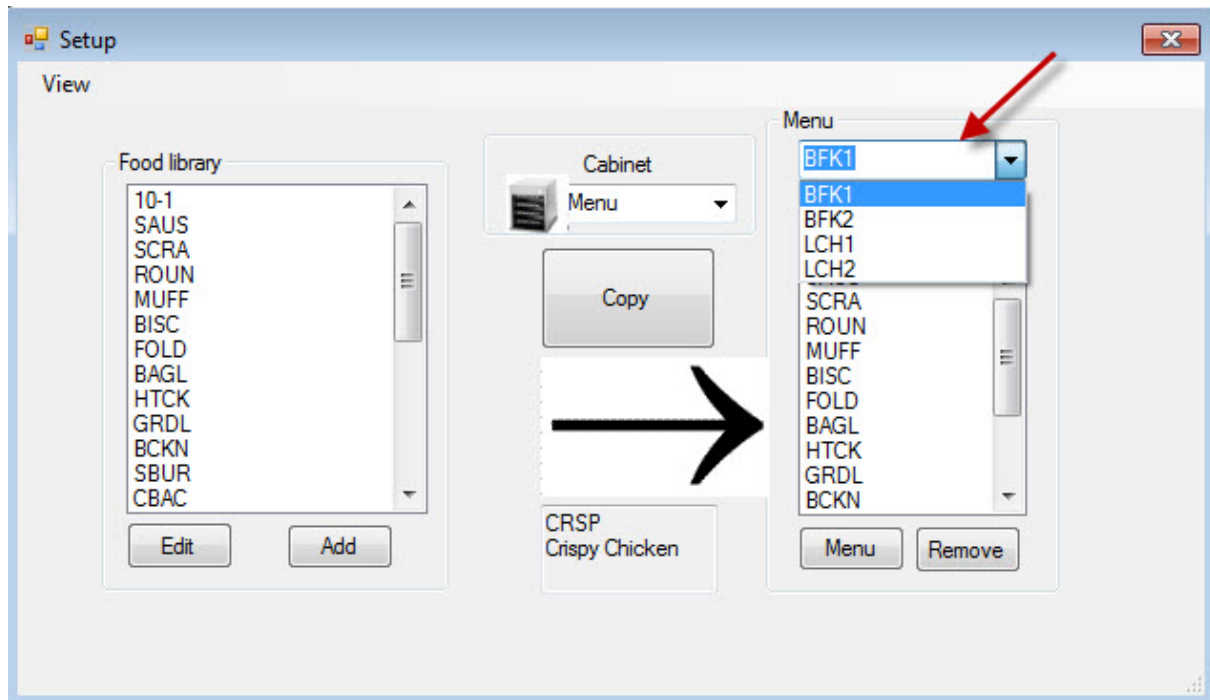

Food items are created and stored in the Food Library (left above). Items are made available for menu-specific cabinet configurations by placing them in menus with the desired name. Food items can be placed in multiple menus, meaning they can be used in multiple menu configurations. Food items are not available for placement in cabinet menu configurations in which they are not listed in the menu of the same name. For example, if 10-1 patties are not listed in the menu for LCH2, they are not available when configuring the cabinet for LCH2.

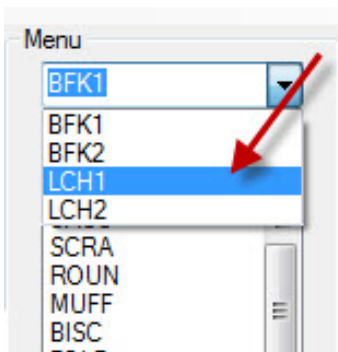

With the pulldown under the Menu setting on the right (see arrow), choose the menu you wish to add items to.

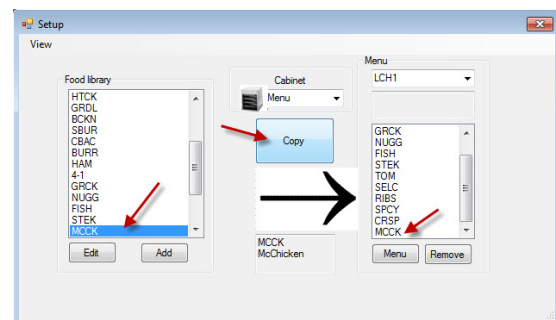


With the desired menu chosen under the Menu pulldown, highlight the item in the Food Library to move to that menu.

Click the copy key and the item appears in the menu window.


Repeat to add more items. All items in the right menu column will be available for placement in the cabinet configuration of the same name. Repeat for all desired items and menus.

4.1 Editing, Renaming, Adding Menus


The software ships with four menu: BFK1, LCH1, BFK2 and LCH2. A fifth can be added. Existing ones can be deleted and new ones introduced. Five is the maximum number of menus. Follow the instructions below to add an additional menu.

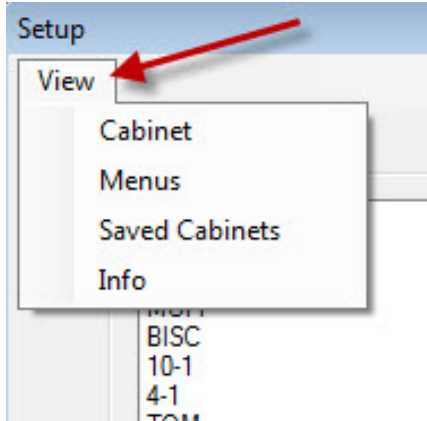

Access the Menu Configuration by highlighting Menu in the View pulldown on the Setup Screen.

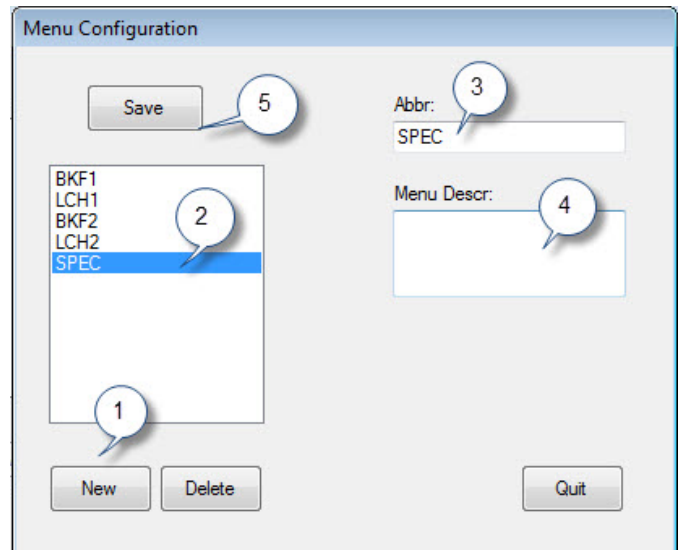

- 1: Click the new button.
- 2: A highlighted New Menu item appears in the menu box.
- 3: Type a four-digit name for the new menu in Abbr. field.
- 4: Add a description, if desired, of the new menu.
- 5: Click the Save button.

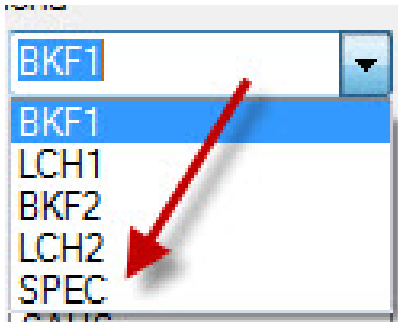


The new menu item will be accessible for populating in the Menu pulldown above the Menu window on the setup screen. Building menus is described in Section 4.


NOTE: An existing menu can be highlighted and deleted by clicking the delete button. A new menu, with a new name, can be created. Follow the steps above.

5 Configuring the Cabinet


The software allows the configuration of up to five menus. It ships with four: BFK1, LCH1, BFK2 and LCH2. Each item is selected separately for each menu configuration. The process starts with the selection of the cabinet menu to configure.

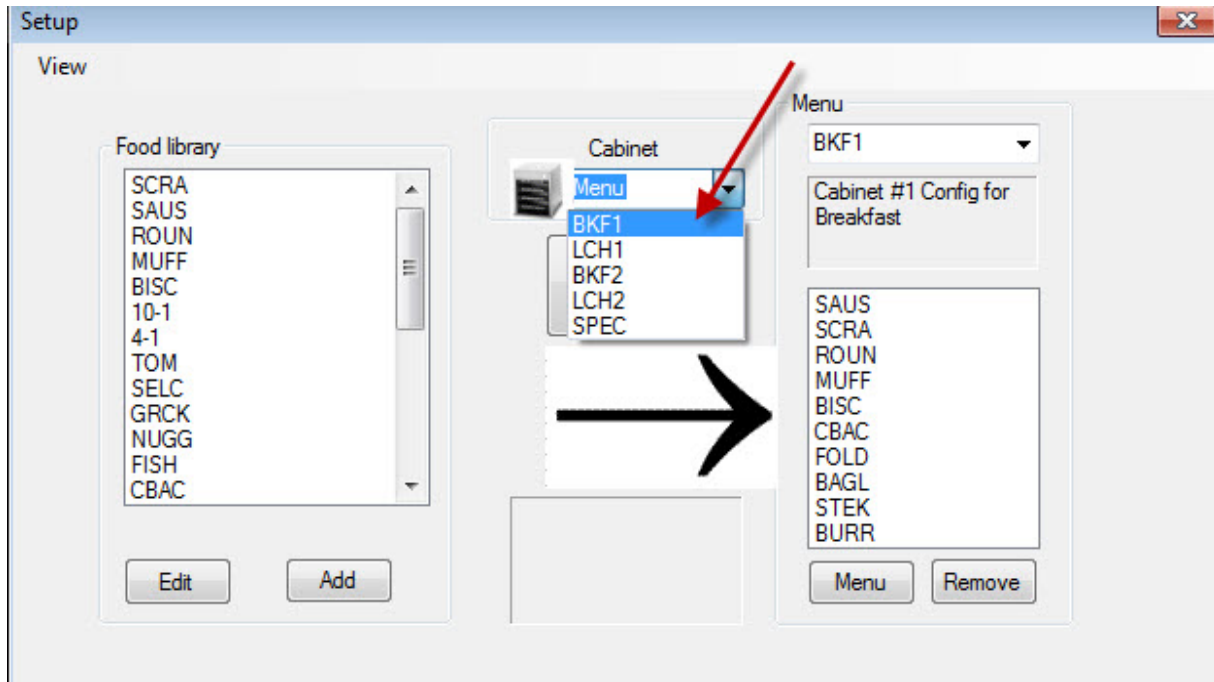

In the Select View pulldown, highlight the menu to be configured. In the view above, BFK1 is chosen. Remember only items in the Menu column with the same name will be available for the cabinet when it is set to BFK1. When the highlighted Select View is double clicked, the cabinet configuration for that menu is displayed (see below).

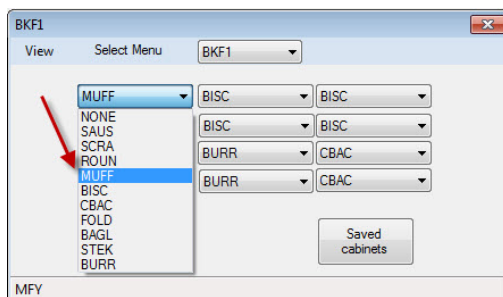

Release the highlighted menu choice under Select View and the cabinet configuration for the chosen menu is displayed. Right click on the top left item and choose an item for that position from the drop-down menu by highlighting your choice.

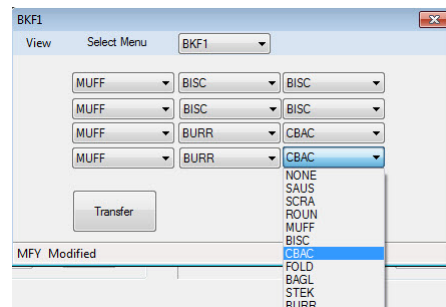


Continue for each row position until all the desired cabinet positions are populated with food items.

NOTE: The left most item establishes the temperature for a row. Items with holding temperatures different than the item in the left position cannot be placed in the middle and right positions.


6 Entering a New Product, Deleting or Editing an Existing Product

Items can be added to the Food Library and then moved to the relevant menus.

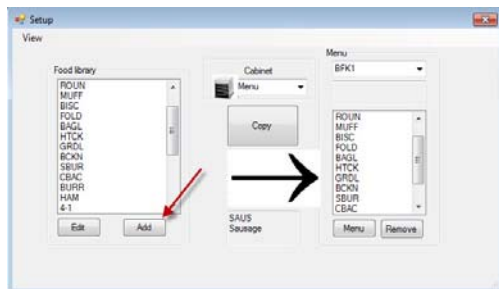

1

In the setup window, click on the Add button (see arrow) below the Food Library window.

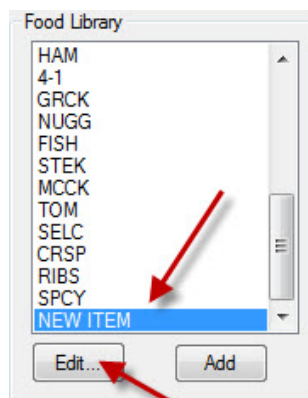

NOTE: New items must have a holding temperature shared by other products.

2

Scroll to find the item named **New Item** in the Food Library and click on it, which highlights the item.

1: Abb: (NUGG)

2: Delete checkbox

3: Descr: (Chicken McNuggets)

4: Temp Top (200)

5: Temp Bott (200)

6: Time(m) (20)

7: CkMr(m) (8)

8: Yellow(m) (5)

9: Red(m) (1)

10: Cancel button

11: OK button

3

In the Edit Food Item window, enter the following details:

1 ABBR: A four-letter abbreviation for the item, which will be displayed on the cabinet.

2 Delete: Click here to delete item.

3 Descr: A short description of the item.

4 Temp Top: The top plate temperature (the temperature the product will be held).

5 Temp Bott: Bottom plate temperature (same as top).

6 Time: Holding time for product (in minutes).


7 Cook More: Time when the Cook More display will be shown.

8 Yellow: Time when Yellow light will be displayed, indicating little holding time is left.

9 Red: Time when Red light will be displayed, indicating holding time is nearly expired.

10 Cancel: Cancels operation without saving data.

11 OK: Click to save entered data.

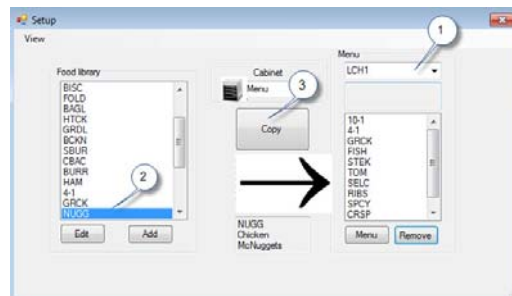


4

To move a newly added item to a menu for use in the cabinet follow these instructions:

1: In the Setup view, choose the menu you want the new item to appear in.

2: Highlight the new item in the Food Library.

3: Click on the Copy button.

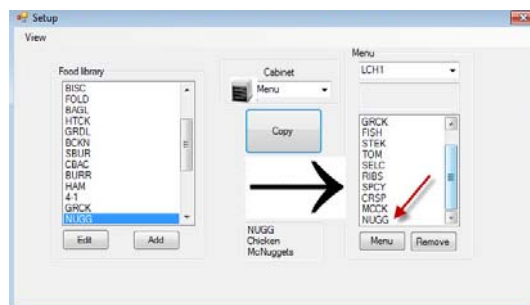

5

The new item (see arrow) is available for placement in a cabinet configuration and transfer to the cabinet.

Change or Delete Items

Change: Existing items can be edited in the same manner. Highlight the item to be edited and start at step 2. Adjust the necessary parameters in step 3 and click OK.


Delete: Start at step 2; highlight item to delete and click delete in step 3. Click OK.

7 Transferring Data to Cabinet


Cabinet configurations built in the software are transferred to the cabinet with the external IR device.




- 1 Hold the IR device in front of the cabinet lens (dark circle at right on the front).

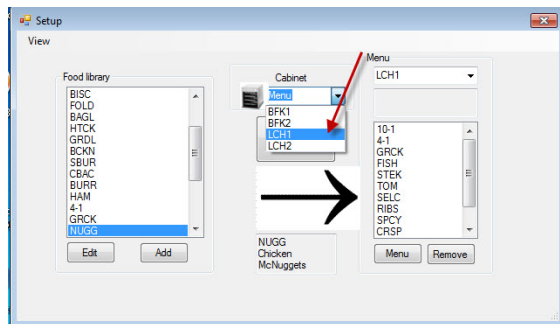


- 2 From the setup screen, navigate to the cabinet view by selecting a cabinet from the Cabinet pulldown menu.

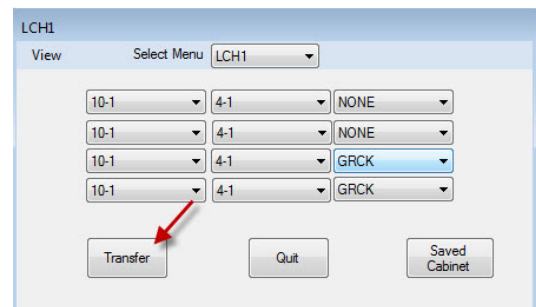

- 3 In the chosen cabinet view, hit the transfer button with the IR device positioned in front of the cabinet's lens. See above.

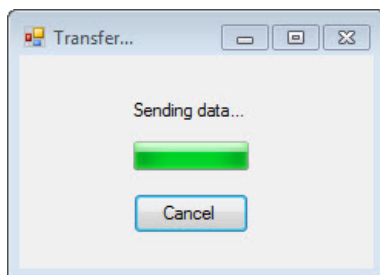


- 4 The computer will display a transfer dialog box with a progress bar.

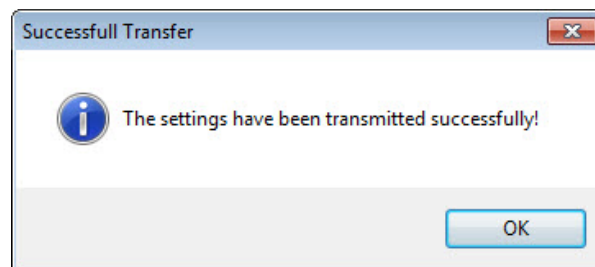

- 5 When the transfer is complete, a Successful Transfer dialog box is displayed. Click OK. The cabinet's Breakfast, Lunch and other menus will now match the cabinet displays on the software.


8 Saving Cabinet Configurations

Cabinet configurations, in groups — like BKF1, BKF2, LCH1 and LCH2 — can be named and saved in the software. These saved cabinet configurations can be reacquired later for transferring to the cabinet. Follow the directions below. Five is the maximum number of menus that can be saved in a cabinet configuration.

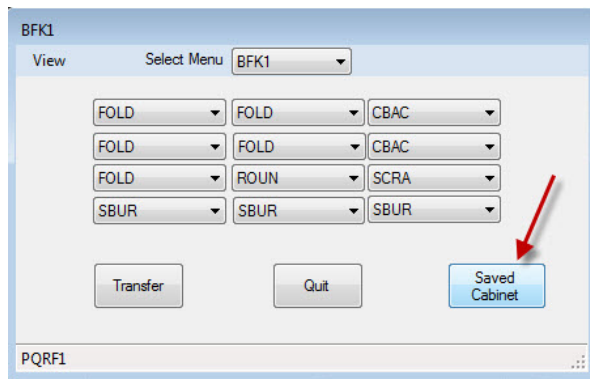


1

With all the cabinets configured, click on Saved Cabinets button.

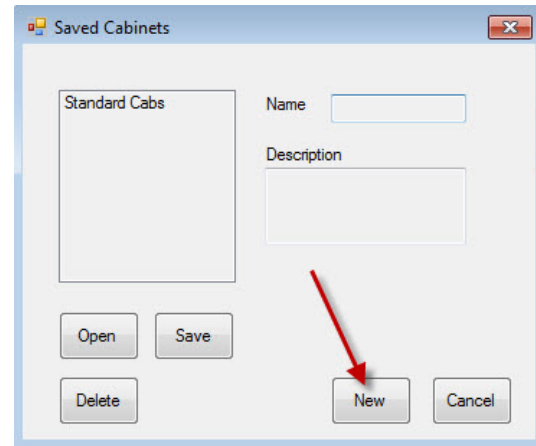


2

In the Saved Cabinets dialog box that appears, click the new box.

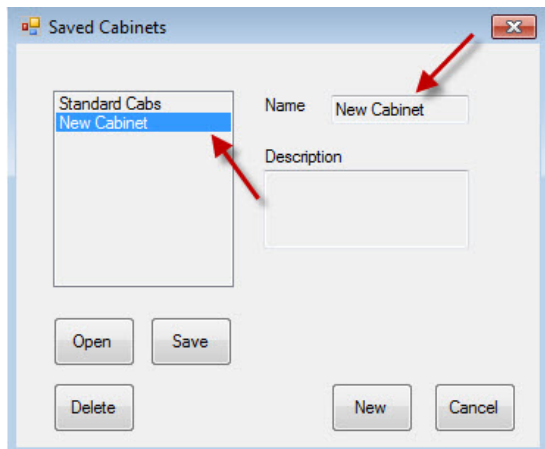


3

New Cabinet appears in the box at left and the field at right.

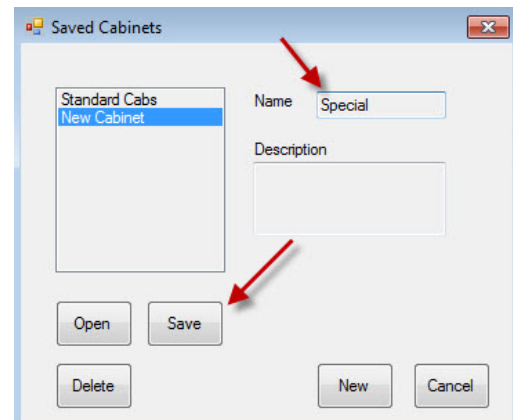

4

Click in the Name field and type the name of the cabinet collection. Click the Save button.

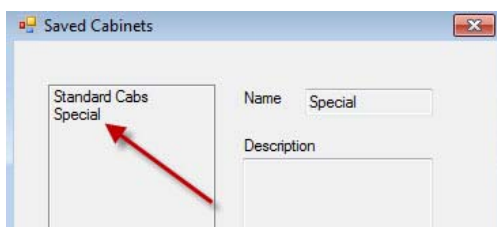


5

The saved cabinet configuration is visible in the box at left.


Loading Saved Cabinets

Follow the directions below to acquire and load saved cabinet configurations.

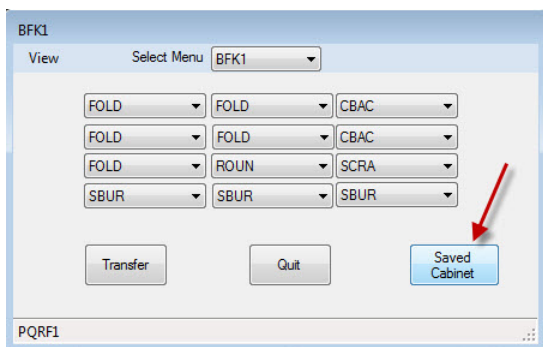

1

In a cabinet view, click on the Saved Cabinet radio button.

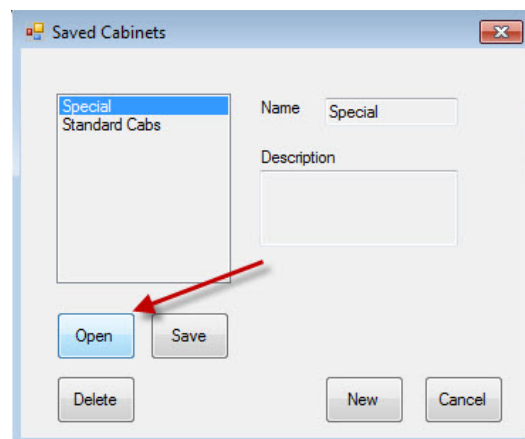

2

In the Saved Cabinet dialog box, highlight the desired cabinet and click Open. The cabinet configurations for BFK1, BKK2, LCH1 and LCH2 will be changed to the selected cabinet.

9 Communication Troubleshooting


If the UHC-P software doesn't recognize the IR dongle upon startup, it may be necessary to select the com port being used to communicate with the cabinet. Follow the directions below to select the com port after attaching the IR dongle.

9.1 Configuring the Com Port Setting




1

1. Launch the UHC-P software by clicking on the
2. icon found on your computer.
3. The login screen appears.
4. Click Login

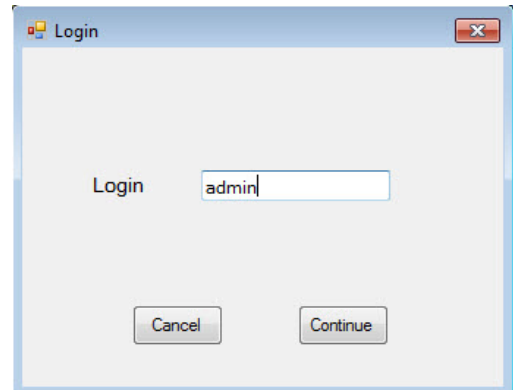

2


1. Click in the Login window and type admin.

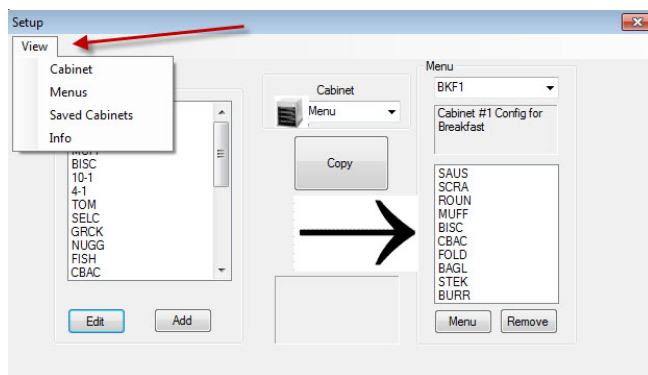

3

1. The setup screen appears.
2. Click on View.
3. In the pulldown, select Cabinet.

***NOTE:** Serial port number is displayed only if dongle is attached. The number displayed with the dongle attached is assigned by the computer and may not match number shown here.

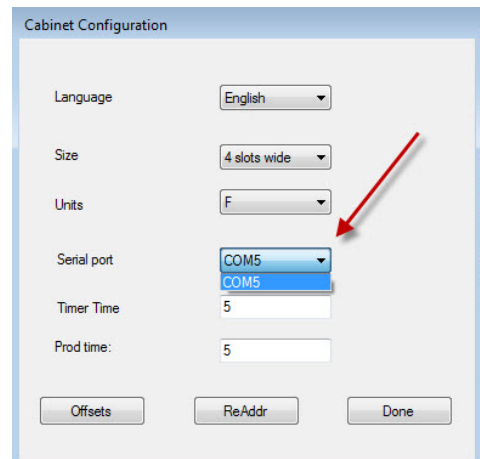

4

1. The Cabinet Configuration screen appears.
2. Choose the Com Port established in the setup of the IR software.



Shipping Address: 8700 Line Avenue, Shreveport, Louisiana 71106

TEL 1-318-865-1711 FAX (Parts) 1-318-219-7140 FAX (Tech Support) 1-318-219-7135

PRINTED IN THE UNITED STATES

SERVICE HOTLINE
1-800-551-8633

Price: \$6.00
819-6790
SEPT 13