

IF, DURING THE WARRANTY PERIOD, THE CUSTOMER USES A PART FOR THE FRYMASTER EQUIPMENT OTHER THAN AN UNMODIFIED NEW OR RECYCLED PART PURCHASED DIRECTLY FROM FRYMASTER AND DEAN, OR ANY OF ITS AUTHORIZED SERVICE CENTERS, AND/OR THE PART BEING USED IS MODIFIED FROM ITS ORIGINAL CONFIGURATION, THIS WARRANTY WILL BE VOID. FURTHER, FRYMASTER AND DEAN AND ITS AFFILIATES WILL NOT BE LIABLE FOR ANY CLAIMS, DAMAGES OR EXPENSES INCURRED BY THE CUSTOMER WHICH ARISE DIRECTLY OR INDIRECTLY, IN WHOLE OR IN PART, DUE TO THE INSTALLATION OF ANY MODIFIED PART AND/OR PART RECEIVED FROM AN UNAUTHORIZED SERVICE CENTER.

NOTICE

This appliance is intended for professional use only and is to be operated by qualified personnel only. A Frymaster/DEAN Factory Authorized Service Center (FASC) or other qualified professional should perform installation, maintenance, and repairs. Installation, maintenance, or repairs by unqualified personnel may void the manufacturer's warranty.

NOTICE

This equipment must be installed in accordance with the appropriate national and local codes of the country and/or region in which the appliance is installed.

NOTICE TO U.S. CUSTOMERS

This equipment is to be installed in compliance with the basic plumbing code of the Building Officials and Code Administrators International, Inc. (BOCA) and the Food Service Sanitation Manual of the U.S. Food and Drug Administration.

NOTICE

Drawings and photos used in this manual are intended to illustrate operational, cleaning and technical procedures and may not conform to onsite management operational procedures.

NOTICE TO OWNERS OF UNITS EQUIPPED WITH COMPUTERS

<u>U.S.</u>

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation. While this device is a verified Class A device, it has been shown to meet the Class B limits.

<u>CANADA</u>

This digital apparatus does not exceed the Class A or B limits for radio noise emissions as set out by the ICES-003 standard of the Canadian Department of Communications.

Cet appareil numerique n'emet pas de bruits radioelectriques depassany les limites de classe A et B prescrites dans la norme NMB-003 edictee par le Ministre des Communcations du Canada.

A DANGER

Improper installation, adjustment, maintenance or service, and unauthorized alterations or modifications can cause property damage, injury, or death. Read the installation, operating, and service instructions thoroughly before installing or servicing this equipment. Only qualified service personnel may convert this appliance to use a gas other than that for which it was originally configured.

Adequate means must be provided to limit the movement of this appliance without depending upon the gas line connection. Single fryers equipped with legs must be stabilized by installing anchor straps. All fryers equipped with casters must be stabilized by installing restraining chains. If a flexible gas line is used, an additional restraining cable must be connected at all times when the fryer is in use.

The front ledge of the fryer is not a step! Do not stand on the fryer. Serious injury can result from slips or contact with the hot oil.

Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.

Instructions to be followed in the event the operator smells gas or otherwise detects a gas leak must be posted in a prominent location. This information can be obtained from the local gas company or gas supplier.

The crumb tray in fryers equipped with a filter system must be emptied into a fireproof container at the end of frying operations each day. Some food particles can spontaneously combust if left soaking in certain shortening material.

WARNING

Do not bang fry baskets or other utensils on the fryer's joiner strip. The strip is present to seal the joint between the fry vessels. Banging fry baskets on the strip to dislodge shortening will distort the strip, adversely affecting its fit. It is designed for a tight fit and should only be removed for cleaning.

PERFORMANCE PRO SERIES GAS FRYERS MODELS MJ35/40/45/50 Table of Contents

CHAPTER 1: Service Procedures

1.1 General	.1-1
1.1.1 Pilot Ignition	
1.1.2 Electronic Ignition	.1-1
1.1.3 Controller Options	.1-2
1.1.4 Thermostats and Temperature Probes	.1-2
1.2 Moving the Fryer for Servicing	.1-2
1.3 Diagnostic Procedures	12
1.3.1 Cleaning the Gas Valve Vent Tube	1_3
1.3.2 Checking the Burner Manifold Gas Pressure	1-3
1.3.3 Adjusting the Pilot Flame	1-5
1.3.4 Adjusting Burner Ceramic Target Spacing and Alignment	.1-5
1.3.5 Calibrating the Thermostat	.1-5
1.3.6 Testing the Temperature Probe	
1.4 Replacing Fryer Components	.1-7
1.4.1 Replacing a Controller or Computer	.1-7
1.4.2 Replacing the Operating Thermostat in Units with Thermostat Control Panels	.1-8
1.4.3 Replacing the Operating Thermostat in Units with Thermostat Access Doors	.1-8
1.4.4 Replacing the Temperature Probe	.1-9
1.4.5 Replacing the High-Limit Thermostat in Fryers with Thermostat Controls	.1-9
1.4.6 Replacing the High-Limit Thermostat in Fryers with Other Controls	.1-9
1.4.7 Replacing the Heat Mode Indicator Light in Fryers with Thermostat Controls	1-10
1.4.8 Replacing the Power or Melt Cycle Switch in Fryers with Thermostat Controls 1.4.9 Replacing Burner Ceramic Targets	1 11
1.4.10 Replacing the Gas Valve	1 11
1.4.11 Replacing the Pilot Assembly or Thermopile	1 - 12
1.4.12 Replacing the Frypot	1-12
1.4.13 Replacing the Pump/Motor	
1.5 Troubleshooting and Problem Isolation	1-15
1.5.1 Typical Problems	1-15
Pilot Failure	
Ignition Failure	1-15
Improper Burner Function	
Improper Temperature Control	1-18
Gas Valve Malfunction	
Computer Malfunction	
Filtration Malfunction	
Leakage	
Basket Lift Malfunction 1.5.2 Interpretation of Analog Controller Lights	1 - 22
1.5.2 Interpretation of Analog Controller Lights	1-24
1.6 Probe Resistance Chart	1-24
1.7 Troubleshooting Guides	1-25
1.7.1 Troubleshooting the 24 VAC Circuit: Analog Controller	1-25
Troubleshooting the 24 VAC Circuit: Electronic Ignition (Computer Controller)	1-25
Troubleshooting the 24 VAC Circuit: Standing Pilot (Computer Controller)	1-26
1.7.2 Troubleshooting the Gas Valve	1-26
1.7.3 Troubleshooting the Thermostat	1-26
1.7.4 Troubleshooting the Temperature Probe	1-27
1.9 Wining Diagrams	1 20
1.8 Wiring Diagrams.	1-28
1.8.1 Standing Pilot	1-28
1.8.2 Electronic Ignition 1.8.3 Non-Computer Controlled	1-29
1.8.4 Electronic Ignition	1_21
1.8.5 Filter Box	
1.8.6 Modular Basket Lift 100/120V	1-32
1.8.7 Modular Basket Lift 208/250V	1-34

PERFORMANCE PRO SERIES GAS FRYERS MODELS MJ35/40/45/50 Table of Contents

CHAPTER 2: Parts List

2.1 Accessories	2-1
2.2 Basket Lift and Associated Parts	2-2
 2.3 Cabinetry 2.3.1 FPP/FMP Model Cabinetry 2.3.2 PMJ (Non-filter) Model Cabinetry	2-4
2.4 Casters, Legs, and Associated Hardware	2-8
2.5 Component Boxes	2-9
2.6 Control Panel Assemblies, Flue Caps, and Related Items	2-11
2.7 Controller Assemblies	2-13
2.8 Door Assembly	2-15
 2.9 Drain System Components 2.9.1 Drain Tube System 2.9.2 Drain Valves; FPP/FMP Models 2.9.3 Drain Valves; PMJ Models 	2-16
2.10 Filter Boxes	2-20
2.11 Filter Pan Assembly	2-22
2.12 Frypots	2-23
2.13 Frypot Cabinetry2.13.1 PMJ45 Frypot Cabinetry2.13.2 PMJ35 Frypot Cabinetry	
 2.14 Gas Valves and Burners 2.14.1 PMJ45 Gas Valves and Burners 2.14.2 PMJ35 Gas Valves and Burners 2.14.3 Ignitors 	2-26
2.15 Oil Return Components	2-33
2.16 Oil Return Assembly	2-35
2.17 Thermostats and Timers	2-36
2.18 Wiring Harnesses, Pin Terminals, and Power Cords	2-38
2.19 Garland Range (S35) Parts	2-39
2.20 Power Shower	2-39

PERFORMANCE PRO SERIES GAS FRYERS MODELS MJ35/40/45/50 CHAPTER 1: SERVICE PROCEDURES

1.1 General

Performance (Pro) Series gas fryers (formerly Master Jet 35- and 45-series fryers) contain a welded stainless steel frypot directly heated by gas flames diffused evenly over its lower surface by ceramic targets. The flames originate from orifices in a U-shaped burner manifold positioned beneath the frypot. They are equipped with either a millivolt gas valve or electromechanical gas valve that regulates gas flow to the manifold. For operating information, refer to the *Performance Pro Series Gas Fryers Models 35 & 45 Installation and Operation* manual (P/N 819-6042) or *Performance Series Gas Fryers Models MJ40 & MJ50 Installation and Operation* manual (P/N 819-7397). (Furthermore, referred to as the Installation and Operation manual.)

1.1.1 Pilot Ignition

The pilot system is the pilot orifice, pilot hood, and thermopile. The pilot serves two purposes: lighting the burners and heating the thermopile. In operation, the thermopile is in contact with the pilot flame and generates millivolts. The millivolt output passes through a normally closed high-limit switch and energizes the gas valve pilot coil, which opens the pilot valve. If the pilot flame is extinguished, the gas valve pilot coil loses voltage and the pilot valve closes.

In units equipped with 24-volt electromechanical gas valves, a separate 24-volt circuit activated by the fryer power switch provides voltage through the thermostat or controller to the gas valve main coil, which opens the main valve. The main gas valve will not open if the pilot valve is not open. Light the pilot flame manually using a match or the optional built-in piezo ignitor after installing the fryer.

1.1.2 Electronic Ignition

In units configured for electronic ignition, a black ignition module connected to an ignitor assembly replaces the pilot system. The ignition module performs three important functions: supply voltage to the gas valve, provide an ignition spark, and proof the pilot flame. The module contains a 4.5-second time delay circuit and a coil that activates the gas valve. The ignitor assembly consists of a spark plug, a pilot, and a flame sensor element.

At start-up the power switch is placed in the ON position, supplying 12 VDC to the heat control circuitry in the controller or computer and to one side of the heat relay coil on the interface board. If resistance in the temperature probe indicates the temperature in the frypot is below 180°F (82°C), the current flows through a melt cycle circuit where a timer switch alternately closes for 3 seconds and opens for 24 seconds. If the temperature is 180°F (82°C) or above, the current flows through a heat circuit, bypassing the timer switch. In either case, current is supplied to the other leg of the heat relay coil, which closes an electronic switch in the 24 VAC circuit to provide current to the ignition module.

Circuitry in the ignition module sends 24 VAC current to the gas valve via a normally closed high-limit switch and a drain safety switch. Simultaneously, the module causes the ignitor to spark for 4 seconds to light the pilot flame. A flame sensor verifies that the pilot is lit by measuring the flow of microamps through the flame (can vary, averages 1.9 microamps). If the pilot does not light or is extinguished, current to the ignition module is stopped, preventing the main valve from opening, and the ignition module *locks out* until the power switch is turned OFF, then back ON.

1.1.3 Controller Options

Performance (Pro) gas fryers may be equipped with thermostat controls, analog controllers, digital controllers, basket lift timers, or Computer Magic computers. In fryers equipped with **thermostat control panels**, the fryer and melt cycle are turned on and off using rocker switches and the temperature is set by a knob connected directly to the frypot-mounted thermostat. These units have no interface board. When the melt cycle switch is placed in the ON position, the fryer stays in the melt cycle mode until the switch is manually placed in the OFF position, even if the oil is at setpoint temperature. In units equipped with **thermostat access doors**, the temperature control knob is located behind the hinged front panel. Service procedures for this type of thermostat are slightly different from units with other thermostat controls.

Fryers equipped with other types of controllers have an interface board located in the component shield behind the control panel.

1.1.4 Thermostats and Temperature Probes

Performance (Pro) gas fryers may have different kinds of thermostats depending on their configuration. Fryers equipped with thermostat controls have an adjustable controlling thermostat. Adjust the temperature at which the thermostat opens and closes by turning the attached knob. The Fenwal controlling thermostat used in these fryers is sensitive to 1° changes in temperature.

Fryers equipped with other types of controls have a temperature probe. In these units, the probe resistance varies directly with the temperature. As the temperature rises, so does the amount of resistance at a rate of approximately 2 ohms for every 1° (F or C) of temperature (see *Probe Resistance Chart*, Section 1.6). Circuitry in the controller monitors the probe resistance and controls burner firing when the resistance exceeds or falls below programmed temperatures (i.e., setpoint). To program temperatures into the fryer, use the keypad on the face of the controller. When testing temperature probes, unplug the 15-pin wiring harness from the controller; otherwise, the reading may be incorrect due to extra resistance.

All open burner fryers are equipped with a high-limit thermostat. If the fryer fails to properly control oil temperature, the high-limit thermostat prevents the fryer from overheating to flash point. The high-limit thermostat acts as a normally closed power switch that opens when exposed to temperatures between 425°F to 450°F (218°C to 232°C). It will automatically reset when the oil temperature drops below 350°F (177°C).

1.2 Moving the Fryer for Servicing

If it is necessary to move the fryer before servicing, complete the following actions:

- 1. Drain the frypot.
- 2. Turn off the gas supply to the unit. Unplug any power cords. Disconnect the unit from the gas supply.
- 3. Remove attached restraining devices, including chain restraints and anchor straps.
- 4. Relocate the fryer to an appropriate area for servicing.

After servicing is complete:

- 5. Return the fryer to its original location, reconnect the unit to the gas supply, and open the gas supply valve. Be sure to reattach all restraining devices and plug in all electrical cords.
- 6. Refill the fryer with oil.

1.3 Diagnostic Procedures

1.3.1 Cleaning the Gas Valve Vent Tube

1. Carefully unscrew the vent tube from the gas valve.


NOTE: Straighten the vent tube for easy removal.

- 2. Pass a piece of binding wire (.052-inch diameter) or equivalent through the tube to remove obstructions.
- 3. Remove the wire and blow through the tube to ensure that it is clear.
- 4. Reinstall the tube and bend it so that the opening is pointing down.

1.3.2 Checking the Burner Manifold Gas Pressure

- 1. Ensure that the gas valve knob or button is in the OFF position.
- 2. Remove the pressure tap plug from the end of the manifold.
- 3. Connect a manometer or pressure gauge to the port.

▲WARNING The frypot must be filled with oil or water during this procedure.

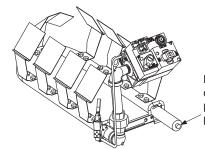

Remove this plug and connect a manometer or pressure gauge to the port.

4. Place the gas valve in the PILOT position and light. When the burner lights and continues to burn, note the gas pressure reading and compare it to the accompanying tables.

To adjust burner gas pressure:

- 5. On non-CE valves, remove the cap from the regulator adjustment screw.
- 6. On all units, increase the setting on the thermostat until the burner comes on.
- 7. Monitor the gas pressure reading on the manometer or pressure gauge.


MJ35/40-Series Non-CE Standard Burner Manifold Gas Pressures					
Gas	Pressure				
Natural	4.0" W.C. 0.87 kPa				
Propane	9.0" W.C. 2.24 kPa				

MJ35/40-Series CE Standard Burner Manifold Gas Pressures					
Gas	Pressure				
Natural Gas Lacq (G20) under 20 mbar	9 mbar				
Natural Gas Gronigue* (G25) under 25 mbar	11 mbar				
Natural Gas Gronigue* (G20) under 20 mbar	11 mbar				
Propane (G31) under 37 or 50 mbar	22.5 mbar				
* Belgian G25 and G20 = 9.0 mbar					

MJ45/50-Series Non-CE Standard Burner Manifold Gas Pressures					
Gas	Pressure				
Natural	3.5" W.C. 0.73 kPa				
Propane	8.25" W.C. 2.05 kPa				

MJ45/50-Series CE S Burner Manifold Gas P					
Gas	Pressure				
Natural Gas Lacq (G20) under 20 mbar	7.5 mbar				
Natural Gas Gronigue* (G25) under 25 mbar	10 mbar				
Natural Gas Gronigue (G20) under 20 mbar	10 mbar				
Propane (G31) under 37 or 50 mbar	20.6 mbar				
* Belgian G25 = 7.0 mbar					

- 8. Use a flat-head screwdriver to adjust the gas valve regulator adjustment screw to obtain the prescribed pressure written on the rating plate or one of the charts above. (Use the diagram on below to locate this screw.) Turn the screw clockwise to increase gas pressure and counterclockwise to decrease gas pressure.
- 9. On non-CE units, reinstall the gas valve regulator cap screw when the correct manifold pressure is obtained.
- 10. Place the gas valve in the OFF position. Remove the fitting from the pressure tap hole and reinstall the pressure tap plug.
- 11. Place the gas valve in the PILOT position. Re-light and check for any gas leaks.
- 12. Place the gas valve in the OFF position.

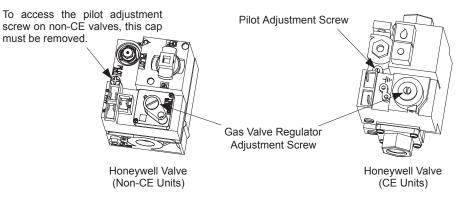


Locating the gas valve regulator adjustment screw and pilot adjustment screw.

1.3.3 Adjusting the Pilot Flame

- 1. On non-CE valves, remove the cap covering the pilot adjustment screw. On all valves, use a flattipped screwdriver to turn the pilot adjustment screw counterclockwise to increase the length of the flame or clockwise to decrease the length of the flame. (Use the diagram on the previous page to locate this screw.) Adjust the flame to a length of 1- to 1¹/₂- inches (25 to 38 mm).
- 2. On non-CE valves, reinstall the pilot adjustment screw cap.

1.3.4 Adjusting Burner Target Spacing and Alignment

Proper spacing of the top edge of the targets is ³/₄-inch (19.05 mm) from the frypot side. To adjust target spacing, bend the brackets away or toward the frypot, as needed. A length of board ³/₄-inch thick is useful as a gauge to verify spacing and alignment.

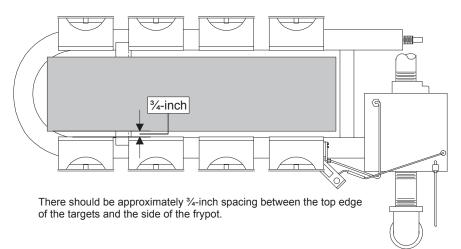

1.3.5 Calibrating the Thermostat

Fryers with thermostat access doors:

- 1. Fill the frypot to the lower OIL-LEVEL line with cooking oil. If using solid shortening, pack it tightly into the frypot before starting the calibration procedure.
- 2. Light the pilot. (See Chapter 3 of the Installation and Operation manual for detailed lighting instructions.)
- 3. Insert a thermometer or pyrometer into the frypot, about 1-inch from the thermostat.
- 4. Open the thermostat access door and set the thermostat on the fryer to 325°F (162°C).
- 5. When oil reaches 325°F (162°C), allow the burners to cycle on and off three times.
- 6. Take a temperature reading when the burners go off for the third time.
- 7. Loosen the setscrews in the thermostat knob and turn the knob to the temperature established by the thermometer/pyrometer reading.

8. Allow the burners to cycle on and off three more times and recheck the thermometer/pyrometer reading against the thermostat setting. Temperature readings should be within 5°F (2.8°C) of setpoint.

Fryers with thermostat control panels:

NOTE: Remove the thermostat knob from its shaft to allow the control panel to hinge downward. Follow the instructions in Section 1.4.2 to remove the knob and control panel.

- 1. Fill the frypot to the lower OIL-LEVEL line with cooking oil. If using solid shortening, pre-melt it before starting the calibration procedure.
- 2. Ensure the fryer power switch is in the OFF position, and light the pilot. (Refer to Chapter 3 of the Installation and Operation manual for detailed lighting instructions.)
- 3. Insert a thermometer or pyrometer into the frypot so that it touches the thermostat guard.
- 4. Loosen the setscrew and stop screw securing the thermostat shaft extension to the flexible shaft. Remove the extension to expose the slot in the end of the flexible shaft.
- 5. Place the fryer power switch in the ON position.

NOTE: If the burner does not light at this time, it does not mean the thermostat is defective.

Use a small flat-head screwdriver to <u>slowly</u> turn the flexible shaft counterclockwise until the burner lights.

- 6. When the oil temperature reaches 325°F (162°C), <u>slowly</u> turn the flexible shaft clockwise until the burner turns off. Then, allow the fryer to sit for a few minutes.
- 7. Repeat Steps 5 and 6 at least three times to ensure that the setting is accurate. The thermostat control is considered properly calibrated if the burner lights when the cooking oil cools to 325°F (162°C). *Do not take the reading when the burner shuts off after raising the temperature.*
- 8. Once the thermostat is calibrated, allow the burner to cycle on and off at least three times to ensure that it lights at the correct temperature.
- 9. After the calibration is complete, place the fryer power switch in the OFF position and disconnect the fryer from the electrical supply.
- 10. Carefully replace the thermostat shaft extension so that the stop screw points straight up. Without rotating the flexible shaft, tighten the stop screw, locking nut, and setscrew.
- 11. Close the fryer control panel and replace the screws and bezel.
- 12. Reinstall the thermostat knob. Align its pointer with the 325°F (162°C) index mark on the temperature dial.
- 13. Reconnect the fryer to the electrical supply.

▲ CAUTION The thermostat flexible shaft must not be rotated while installing the thermostat shaft extension!

Do not rotate the flexible shaft more than two turns in either direction. Doing so will cause damage to the thermostat.

1.3.6 Testing the Temperature Probe

- 1. While it is still in the frypot, inspect the probe body for damage. Inspect the leads for fraying, burning, breaks, or kinks. If the probe is bent, dented, or cracked, or if the leads are damaged, replace the probe.
- 2. Determine the temperature of the cooking oil using a thermometer or pyrometer placed at the tip of the probe.
- 3. Disconnect the 15-pin wiring harness from the interface board. Measure the probe resistance using J2 pins 13 and 14.
- 4. Resistance should approximately equal the given probe resistance for the corresponding temperature on the chart in Section 1.6, Page 1-23. If not, the probe has failed and must be replaced. Probes cannot be calibrated.

NOTE: A defective probe will cause inaccurate temperature measurements. If the temperature, as measured by the probe, varies by more than $5^{\circ}F^{\pm}$ (2.8°C[±]) from the thermometer or pyrometer reading, the probe should be replaced. **Temperature probes cannot be calibrated.**

1.4 Replacing Fryer Components

1.4.1 Replacing a Controller or Computer

- 1. Disconnect the fryer from the electrical power supply.
- 2. Slide the metal bezel up to disengage the lower tabs. Then, slide the bezel down to disengage the upper tabs.
- 3. Remove the two screws holding the controller to the control panel frame.
- 4. Hinge the controller down to access the 15-pin wiring harness on the back and unplug it.
- 5. Lift the controller up and out of the hinged tab slots.
- 6. Use a $\frac{5}{16}$ -inch nut driver (P/N 802-0352) to remove the nut and green grounding wire from the back of the controller.
- 7. If replacing the 15-pin wiring harness, do so now. Plug the new 15-pin wiring harness into the interface board with the metal ring on the controller-end of the connector.
- 8. Connect the 15-pin wiring harness and the green ground wire to the new controller. When the connector on the harness is completely engaged, the clips on either side will snap into place.
- 9. Re-hinge the controller by inserting the tabs on the bottom into the slots on the control frame panel.
- 10. Move it into the closed position against the control panel frame and replace the screws in the top corners.
- 11. Insert the top tabs on the bezel into the slots on the underside of the top cap. Slide the bezel down to engage the lower tabs in the lower slots.

1.4.2 Replacing the Operating Thermostat in Units with Thermostat Control Panels

- 1. Disconnect the fryer from the electrical power supply. Turn off the gas and disconnect the fryer.
- 2. Drain the frypot.
- 3. Loosen the setscrew securing the thermostat knob and remove the knob. Remove the screws from the upper left and right corners of the control panel. The control panel hinges at the bottom and will swing open from the top.
- 4. Disconnect the 9-pin wiring harness and remove the control panel from the fryer by disengaging its tabs from the hinge slots in the mounting frame.
- 5. Loosen the setscrews securing the flexible shaft to the thermostat shaft. Slip the flexible shaft off the thermostat shaft.
- 6. Remove the flexible shaft guide by removing the two sheet metal screws securing it to the upper frame.
- 7. Disconnect the thermostat leads from pin 14 in the 20-pin terminal block and from the gas valve terminal.


NOTE: If the fryer has a melt cycle, the thermostat leads connect to the PC board rather than to the terminal block and gas valve. Disconnect the leads from the PC board if this is the case.


- 8. Unscrew the thermostat from the frypot and remove it.
- 9. Apply LoctiteTM PST56765 thread sealant or equivalent to the threads of the replacement thermostat.
- 10. Reverse Steps 1-8 to install the replacement thermostat.

▲ CAUTION The thermostat flexible shaft must not be rotated while installing the thermostat

shaft extension!

Do not rotate the flexible shaft more than two turns in either direction. Doing so will cause damage to the thermostat.

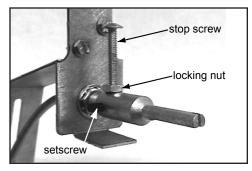

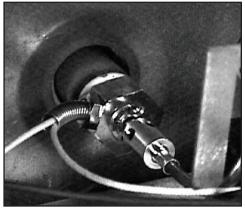

Loosen these setscrews and slip the flexible shaft off of the thermostat shaft.

1.4.3 Replacing the Operating Thermostat in Units with Thermostat Access Doors

- 1. Disconnect the fryer from the electrical power supply. Turn off the gas and disconnect the fryer.
- 2. Drain the frypot.
- 3. Use an allen wrench to loosen the setscrew at the side of the thermostat knob. Remove the knob.
- 4. Remove the two setscrews on both sides of the thermostat shaft and remove the dial plate.
- 5. Disconnect the thermostat wires from the gas valve.
- 6. Use a slotted socket to unscrew the thermostat from the frypot.
- 7. Apply LoctiteTM PST56765 thread sealant or equivalent to the threads of the replacement thermostat.
- 8. Reverse Steps 1-7 to install the replacement thermostat.

1.4.4 Replacing the Temperature Probe

- 1. Disconnect the fryer from the electrical supply.
- 2. Drain the frypot.
- 3. Remove the controller or computer according to the instructions in Section 1.4.1.
- 4. Unplug the 12-pin wiring harness from the front of the interface board.
- 5. Use a pin-pusher to remove the temperature probe wires (pins 1 and 2) from the 12-pin wiring harness
- 6. Unscrew the temperature probe from the frypot and remove.
- 7. Apply LoctiteTM PST56765 thread sealant or equivalent to threads of the replacement probe.
- 8. Screw the new probe into the frypot.
- 9. Reverse Steps 1-5 to reassemble.
- 10. Check the probe according to the instructions in Section 1.3.6.

1.4.5 Replacing the High-Limit Thermostat in Fryers with Thermostat Controls

- 1. Disconnect the fryer from the electrical supply.
- 2. Drain the frypot.
- 3. Remove the thermostat knob and/or control panel as instructed in Section 1.4.2 or 1.4.3.
- 4. Disconnect the high-limit thermostat leads from the gas valve pilot coil.
- 5. Unscrew the high-limit thermostat from the fryer and remove.
- 6. Apply LoctiteTM PST56765 thread sealant or equivalent to the threads of the replacement high-limit thermostat.
- 7. Reverse Steps 1-5 to the install replacement high-limit.

1.4.6 Replacing the High-Limit Thermostat in Fryers with Other Controls

- 1. Disconnect the fryer from the electrical supply.
- 2. Drain the frypot.
- 3. Remove the bezel and controller as instructed in Section 1.4.1, Steps 2 and 3.
- 4. Unplug the 15-pin wiring harness and grounding wire from the controller.
- 5. Remove the high-limit thermostat wires from the gas valve pilot coil.

A CAUTION Drain the frypot before proceeding.

▲ CAUTION Drain the frypot before proceeding.

A CAUTION Drain the frypot before pro-

ceeding.

- 6. Unscrew the high-limit thermostat from the fryer and remove it.
- 7. Attach the appropriate terminals (instructions furnished in the replacement kit) to the thermostat leads.
- 8. Apply LoctiteTM PST56765 thread sealant or equivalent to the threads of the replacement high-limit thermostat.
- 9. Reverse Steps 1-6 to install the replacement high-limit.

1.4.7 Replacing the Heat Mode Indicator Light in Fryers with Thermostat Controls

- 1. Disconnect the fryer from the electrical power supply.
- 2. Remove the thermostat knob and control panel as instructed in Section 1.4.2 or 1.4.3, as appropriate.
- 3. Carefully press the light out from the back of the control panel.
- 4. Disconnect one wire at a time and reconnect it to the replacement light (before disconnecting the next wire). Continue until all wires are transferred.
- 5. Carefully press the light back into the control panel.
- 6. Reinstall the thermostat knob and control panel by reversing Step 2.
- 7. Reconnect the fryer to the electrical power supply.

1.4.8 Replacing the Power or Melt Cycle Switch in Fryers with Thermostat Controls

- 1. Disconnect the fryer from the electrical power supply.
- 2. Remove the thermostat knob and control panel as instructed in Section 1.4.2.
- 3. Using a flat-head screwdriver, disconnect the chrome bezel from the tabs on the switch and press the switch out from the front.
- 4. Carefully press the new switch into the chrome bezel, making sure the tabs on the switch engage the slots in the bezel.
- 5. Disconnect one wire at a time and reconnect it to the replacement switch (before disconnecting the next wire). Continue until all wires are transferred.
- 6. Reinstall the thermostat knob and control panel by reversing Step 2.
- 7. Reconnect the fryer to the electrical power supply.

1.4.9 Replacing Burner Ceramic Targets

- 1. Disconnect the fryer from the electrical power supply. Turn off the gas and disconnect the fryer.
- 2. Drain the frypot or remove the handle from the drain valve.
- 3. Remove the round drain sections as necessary to expose the burners and heat shield.
- 4. Disconnect the wires from the gas valve terminal block, marking each wire to facilitate reconnection.
- 5. Remove the high-limit thermostat wires from the gas valve pilot coil.
- 6. Disconnect the pipe union collar located on the bottom of the gas valve.
- 7. Remove the burner heat shield hanger screws at the front of the burner and remove the heat shield.

In units with built-in filtration, there may be a second heat shield located under the burner manifold. Remove the screws holding it in place and remove it.

- 8. Remove the filter pan by sliding it out of the unit and lifting it up and out of the roller track.
- 9. Remove the burner hanger screws and lower the front of the main burner. Pull it forward to clear the rear burner hanger and lower the burner to the floor.
- 10. Raise the front of the fryer enough to slide the burner from under the fryer cabinet.
- 11. To replace only the ceramic targets, straighten the target locking tabs with a pair of needle nose pliers or a screwdriver and slide the target up and off the bracket. Slide the replacement target onto the bracket and bend the locking tabs down.

To replace the entire target assembly, use a ¹/₂-inch (13mm) box end wrench to remove the two brass orifices that hold the assembly to the burner manifold. Position the new assembly and replace the orifices.

12. Reverse Steps 1-9 to reinstall the burner assembly. Compare spacing and alignment of targets with the parameters in Section 1.3.4.

1.4.10 Replacing the Gas Valve

- 1. Disconnect the fryer from the electrical power supply. Turn off the gas and disconnect the fryer.
- 2. Drain the frypot or remove the handle from the drain valve.
- 3. Disconnect the wires from the gas valve terminal block, marking each wire to facilitate reconnection.

CAUTION Avoid cross-threading and stripping when reinstalling the brass orifices.

Drain the frypot or remove the

handle from the drain valve before proceeding further.

WARNING Drain the frypot or remove the handle from the drain valve before proceeding further.

- 4. Remove the high-limit thermostat wire from the gas valve pilot coil.
- 5. Disconnect the pilot gas line fitting from the gas valve.
- 6. Disconnect both pipe union collars from the gas valve and remove the valve.
- 7. Remove the pipefittings from the old gas valve and install them on the replacement valve. Use LoctiteTM PST56765 or equivalent pipe thread sealant on the threads.
- 8. Reverse Steps 1-6 to install the replacement gas valve.

1.4.11 Replacing the Pilot Assembly or Thermopile


- 1. Remove the burner assembly in accordance with Steps 1-10 in Section 1.4.9.
- 2. To replace only the thermopile:
 - a. Bend the clip at the bottom of the pilot assembly and press the thermopile out of the pilot assembly from the top.
 - b. Disconnect the thermopile fitting from the gas valve pilot coil.
 - c. Reverse Steps a and b to install the replacement thermopile.
- 3. To replace the complete pilot assembly:
 - a. Disconnect the pilot tubing from the bottom of the pilot assembly.
 - b. Remove the screw from the pilot mounting bracket to release the pilot assembly.
 - c. Disconnect the thermopile fitting from the gas valve pilot coil.
 - d. Reverse Steps a-c to install the replacement assembly.
- 4. Reinstall the burner assembly by reversing Steps 1-8 of Section 1.4.9.

1.4.12 Replacing the Frypot

- 1. Drain the frypot.
- 2. Disconnect the fryer from the electrical power supply. Turn off the gas supply and disconnect the fryer.
- 3. Remove all accessories (i.e., frypot covers, basket lift arms, etc.) from the fryer.
- 4. If the fryer is equipped with a thermostat control, remove the thermostat knob and control panel according to Steps 3-8 in Section 1.4.3.

NOTE: If the fryer is configured with a melt cycle, the thermostat leads will be connected to the PC board rather than to the terminal block and gas valve. Disconnect the leads from the PC board if this is the case.

▲ WARNING Drain the frypot or remove the handle from the drain valve before proceeding further.

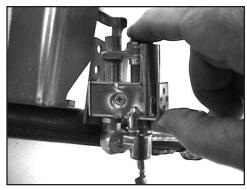

Bend the clip to release the thermopile.

- 5. If the fryer is not equipped with a thermostat control, remove the controller according to Steps 2-6 in Section 1.4.1.
- 6. Disconnect the 12-pin plug from the interface board. Use a pin-pusher to remove the temperature probe wires (pins 1 and 2) and the high-limit thermostat leads (pins 6 and 8) from the plug. Leave all other wires connected.
- 7. Remove the control panel frame by removing the screws in the upper left and right corners that secure the control panel to the topcap. Remove the screws in the top and bottom holes of each brace of the control panel that secure it to the fryer. Pull the control panel straight out of the fryer frame. It may require a rubber mallet to loosen it.
- 8. Disconnect the wires from the components in the component shield and mark to facilitate reconnection.
- 9. Disconnect the wires from the gas valve terminal block and mark each to facilitate reconnection.
- 10. Remove the cover from the drain safety switch, disconnect the wires from the switch, and pull them out of the switch box.
- 11. Pull up and forward on the component shield to clear the rear mounting stud on the front of the frypot and remove it from the fryer by rotating its right side up and to the left.
- 12. Disconnect the pipe union on the bottom of the gas valve.
- 13. On units with filtration, disconnect the section of drain connected to the drain valve of the frypot to be removed.
- 14. Take off the topcap by removing the pairs of screws from each tab in the upper corners. Pull up to slide it off the fryer. It may require a rubber mallet to loosen it.
- 15. Remove the frypot hold-down bracket, which attaches the front of the frypot to the frame of the fryer. It is held in place by three screws: two securing it to the frame and one securing it to the frypot.
- 16. Remove the flue cap:
 - a. Remove all of the screws attaching the back panels to the fryer and remove the panels.
 - b. Remove the screws in the bottom left and right corners of the flue cap.
 - c. Slide the flue cap up to remove it.
- 17. Remove the oil return line from the front of the frypot to be removed.
- 18. Lift the complete frypot assembly (frypot, burner, gas valve, and flue) from the fryer cabinet.
- 19. Transfer the burner heat shield and burner to the replacement frypot.
- 20. Remove the drain valve, thermostat or temperature probe, and high-limit thermostat and install them on the replacement frypot.

▲ CAUTION Clean all threads and apply Loctite[™] PST56765 thread sealant or equivalent when installing the drain valve, high-limit, and thermostat or temperature probe on the replacement frypot.

- 21. In units with multiple frypots, add a bead of silicon along the joint between the frypots to ensure a seal. Then, insert the top connecting strip.
- 22. Reverse Steps 1-25 to reassemble the fryer.

1.4.13 Replacing a Pump/Motor

- 1. Disconnect the unit from the electrical power supply.
- 2. Remove the filter pan from the unit and drain the frypots into a Shortening Disposal Unit (SDU) or other appropriate metal container.

	<u>L DANGER</u>
DO NOT attempt to drain more than one ful	I frypot or two split frypots into the SDU at one time.

- 3. Position a container beneath the oil return fitting at the front of the cabinet. Disconnect the flexible oil line from the fitting, allowing any residual oil to drain into the container.
- 4. At the rear of the fryer, unplug the left connector (as viewed from the rear of the fryer) from the transformer box. Using a pin pusher, push the pump solenoid valve wires from Pins 7 and 9.
- 5. Remove the four nuts and bolts attaching the motor mount to the rear motor mount support.
- 6. At the front of the fryer, remove the cover plate from the front of the motor and disconnect the motor wires.
- 7. Place a 1-foot (30.5-cm) length of wood (or similar support) beneath the motor mount near the front of the unit and remove the two remaining nuts and bolts attaching the motor mount to the front cabinet cross-brace.
- 8. Carefully remove the support and lower the motor mount to the floor, allowing the rear of the mount to slide forward and off the rear motor mount support.
- 9. Disconnect the Power Shower flexline (if applicable) or the oil return flexline from the pump. The motor and pump assembly can now be pulled from beneath the fryer and the failed component can be removed and replaced.
- 10. Position the new/repaired motor and pump assembly beneath the fryer and reconnect the Power Shower flexline (if applicable) or the oil return flexline to the pump. Lift the rear of the motor mount up and onto the rear motor mount support.
- 11. Lift the front of the motor mount up and support it with a 1-foot (30.5-cm) piece of wood or a similar support. Install but do not tighten the two nuts and bolts that attach the motor mount to the front cabinet cross-brace.
- 12. Install and tighten the four nuts and bolts that secure the motor mount to the rear motor mount support. Reconnect the solenoid valve wires to Pins 7 and 9 of the 9-pin connector (polarity does not matter) and reconnect the plug.
- 13. At the front of the fryer, tighten the two nuts and bolts at the front of the motor mount. Reconnect the motor power wires and reinstall the wiring cover plate.
- 14. Reconnect the oil return flexline and reinstall the filter pan.
- 15. Reconnect the unit to the electrical power supply, fill the frypots with oil, and check for proper operation.

1.5 Troubleshooting and Problem Isolation

Because it is not feasible to include every issue that might occur, this section is intended to provide technicians with a general knowledge of the broad problem categories associated with this equipment and the probable causes of each. With this knowledge, the technician should be able to isolate and correct

any problem encountered.

1.5.1 Typical Problems

You are likely to encounter problems in these broad categories:

- 1. Pilot Failure
- 2. Ignition Failure
- 3. Improper Burner Function
- 4. Improper Temperature Control
- 5. Gas Valve Malfunction

- 6. Computer Malfunction
- 7. Filtration Malfunction
- 8. Leakage
- 9. Basket Lift Malfunction

Read the following sections to learn more about each category. A series of troubleshooting guides is also included at the end of the chapter to assist in identifying some of the more common problems. In addition, Section 1.5.2 will guide technicians through interpretation of digital controller lights, helpful in diagnosing problems.

Pilot Failure

There are two types of pilot failure: no pilot flame and unreliable pilot flame.

No pilot flame:

- Insufficient gas supply
- Clogged pilot orifice
- Air in gas lines (usually in new installations).

Unreliable pilot flame:

- Open or grounded high limit
- Loose or corroded wire connections
- Low or no voltage out of thermopile
- Bad gas valve.

Ignition Failure

Ignition failure occurs when the gas valve no longer receives power, the gas supply stops, or the pilot flame goes out. Solid-state controllers indicate ignition failure by illuminating the heat light and trouble light simultaneously. Computers and digital timers will read *H E L P* to indicate ignition failure. There are three primary areas of focus in diagnosing and correcting ignition failure:

- 1. The gas and electrical power supplies
- 2. The electronic circuits
- 3. The gas valve.

The Gas and Electrical Power Supplies

The main indicators that the gas or electrical power supply is the cause of ignition failure are as follows: an entire battery of fryers fails to light, and/or there are no indicator lights illuminated on the fryer experiencing ignition failure. Verify that the quick disconnect hose is properly connected, the fryer is plugged in, the main gas supply valve is open, and the circuit breaker for the fryer electrical supply is not tripped.

The Electronic Circuits

If the fryer is receiving gas and electrical power, the next most likely cause of ignition failure is a problem in the 24 VAC circuit of the pilot system. If the fryer is equipped with a drain valve for filtration purposes, check the drain valve to verify that it is fully closed. A microswitch attached to the valve must be closed for power to reach the gas valve. Often, although the valve handle appears to be in the closed position, the microswitch is still open. If the valve is fully closed, or the fryer is not equipped with a filtration system, refer to *Troubleshooting the 24 VAC Circuit* in Section 1.7.1 of this manual.

The Gas Valve

If the problem is not in the 24 VAC circuit of the pilot system, it is most likely in the gas valve. However, before replacing the gas valve, refer to *Troubleshooting the Gas Valve* in Section 1.7.2 of this manual.

Improper Burner Function

In these types of instances, the burner ignites but exhibits abnormal characteristics, such as *popping*, incomplete lighting of the burner, fluctuating flame intensity, and flames "rolling" out of the fryer.

Popping indicates delayed ignition. In most cases, the main gas valve is opening, but the burner is not immediately lighting. When ignition does take place, excess gas bursts into flame suddenly, rather than smoothly igniting.

The primary causes of popping are:

- 1. Incorrect or fluctuating gas pressure
- 2. Misdirected or weak pilot flame
- 3. Clogged burner orifices
- 4. Inadequate make-up air
- 5. Missing or misaligned burner deflector targets
- 6. Clogged vent tube (causing incorrect gas pressure).

Incorrect or Fluctuating Gas Pressure

If popping occurs only during peak hours, the problem may be incorrect or fluctuating gas pressure. Verify that the incoming gas pressure (to the gas valve) is in accordance with the appropriate CE or non-CE standard found in the table on Page 1-4 and the pressure remains constant throughout all hours of usage. Refer to *Checking the Burner Manifold Pressure* in Section 1.3.2 for instructions on checking the pressure of gas supplied to the burner.

Misdirected or Weak Pilot Flame

If popping is consistent during all hours of operation, check position of the pilot above the burner orifice and verify that the pilot pressure is correct. A 1- to 1 ½-inch (25 to 38 mm) flame indicates correct pilot pressure. Refer to Section 1.3.3 for information on pilot flame adjustment.

Clogged Burner Orifices

Clogged burner orifices, especially those near the pilot, are also likely causes of delayed ignition. Lack of flame, flames that are orange in color, and flames that shoot out at an angle from the rest are indications of clogged burner orifices. If **only one side of the burner is lighting**, the rear deflector target may be misaligned or missing completely. Improper burner pressure may also cause this. If there are **gaps in burner firing**, check for clogged burner orifices.

Inadequate Make-up Air

Another cause of popping is an insufficient air supply or drafts that are blowing the pilot flame away from the burner. Check for *negative pressure* conditions in the kitchen area. If air is flowing into the kitchen area, this indicates that more air is entering the kitchen than is leaving it. In a negative pressure environment, the burners may not be receiving an adequate amount of air to maintain a strong pilot flame.

Other Causes of Popping

Other causes of popping are more ambiguous and may have two or more possible causes to consider.

If the fryer's gas and air supplies are okay, it is likely that the cause of the popping is one of the electrical components. Examine the controller for signs of melting, distortion, and possibly discoloration due to excessive heat buildup in the fryer (usually indicating improper flue performance). Automatically suspect a discolored or distorted controller and replace it. However, it is important to diagnose and correct the condition causing excessive heat in the fryer or the problem is likely to recur.

Fluctuating flame intensity is normally caused by improper or fluctuating gas pressure or the result of variations in the kitchen atmosphere. Verify incoming gas pressure in the same way as for popping, discussed in the preceding paragraphs. Air condition and ventilation units (such as hoods) starting and stopping throughout the day usually cause variations in the kitchen atmosphere. As they start and stop, the pressure in the kitchen may change from positive or neutral to negative, or vice versa. They may also cause changes in airflow patterns that may affect flame intensity.

Flames "rolling" out of the fryer are usually an indication of negative pressure in the kitchen. The negative air pressure is sucking air out of the fryer enclosure and the flames are following the air. If negative pressure is not the cause, check for high burner manifold gas pressure in accordance with the procedures in Section 1.3.2. An obstructed flue, which prevents the fryer from properly exhausting, may also be the cause.

An **unusually noisy burner**, especially when **flames are visible above the flue opening**, may indicate that the burner gas pressure is too high or that the gas valve vent tube is blocked. If the gas pressure is correct and the vent tube is unobstructed, the gas valve regulator is probably defective.

Occasionally, a burner may appear to be operating correctly, but it shows a **slow recovery rate** (discussed on Page 1-18). The primary causes of this are low burner manifold pressure and misaligned or missing deflector targets. In some cases, the cause is a gas valve regulator that is out of adjustment. Refer to Section 1.3.2 for instructions on checking the burner manifold pressure and Section 1.3.4 for adjusting deflector target positioning.

Improper Temperature Control

Temperature control—including that for the melt cycle—is a function of several interrelated components, each of which must operate correctly. The principal component is the thermostat (in units equipped with thermostat controls) or the temperature probe (in fryers equipped with other types of controllers). Depending upon the specific configuration of the fryer, it may also include an interface board and controller. Problems with improper temperature control can be categorized into those issues concerning melt cycle malfunctions and those concerning a failure to control at setpoint.

Melt Cycle

In fryers equipped with thermostat controls, the melt cycle is controlled with a solid state melt cycle board and a melt cycle switch on the control panel. In all cases, replace the defective component.

In fryers equipped with other types of controllers, the problem may originate in the controller, the temperature probe, or a malfunctioning heat relay on the interface board. For problem isolation

techniques, refer to the troubleshooting guides, *Troubleshooting the Thermostat* and *Troubleshooting the Temperature Probe*, in Section 1.7, *Troubleshooting*.

Failure to Control at Setpoint

In fryers equipped with thermostat controls, the problem will be in the thermostat. Refer to Section 1.3.5 for instructions on calibrating the thermostat. Possible causes are that

- the thermostat is out of calibration,
- the knob or flexible shaft is loose on the thermostat shaft,
- a thermostat wire is disconnected or broken, or
- the thermostat is defective.

Refer to Section 1.3.5 for instructions on calibrating the

thermostat. In fryers equipped with other types of controls, the problem may originate in the temperature probe or probe circuit, the interface board, or the controller. Refer to *Troubleshooting the Temperature Probe*, Section 1.7.4., for problem isolation techniques.

Gas Valve Malfunction


Occasionally, a gas valve may malfunction. Use Section 1.7.2, *Troubleshooting the Gas Valve*, to determine if the valve has failed.

Computer Malfunction

Before diagnosing problems related to a computer controller, it is important to understand the use and significance of sensitivity and recovery.

Sensitivity and Recovery

Sensitivity-or "stretch time"-is a programmable feature, patented by Frymaster, which increases

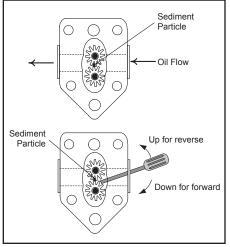

Removing debris or shortening from a seized pump.

or decreases the cook time countdown based on variation in the oil temperature from the setpoint. The sensitivity for each product button has ten settings, 0-9. Setting sensitivity to "0" will disable the feature completely, while a setting of "9" will provide the highest sensitivity or most change. The correct sensitivity for any product is based on the type of product, its density, the setpoint temperature, and the customer's own requirements. A generic sensitivity chart is located on Page 1-5 of the *Frymaster Fryer Controllers* manual (P/N 819-5916).

Recovery—or "rate of rise"— is a method of measuring a fryer's performance. It is the time required for the fryer to increase the oil temperature from $275^{\circ}F$ to $325^{\circ}F$ ($135^{\circ}C$ to $163^{\circ}C$). This range is the standard since ambient kitchen temperatures can affect the test if lower ranges are used. The Computer Magic computer controller performs the recovery test each day as the fryer heats-up. An operator can view the results of the test any time the fryer is above $325^{\circ}F$ ($163^{\circ}C$) by pressing the \checkmark button and entering the code 1652. The test results display in the computer's LED panel in minutes and seconds. The acceptable recovery time is 2:30 or less. Extended recovery is a sign that the fryer is not being regularly maintained or it is in need of servicing. The recovery time lengthens as fryer health declines. This is a useful tool for gauging the condition of the fryer and should be checked regularly.

Common Computer Complaints

Most problems with Computer Magic controllers stem from programming issues. There are four common complaints.

1. Fryer constantly displays H1.

Cause: Incorrect, low, or missing setpoint.

Fix: Press \checkmark 1650, enter the correct setpoint using the keypad, then press 1 to lock-in the new setpoint.

2. Fryer constantly displays temperature.

Cause: The computer has been programmed to constantly display the temperature.

Fix: Press 🗹 165L.

3. Fryer displays temperature in Celsius.

Cause: The computer has been programmed to display in Celsius rather than Fahrenheit.

Fix: Press 🗹 1658.

4. Computer times down too slowly or too quickly.

Cause: The computer is compensating for oil temperature via the sensitivity setting.

Fix: Reprogram the sensitivity setting for each product by following the programming instructions in the Installation and Operation manual or the *Frymaster Fryers Controllers* manual (P/N 819-5916).

Filtration Malfunction

The majority of filtration malfunctions arise from operator error. One of the most common errors is placing the filter paper on the bottom of the filter pan rather than over the filter screen.

Inspect the filter paper to ensure that it is correctly sized and placed. Incorrectly sized or installed filter paper will allow particles and sediment to pass through the filter pan and into the pump. When sediment enters the pump, the gears can bind and cause the motor to overheat. If the motor overheats, the thermal overload will trip to protect the motor from further damage. Reset the motor by pressing the red reset button the end of the motor nearest the operator. **Sediment cannot enter the pump when the correct filter paper is used properly.**

While you are checking the filter paper, verify that the O-rings on the filter pan and connectors are present and in good condition. Missing or worn O-rings will allow the pump to suck air and decrease its efficiency.


A pump seized by debris or hard shortening can usually be freed by manually moving the gears with a screwdriver or other tool.

- 1. Disconnect power to the filter system.
- 2. Remove the input plumbing from the pump.
- 3. Use a screwdriver to manually turn the gears.
 - Turn the pump gears backward to release a hard particle and remove it.
 - Turn the pump gears forward to push softer objects and solid shortening through the pump and allow the gears to move freely.

Incorrectly sized or installed paper will also allow food particles and sediment to pass through and clog the suction tube on the bottom of the filter carriage. Particles large enough to block the suction tube may indicate that the crumb tray is not being used during filtering.

Pan blockage can also occur if shortening remains in the pan and solidifies. The heater strip on the suction tube prevents solidification of residual shortening left in the tube. It will not melt or prevent solidification of shortening in the pan. Remove blockages by forcing the item out with an auger or drain snake. **Compressed air or other pressurized gases should not be used to force out the blockage.**

The Power Shower may need service for clogged openings, shortening solidified in the tubes, missing clean-out plugs, and missing or worn O-rings. To correct these problems, clean the unit and replace missing or worn plugs and O-rings.

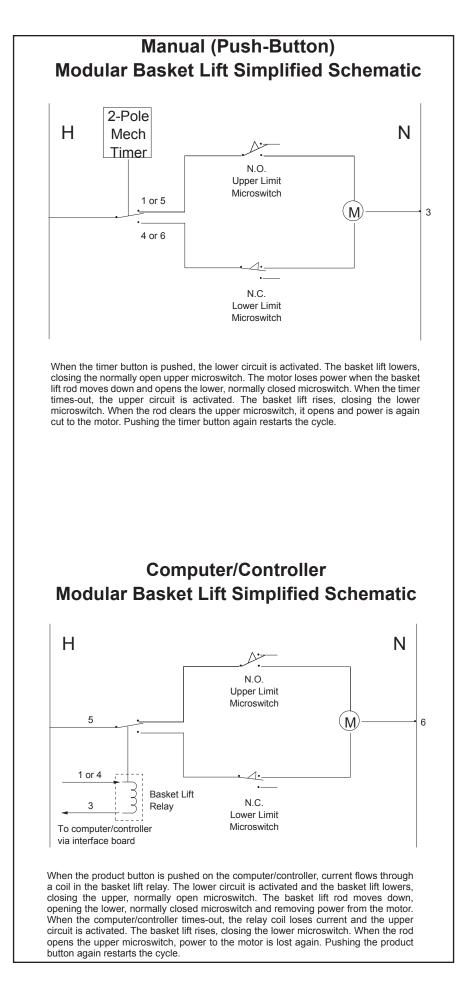

Leakage

When a frypot appears to be leaking, suspect the areas where high-limit thermostats, temperature probes, and drain fittings attach to the frypot. When installed or replaced, seal each of these components with Loctite PST56765 sealant or equivalent to prevent leakage.

If oil coats the sides or ends of the frypot, the most likely cause is spillage over the top of the frypot. There may also be oil pooled on the floor below the fryer. This is not necessarily a sign that the <u>frypot</u> is leaking.

It is important to check the joints between round drain sections and all of the fittings. If removing a section of drain tube connected to the drain valve for any reason, make sure that the O-rings are in good condition and properly fitted within the drain during reinstallation. Ensure that the clamps are tight and that the nut holding them onto the stud of the tube is not stripped or loose. Also, check that the drain tube runs downward from the drain along its whole length and has no low points where oil may accumulate.

In very rare cases, a leak may develop along one of the welded edges of the frypot. When this type of leak is suspected, thoroughly inspect the frypot. If it is definitely leaking, replace the frypot.

Basket Lift Malfunction

Performance Pro series gas fryers may be optionally equipped with automatic basket lifts to ensure uniform cooking time. The lifts can be controlled manually or through a basket lift timer or Computer Magic computer. Basket lifts will always come in pairs, although each operates independently.

Each basket lift consists of a basket lift arm attached to a toothed rod, a reversible-drive gear motor, and a pair of roller-activated microswitches. The gear motor engages the teeth on the rod and moves it up or down based on the motor's rotation. Microswitches at the upper and lower limits of movement stop the motor when the basket is fully up or down. They also reverse the direction of current flow to reverse the motor direction. When the manually set or programmed cooking time has elapsed, the basket lift receives current and raises the basket out of the oil.

In units configured for manual (push-button) controls, a mechanical or electrical timer controls voltage to the system. Turning a rotary knob sets the cook time, and pressing the button in the middle of the knob activates the motor. When the timer times down, power is supplied to the opposite pole of the motor through the upper microswitch. The motor drives the rod upward until it loses contact with the upper microswitch, cutting power to the motor and stopping the lift.

In units configured for basket lift timers or Computer Magic computers, the process is almost identical. The difference is that the push button mechanical timer is replaced with timing circuitry in the computer or controller. The operator programs the specific cook times (and other settings) into the computer or controller. When the product button is pressed, the timing circuitry activates a coil in the basket lift relay to supply power to the lower microswitch. As with the manually controlled units, the microswitches stop the motor at the lift's upper and lower travel limits and reverse the direction of current flow, reversing the motor's direction.

There are three basket lift problem types. They are

- binds and jams,
- motor and gear wear, and

• electronics failure.

Binds and Jams

Noisy, jerky, or erratic movement of the lifts is usually due to lack of lubrication of the rods and their bushings. Apply a light coat of LubriplateTM or similar lightweight white grease to the rod and bushings to correct the problem.

Another possible cause of binding is the improper positioning of the motor, which prevents the gear from correctly engaging the teeth in the rod. To correct the problem, loosen the screws that hold the motor in place and move it forward or backward until the rod has just enough slack to be rotated slightly.

Motor and Gear Wear

The most likely problem encountered in this category is erratic motion of the lift due to a worn drive gear. Failure to keep the lift rod and bushings properly lubricated will cause unnecessary wear of the gear. Correct the problem by replacing the worn gear.

If the lift cycles correctly but fails to remain in the "up" position (i.e., goes up, but then slowly settles back down into the frypot), the problem is a failed motor brake. The brake cannot be repaired and the motor must be replaced.

If the motor fails to run when power is reaching it, replace the motor because it has burned-out.

Electronics Failure

An electronics failure may be caused by relays, microswitches, capacitors, resistors, interface boards, wiring, and controls. Troubleshooting electronics is a process of verifying current flow through the individual components up to and including the motor. Using a multimeter set to the 250 VAC range, check the connections on both sides of each component for the presence of 120 VAC. Examine the diagrams on Pages 1-31 and 1-32 to identify components and wiring connection points. (See Page 1-22 for simplified basket lift schematics.)

1.5.2 Interpretation of Analog Controller Lights

Power light ON, heat light cycling, trouble light OFF, and melt light ON:

- If the fryer oil temperature is below 180°F (82°C), the lights indicate that the unit is operating normally.
- If the fryer oil temperature is above 180°F (82°C) and the heat light continues to cycle as if in the melt cycle, this may indicate a defective probe circuit or low incoming 12 VAC to the controller.

Power light ON, heat light ON, trouble light OFF, and melt light OFF:

- If the fryer oil temperature is above 180°F (82°C) and below the setpoint temperature, the lights indicate that the unit is operating normally.
- If the fryer oil temperature is above setpoint and the heat light remains lit, this may indicate a defective probe circuit.

Power light ON, heat light OFF, trouble light ON, and melt light OFF:

- If the fryer oil temperature is below 410°F (210°C), the lights indicate one of the following:
- a. The probe circuit is defective, or
- b. There is a connection problem on pins 2 or 10 on the 15-pin wiring harness.
- If the fryer oil temperature is above 410°F (210°C), the lights indicate a "run-away" heating circuit.

1.6 Probe Resistance Chart

	Probe Resistance Chart For use with 35- and 45-series fryers manufactured with Minco Thermistor probes only.																
F	OHMS	С		F	OHMS	С		F	OHMS	С		F	OHMS	С	F	OHMS	С
60	1061	16		130	1206	54	1	200	1350	93	1	270	1493	132	340	1634	171
65	1070	18		135	1216	57]	205	1361	96		275	1503	135	345	1644	174
70	1080	21		140	1226	60		210	1371	99		280	1514	138	350	1654	177
75	1091	24		145	1237	63		215	1381	102		285	1524	141	355	1664	179
80	1101	27		150	1247	66		220	1391	104		290	1534	143	360	1674	182
85	1112	29		155	1258	68		225	1402	107		295	1544	146	365	1684	185
90	1122	32		160	1268	71		230	1412	110		300	1554	149	370	1694	188
95	1133	35		165	1278	74		235	1422	113		305	1564	152	375	1704	191
100	1143	38		170	1289	77		240	1432	116		310	1574	154	380	1714	193
105	1154	41		175	1299	79		245	1442	118		315	1584	157	385	1724	196
110	1164	43		180	1309	82		250	1453	121		320	1594	160	390	1734	199
115	1174	46		185	1320	85		255	1463	124		325	1604	163	395	1744	202
120	1185	49		190	1330	88		260	1473	127		330	1614	166	400	1754	204
125	1195	52		195	1340	91		265	1483	129		335	1624	168	405	1764	207

1.7 Troubleshooting Guides

The following are only guides. They are provided to assist the technician or service professional in the isolation of failures in components and wiring on the fryer.

1.7.1 Troubleshooting the 24 VAC Circuit

Troubleshooting the 24 VAC Circuit: Analog Controller

Before troubleshooting, verify that the drain valve(s) is fully closed and move the power switch into the ON position.

PROBLEM	PROBABLE CAUSES
24 VAC not present at gas valve or the power switch.	Failed 24 volt transformer
Continuity across the power switch not equal to 0 .	Failed power switch
Continuity across the thermostat not equal to 0 .	Failed thermostat

• If 24 VAC is present at the gas valve, go to *Troubleshooting the Gas Valve*, Section 1.7.2.

Troubleshooting the 24 VAC Circuit: Electronic Ignition (Computer Controller)

Before troubleshooting, verify that the drain valve is fully closed, then turn on the controller.

PROBLEM	PROBABLE CAUSES
No LEDs on the interface board are lit.	 Failed 24 volt transformer Failed interface board Failed or open drain safety switch Failed wiring between components
24 volt LED on the interface board is lit, no others.	 Failed interface board Failed or open drain safety switch Failed wiring between components
GV LED on the interface board is lit (with or without other LEDs).	 Failed interface board Open high-limit thermostat Failed or open drain safety switch Failed wiring between interface board and gas valve Failed gas valve
LED 3 is continually lit, but LED 2 and LED 4 are not lit.	Failed heat relayFailed interface board
LEDs 2, 3, and 4 are lit, but 24 VAC is not present at V1S (V1D and V2D on dual-vat units).	Failed igition moduleFailed interface board
LEDs 2, 3, and 4 are lit, and 24 VAC is present at V1S (V1D and V2D on dual-vat units).	Failed interface board

• If a failed ignition module is suspected, replace the questionable module with one known to be good to isolate the problem.

- If 24 VAC is present on pin 6 on J1, but the pilot will not light, go to *Troubleshooting the Gas Valve*, Section 1.7.2.
- If 24 VAC is present on pin 20 of the 20-pin terminal block, but not at the gas valve, go to *Troubleshooting the Gas Valve*, Section 1.7.2.

Troubleshooting the 24 VAC Circuit: Standing Pilot (Computer Controller)

Before troubleshooting, verify that the drain valve is fully closed, then turn on the controller.

PROBLEM	PROBABLE CAUSES
No LEDs on the interface board are lit.	 Failed 24 volt transformer Failed interface board Failed or open drain safety switch Failed wiring between components
24 volt LED on the interface board is lit, no others.	 Failed interface board Failed or open drain safety switch Failed wiring between components
GV LED on the interface board is lit (with or without other LEDs).	 Failed interface board Open high-limit thermostat Failed or open drain safety switch Failed wiring between interface board and gas valve Failed gas valve
Continuity across drain safety switch(es) not equal to 0	• Failed or open drain safety switch.
24 VAC is not present at V1S (V1D and V2D on dual-vat units).	Failed interface board

• If 24 VAC is present all the way through to the high-limit, go to *Troubleshooting the Gas Valve*, Section 1.7.2.

1.7.2 Troubleshooting the Gas Valve

Before troubleshooting, verify that the gas main street valve is open and the fryer gasline cutoff valve is open. Place the gas valve in the ON position.

PROBLEM	PROBABLE CAUSES
Incoming gas pressure is too high or low.	Problem with gas supply
Pilot won't remain lit, low millivolt output from thermopile.	Failed thermopile
Pilot won't remain lit, good millivolt output from thermopile.	Failed gas valveFailed high-limit

• If 24 VAC is not present at the gas valve, go to *Troubleshooting the 24 VAC Circuit*, Section 1.7.1.

1.7.3 Troubleshooting the Thermostat

Check the calibration of the thermostat before troubleshooting, if possible.

PROBLEM	PROBABLE CAUSES		
·····	Failed thermostat		
mum setting.	Failed wiring		

• If 24 VAC is present at the gas valve, but the burner is not lighting, go to Troubleshooting the Gas Valve, Section 1.7.2.

1.7.4 Troubleshooting the Temperature Probe

Follow these guidelines to troubleshoot the temperature probe:

- 1. While it is still in the frypot, inspect the probe body for damage. Inspect the leads for fraying, burning, breaks, or kinks. If the probe is bent, dented, or cracked, or if the leads are damaged, replace the probe.
- 2. Determine the temperature of the cooking oil using a thermometer or pyrometer placed at the tip of the probe.
- 3. Disconnect the 15-pin wiring harness from the interface board. Measure the probe resistance using J2 pins 13 and 14.
- 4. Resistance should approximately equal the given probe resistance for the corresponding temperature on the chart in Section 1.6, Page 1-23. If not, the probe has failed and must be replaced. Probes cannot be calibrated.
- 5. If the resistance matches the corresponding temperature on the chart, measure the resistance through J2 pin 13 and ground. Then, through J2 14 and ground. If the resistance of each pin is 5 megaohms or greater, the probe is working correctly. If the resistance is less than 5 megaohms, it has failed and must be replaced.

Non- CE Standard for Gas Pressure					
	Model 40/GF16FR		Model 50		
Gas Type	Nat	LP	Nat	LP	
Min Pressure W.C/kpa/mbar	6/1.49/14.93	11/2.74/27.37	6/1.49/14.93	11/2.74/27.37	
Max Pressure W.C/kpa/mbar	14/3.48/34.84	14/3.48/34.84	14/3.48/34.84	14/3.48/34.84	
Orifice Size (mm)	1.7	1.05	1.45	0.86	
Number of Orifices	9	9	18	18	
Manifold Pressure (WC)	4	10	3.0	8.25	


CE Standard for Gas Pressure					
	Model	Model 50			
Gas Type	G20	G25	G30	G31	
Rate (kW NET)		28.5			
Pressure (mbar)	20	20-25	37-50	37-50	
Orifice Size (mm)	1.40	1.40	0.86	0.86	
Number of Orifices	18	18	18	18	
Manifold Pressure (mbar)	7,5	10	20,6	20,6	

UKCA Standard for Gas Pressure					
	Model	Model 50			
Gas Type	G20	G25	G30	G31	
Rate (kW NET)		28.5			
Pressure (mbar)	20	20-25	37-50	37-50	
Orifice Size (mm)	1.40	1.40	0.86	0.86	
Number of Orifices	18	18	18	18	
Manifold Pressure (mbar)	7,5	10	20,6	20,6	


Australian Standard for Gas Pressure					
	Model 40/GF16FR/AGF14		Model 50		
Gas Type	Nat	LP	ULPG	Nat	LP
Min Pressure	1.13kpa	2.75 kpa	2.75 kpa	1.13kpa	2.75 kpa
Max Pressure	5.0 kpa	7.0 kpa	7.0 kpa	5.0 kpa	7.0 kpa
Orifice Size (mm)	1.7	1.05	0.86	1.20	0.81
Number of Orifices	9	9	9	18	18
Manifold Pressure	0.80 kpa	2. 5 kpa	2. 5 kpa	0.96 kpa	2.2 kpa
Gas Consumption (per hour)	107Mj	107Mj		110Mj	110Mj

1.8 Wiring Diagrams


1.8.1 Standing Pilot

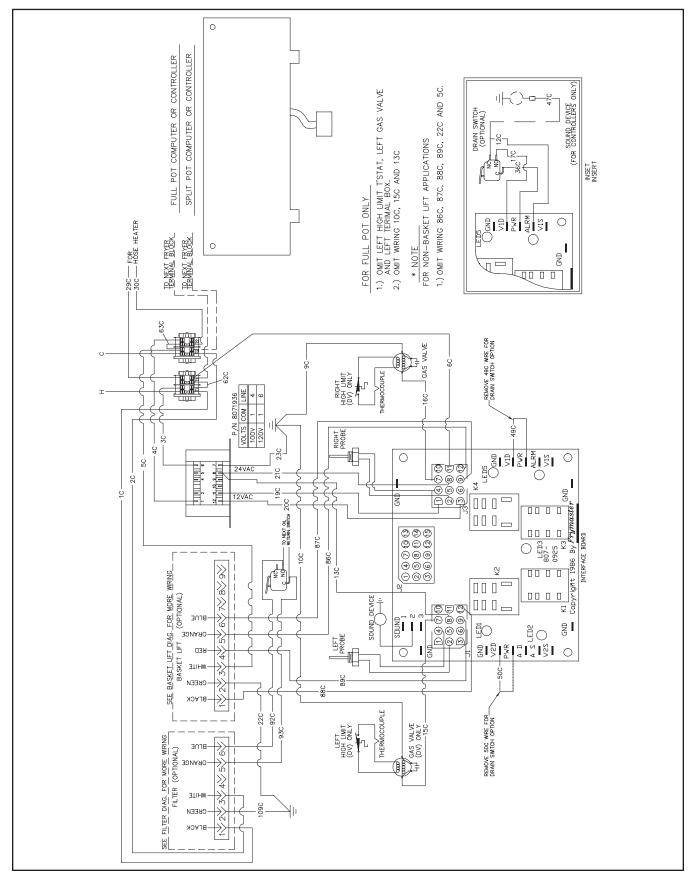


1.8.2 Electronic Ignition

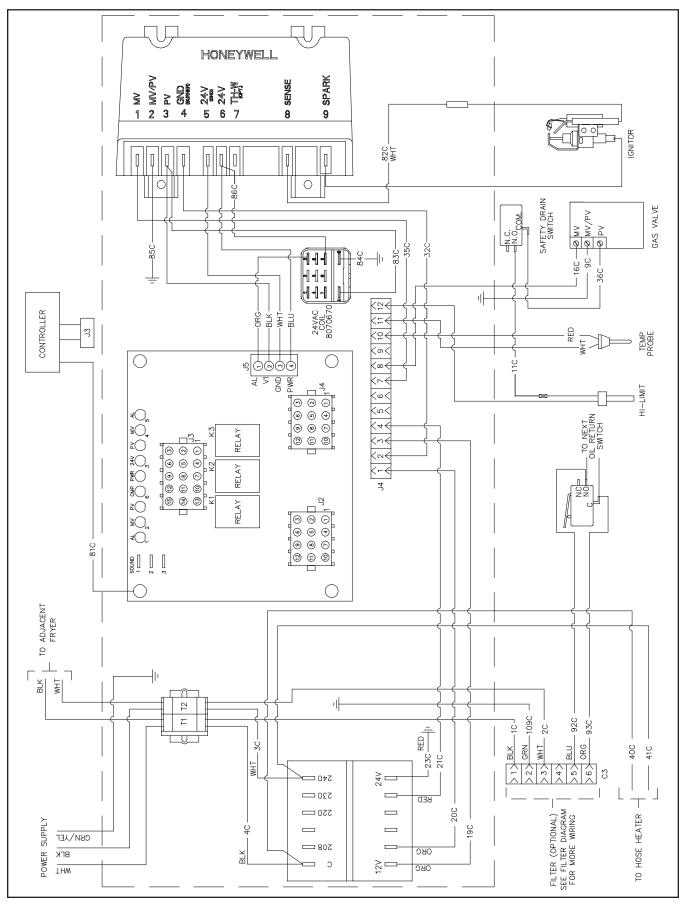


1.8.3 Non-Computer Controlled Fryer

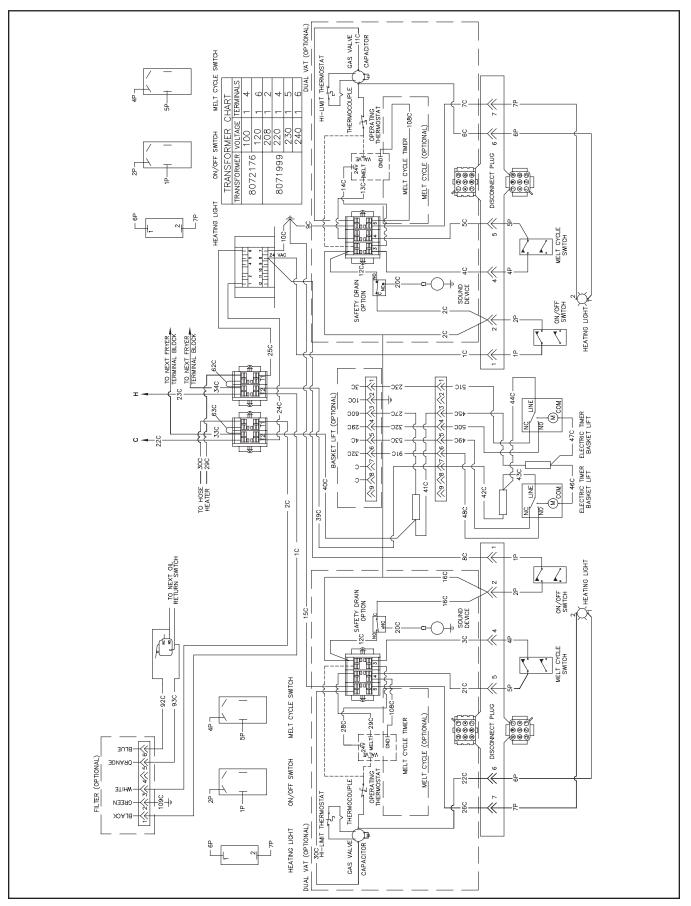



1.8.4 Electronic Ignition

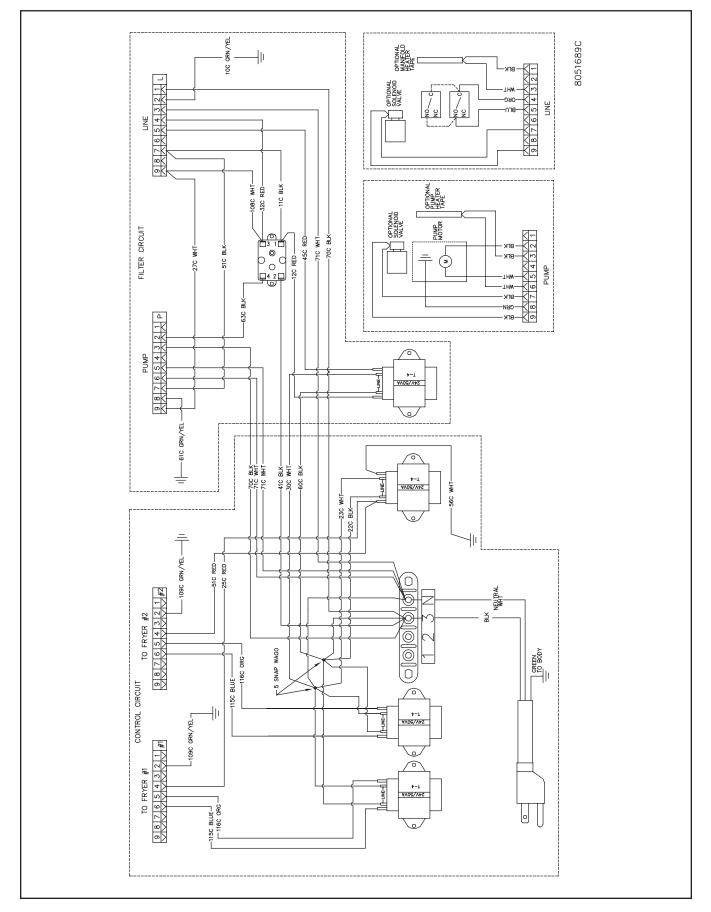


1.8.5 Filter Box

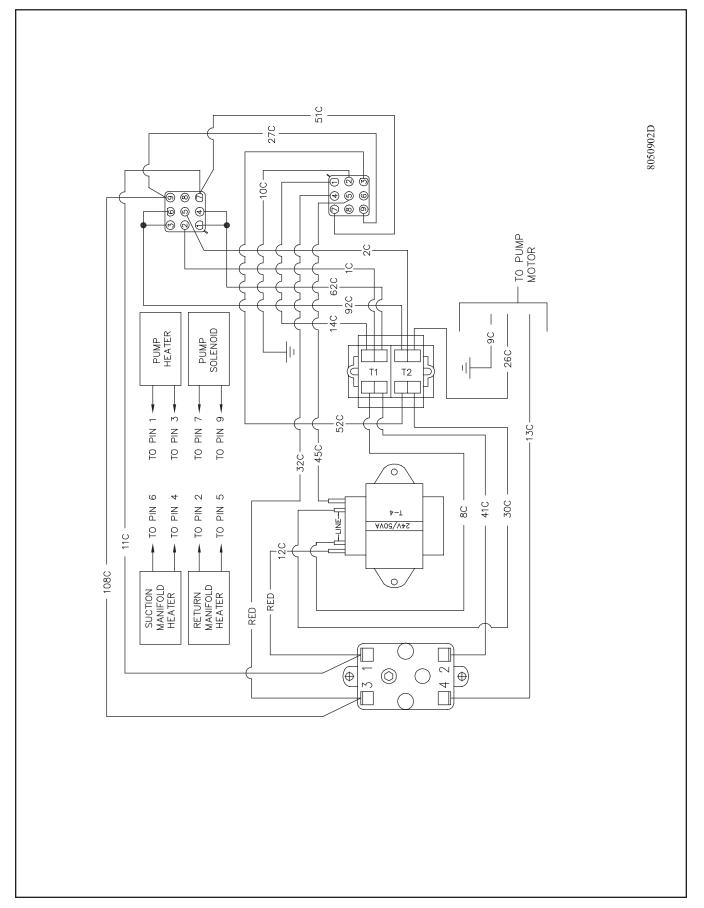

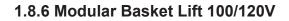

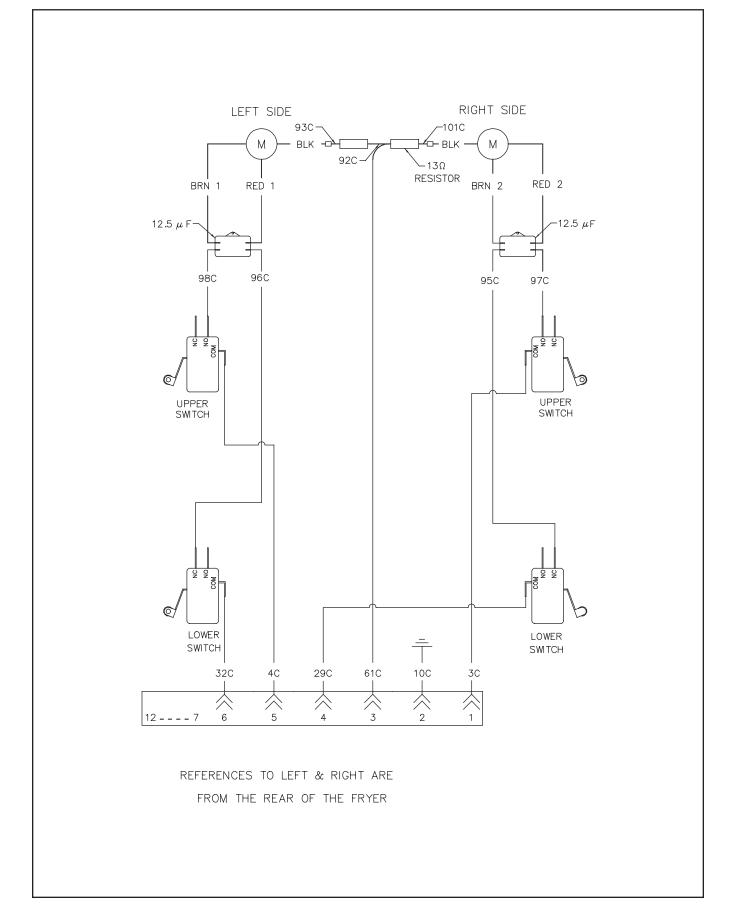


1.8.7 Modular Basket Lift 208/250V

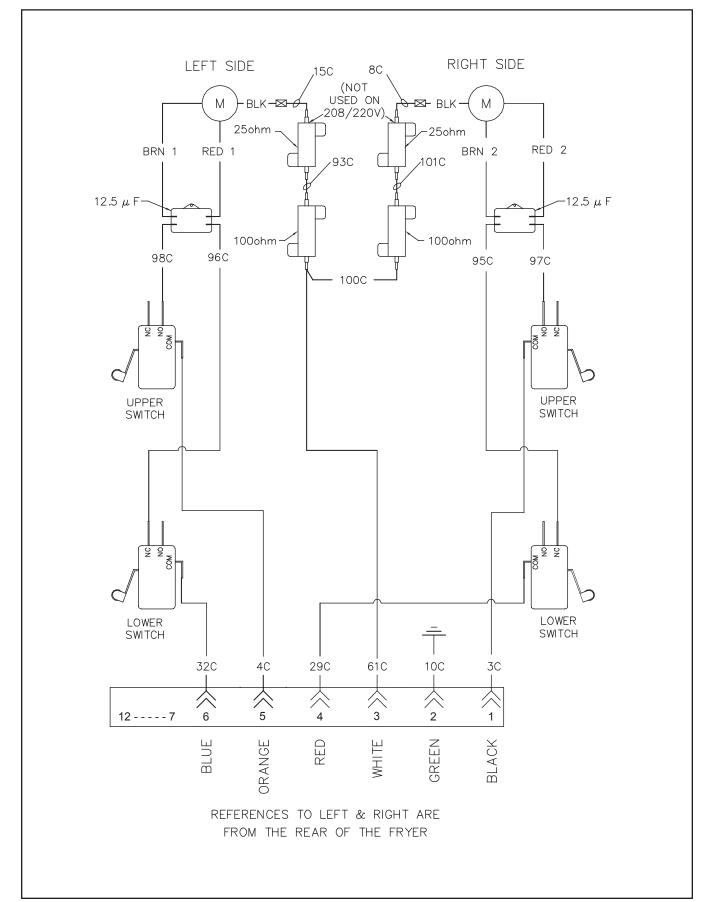


PERFORMANCE PRO SERIES GAS FRYERS MODELS MJ35/40/45/50 CHAPTER 2: PARTS LIST

2.1 Accessories

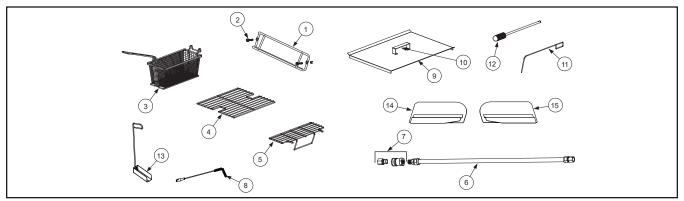

ITEM	PART #	COMPONENT
1	8102793	Wireform Basket Hanger
1A	2107096	Basket Hanger MJ40
	2101808	Basket Hanger MJ50
*	1062186	Basket Hanger, Burger King [®]
*	8234447	Basket Hanger, Buffalo Wild Wings [®] and Jack in the Box [®]
*	8231462	Basket Hanger, Checkers®
*	1062185	Basket Hanger, Checkers [®] , Bracket
2	8090171	Basket Hanger Screw (basket hanger spacer, 8090921)
*	8030099	Basket, Full
3	8030271	Basket, Twin
*	8030190	Basket, Twin, Buffalo Wild Wings®
*	8030357	Basket, Triple
4	8030132	Wire Basket Support Rack, Full-vat (MJ 45/50)
5	8030133	Wire Basket Support Rack, Dual-vat
*	8030032	Wire Basket Support Rack, without Notches (MJ 35/40)
*	8030136	Basket Support Screen (MJ 45/50)
*	8030037	Basket Support Screen (MJ 35/40)
6	8100088	Flexible Gas Line, 1"- 36"
*	8100085	Flexible Gas Line, 1"- 48"
*	8100084	Flexible Gas Line, ³ / ₄ "- 48"
7	130001257	Quick Disconnect Fitting, 1" Male & Female
8	8030278	Brush, L-Shaped
*	8030188	Sediment Tray, Full-vat (MJ 35/40)
*	8030103	Sediment Tray, Full-vat, (MJ 45/50)
*	8030107	Sediment Tray, Dual-vat, Left (MJ 45/50)
*	8030108	Sediment Tray, Dual-vat, Right (MJ 45/50)
9	8065518	Cover, Frypot or Holding Station, Full-vat
*	8063232	Cover, Frypot or Holding Station, Dual-vat
10	8260993SP	Handle Kit, Frypot Cover
*	8261351	Nut Retainer, ¹ / ₄ -20 Nutsert (pkg. of 10)
11	8030197	Fryer Friend (Clean-out Rod), 27"
12	8030209	Brush, Frypot
13	8233660	Crumb Scoop
14	8235936	Splash Guard, Right
15	8235937	Splash Guard, Left
*	OPT32686	Foodwarmer (with scoop pan)
*	8066988SP	Foodwarmer Kit
*	1064786	Spreader Storage Pan
*	9103557	Flue Deflector (See Section 2.6 for more information and associated items.)
*	8261017	Screw Kit, Flue Deflector (See Section 2.6 for more information and associated items.)
*	KIT3647	Applebee's [®] Heat Lamp (available as OPT33030 for MJ 45/50 only)

2.2 Basket Lift and Associated Parts

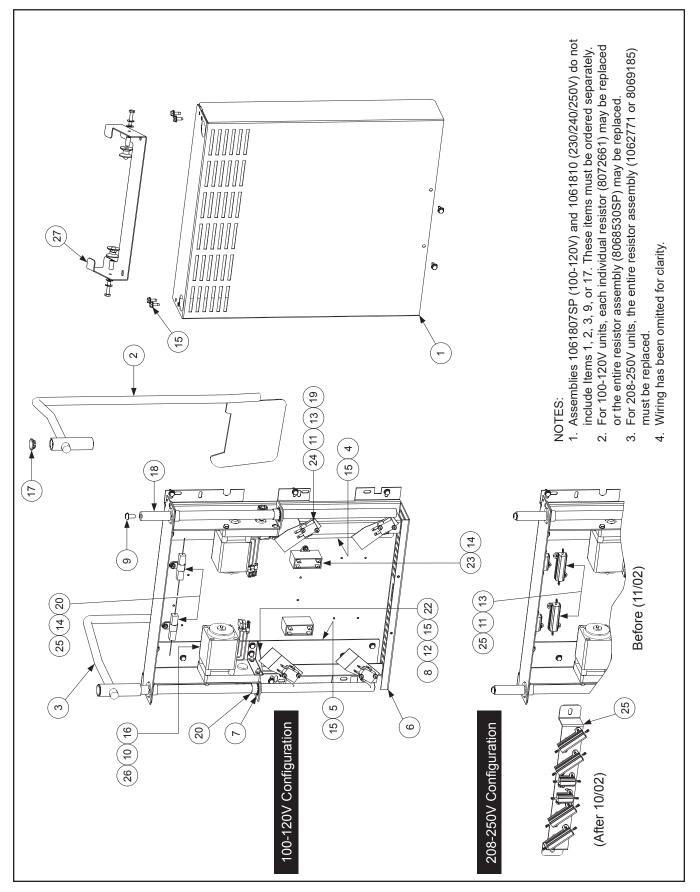


ITEM	PART #	COMPONENT
1	9104776	Enclosure, Stainless Steel
*	9004776	Enclosure, Cold-rolled Steel
*	8261991	Kit, Cold-rolled Steel Enclosure (with 12 screws)
2	8237062	Basket Lift Arm, Left MJ45 (use 8237049 MJ35)
3	8237064	Basket Lift Arm, Right MJ45 (use 8237051 MJ35)
4	9018499	Chassis, Left
5	9028499	Chassis, Right
6	2002942	Mount, Basket Lift
7	8090082	Truarc Retaining Ring, ³ / ₄ "
8	8261361	Screw, 8-32 x 1" Slotted Truss Head (pkg. of 25)
9	8090127	Screw, ¹ / ₄ -20 x ¹ / ₂ " Slotted Round Head
10	8090186	Lock Washer with External Teeth, #8
11	8261366	Nut, 4-40 Hex Keps with External Tooth (pkg. of 25)
12	8090247	Nut, 8-32 Hex Keps
13	8261359	Screw, 4-40 x ³ / ₄ " Slotted Round Head (pkg. of 25)
14	8261371	Screw, #8 x ¹ / ₂ " Hex Head Drill Point (pkg. of 25)
15	8261374	Screw, #10 x ¹ / ₂ " Hex Head (pkg. of 25)
16	8090503	Screw, 8-32 x ¹ / ₂ " Hex Head
17	8100172	Plug, Stainless Steel, 5%" Hole
18	8101012	Toothed Rod, Basket Lift
19	8120442	Insulation, Microswitch
20	8130035	Bushing, Bronze, .640" ID
21	8160033	Ty Wrap, Screw Mount
22	9005529	Gusset, Basket Lift Motor
23	8072513	Capacitor, Motor
24	8072572	Microswitch
25		Resistor Assembly
	8068530SP	100-120V
	1062771	208-250V
26	8065964SP	Gear Motor Assembly
	8101013	Gear
	8090504	Set Screw
	8100973	Woodruff Key
27	8069257SP	Roller Guide/Bracket Assembly
		Basket Lift Assemblies
*	1061807SP	100-120V (without relay)
*	1061810SP	208-250V
*	KIT6421	Complete 120V Basket Lift Assembly for FPP35/40/45/50
*	KIT7193	Complete 230V Basket Lift Assembly for FPP35/40/45/50
*	KIT7413	Complete 230V Basket Lift Assembly for PMJ35/40
*	8073699	Harness, Basket Lift
28	8241476	Drip Pan, Left
29	8241477	Drip Pan, Right
*	2008862	Drip Plate/Shield

** Diagrams on Pages 1-22, 1-31, 1-32 in Chapter 1.

2.3 Cabinetry


2.3.1 FPP/FMP Model Cabinetry

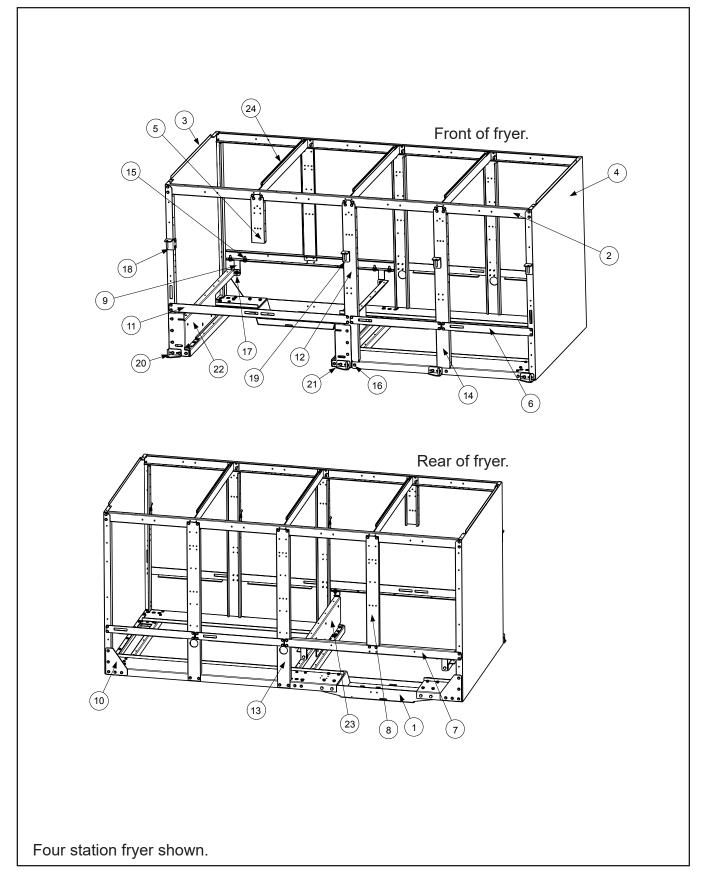

ITEM	PART #	COMPONENT
		Cabinet Assemblies (see Section 2.3.3)
	1069088	Two Station Fryer, Stainless (1069089, Cold Rolled Steel)
	1069090	Three Station Fryer, Stainless (1069091, Cold Rolled Steel)
	1069092	Four Station Fryer, Stainless (1069093, Cold Rolled Steel)
	1069094	Five Station Fryer, Stainless (1069095, Cold Rolled Steel)
	1064525	Applebee's [®] Dump Station
1		Base Assemblies
	1063785	Two Station Fryer
	1064019	Three Station Fryer
	1064020	Four Station Fryer
	1064021	Five Station Fryer
2		Brace, Top Cabinet
	9007730	Two Station Fryer
	9009430	Three Station Fryer
	9009318	Four Station Fryer
	2005474	Five Station Fryer
*		Back Panels, Upper (Use with cabinet assemblies.)
	2006901	Use with 1063783, 1064017, 1064018, 1064031, 1064033, 1064034.
	2006906	Use with 1064016, 1064018, 1064032, 1064034.
	2106608	Use with 1063783, 1064017, 1064018.
	2106895	Use with 1064016, 1064018.
		Back Panels, Lower
	2006905	Use with 1063783, 1064017, 1064018, 1064031, 1064033, 1064034.
	2006908	Use with 1064016, 1064018, 1064032, 1064034.
	2106897	Use with 1064016, 1064018.
	2106874	Use with 1064034, 1064032, 1064016, 1064018.
	2008567	Use with 106-4525 (Applebee's [®] Dump Station).
3		Side, Left Cabinet
	2116893	Side, Left Cabinet, Stainless Steel (2016917, Cold Rolled Steel)
	2116933	Side, Left Cabinet, Stainless Steel with hole (2016934, Cold Rolled Steel)
4		Side, Right Cabinet
	2126893	Side, Right Cabinet, Stainless Steel (2026917, Cold Rolled Steel)
	2126933	Side, Right Cabinet, Stainless Steel with hole (2026934, Cold Rolled Steel)
		Other Components
*	2200927	Heat Shield, Filter, Buffalo Wild Wings (2200928, Third Vat)
*	2006908	Back, Lower Cabinet, Aluminized (three and five station fryers)
*	2106897	Back, Lower Cabinet, Stainless Steel (three and five station fryers)
5	2002235	Bracket, Component Box
6	2001953	Brace, Front Cabinet
7	2006057	Brace, Cabinet Cross
8	2006062	Support, Upper Rear Cabinet
9	2006310	Support, Rear Cabinet Rail
10	2006346	Gusset, Rear Cabinet
11	2006486	Brace, Front Cross
12	2006892	Post, Front Door Long
13	2006894	Post, Rear Cabinet Long
14	2006911	Post, Front Cabinet Long
15	8261389	Screw, ¹ / ₄ -20 x ³ / ₄ " Hex Head (pkg. of 10)
*	9107443	Top Connecting Strip, Frypot
*	9106650	Channel, Top Connecting Strip
*	8231885	Top Connecting Strip and Channel, Burger King
*	9104617	Top Connecting Strip, Fryer-to-Spreader
16	8261374	Screw, #10 x ¹ / ₂ " Washer Hex Head (pkg. of 25)
17	8090417	Nut, Flange
18	8234727	Hinge Assembly, Left Upper
* Not Illustrated		FPD/FMP Model Cabinetry continued on next name

* Not Illustrated. * Four station fryers use two backs made for two station fryers. Five station fryers use two backs: a three station fryer back and a two station fryer back.

ITEM	PART #	COMPONENT
19	8234728	Hinge Assembly, Right Upper
20	8234745	Hinge Assembly, Left Lower
21	8234746	Hinge Assembly, Right Lower
22	2401617	Rail Assembly, Left (nut separate: 8090495)
23	1087559	Rail Assembly, Right (nut included)
*	2401622	Rail, Slide (Replaced 2204182, 2214483, 2224183)
*	2006935	Stop, Filter Rail
24	9007326	Divider
*	KIT0293	Joiner Kit, Applesbee's® Dump Station
*	2109291	Top Connecting Strip, Fryer-to-Fryer
*	8090193	Nylon Washer
*	8102346	Magnet, Door
*		Garland Range Cabinetry (See Section 2.19, Garland Range)

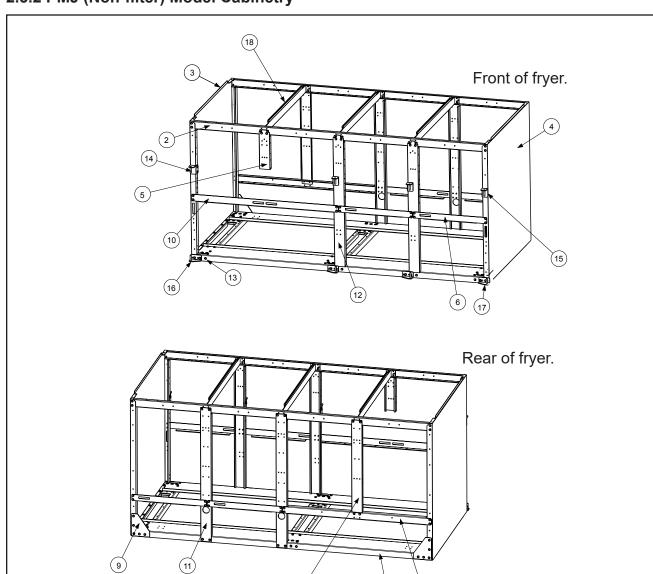

2.3.2 PMJ (Non-filter) Model Cabinetry

(1)

(7)

Four station fryer shown.

8


ITEM	PART #	COMPONENT
		Cabinet Assemblies
	1064028	Single Station Fryer, Stainless (1064030, Cold Rolled Steel) (8066741 Garland)
	1064036	Two Station Fryer, Stainless (1064051, Cold Rolled Steel)
	1064037	Three Station Fryer, Stainless (1064052, Cold Rolled Steel)
	1064038	Four Station Fryer, Stainless (1064053, Cold Rolled Steel)
	1064039	Five Station Fryer, Stainless (1064054, Cold Rolled Steel)
	1064525	Applebee's [®] Dump Station
1		Base Assemblies
	1065440	Single Station Fryer
	1064040	Two Station Fryer
	1064041	Three Station Fryer
	1064042	Four Station Fryer
	1064043	Five Station Fryer
*	1001015	Back Panels, Single
	2006903	Use with 1064030, 1064028.
	2006904	Use with 1064030, 1064028.
	2106817	Use with 1064028.
	2106818	Use with 1064028.
	2005867	Use with 1054525 (Applebee's [®]).
*	2003807	Back Panels, Upper (Use with cabinet assemblies.)
	2006901	Use with 1064036, 1064038, 1064039, 1064051, 1064053.
	2006901	
		Use with 1064036, 1064051, 1064053.
	2006906	Use with 1064037, 1064039, 1064052.
	2006907	Use with 1064052, 1064037.
	2106608	Use with 1064036. 1064038. 1064039.
	2106895	Use with 1064037, 1064039.
	2106896	Use with 1064037.
*	2106650	Use with 1064036, 1064038.
Ť	200/005	Back Panels, Lower (Use with cabinet assemblies.)
	2006905	Use with 1064036, 1064038, 1064039, 1064051, 1064053.
	2006908	Use with 1064037, 1064039, 1064052.
	2106874	Use with 1064037, 1064039, 1064052.
2	2106897	Use with 1064037, 1064039.
2	0004012	Brace, Top Cabinet
	9004813	Single Station Fryer
	9007730	Two Station Fryer
	9009430	Three Station Fryer
	9009318	Four Station Fryer
	2005474	Five Station Fryer
3	011 (000	Side, Left Cabinet
	2116893	Side, Left Cabinet, Stainless Steel (2016917, Cold Rolled Steel)
	2116933	Side, Left Cabinet, Stainless Steel with hole (2016934, Cold Rolled Steel)
4	010 0000	Side, Right Cabinet
	2126893	Side, Right Cabinet, Stainless Steel (2026917, Cold Rolled Steel)
	2126933	Side, Right Cabinet, Stainless Steel with hole (2026934, Cold Rolled Steel)
·		Other Components
*	2006908	Back, Lower Cabinet, Aluminized (three and five station fryers)
*	2106897	Back, Lower Cabinet, Stainless Steel (three and five station fryers)
5	2002235	Bracket, Component Box
6	2001953	Brace, Front Cabinet
7	2006057	Brace, Cabinet Cross
8	2006062	Support, Cabinet upper Rear
9		
* Not Illustrate	2006346	Gusset, Rear Cabinet <i>PMJ (Non-filter) Model Cabinetry</i> continued on next page

PMJ (Non-filter) Model Cabinetry continued on next page...

** Four station fryers use two backs made for two station fryers. Five station fryers use two backs, a three station fryer back with a two station fryer back.


ITEM	PART #	COMPONENT
10	2006486	Brace, Front Cross
11	2006894	Post, Rear Cabinet Long
12	2006911	Post, Front Cabinet Long
13	8261374	Screw, #10 x ¹ / ₂ " Washer Hex Head (pkg. of 25)
14	8234727	Hinge Assembly, Left Upper
15	8234728	Hinge Assembly, Right Upper
16	8234745	Hinge Assembly, Left Lower (8234713 on single fryers)
17	8234746	Hinge Assembly, Right Lower
18	9007326	Divider
*	KIT0293	Joiner Kit, Applesbee's [®] Dump Station
*	8101105	Magnet, Door - Single Fyer
20	8090193	Nylon Washer

2.4 Casters, Legs, and Associated Hardware

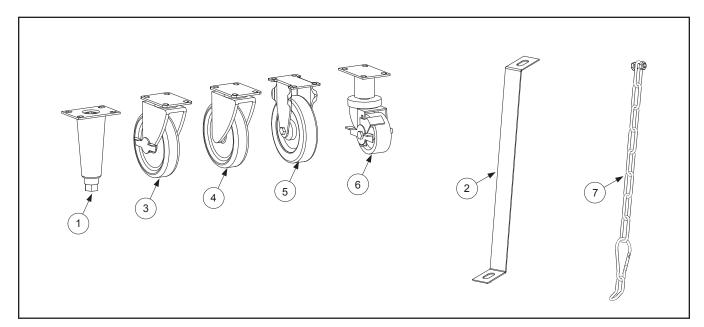


ITEM	PART #	COMPONENT
1		Legs
	8103169	Legs (pkg. of 4)
	8103168	Leg, Individual
2	8261095	Anchor Strap Kit
		Casters
3	8100357	Caster, 5" Swivel with Brake (with hardware, 8261118)
4	8100356	Caster, 5" Swivel without Brake (with hardware, 8261117)
5	8100378	Caster, 5" Rigid
6	8100651	Caster, 3" with Brake, Filter Cabinet (with hardware, 8261130)
*	8100750	Caster, 5" Rigid (PMJ units)
7	8260900	Chain Restraint Kit
*	8261113	Fastener Kit (one per caster or leg)

2.5 Component Boxes

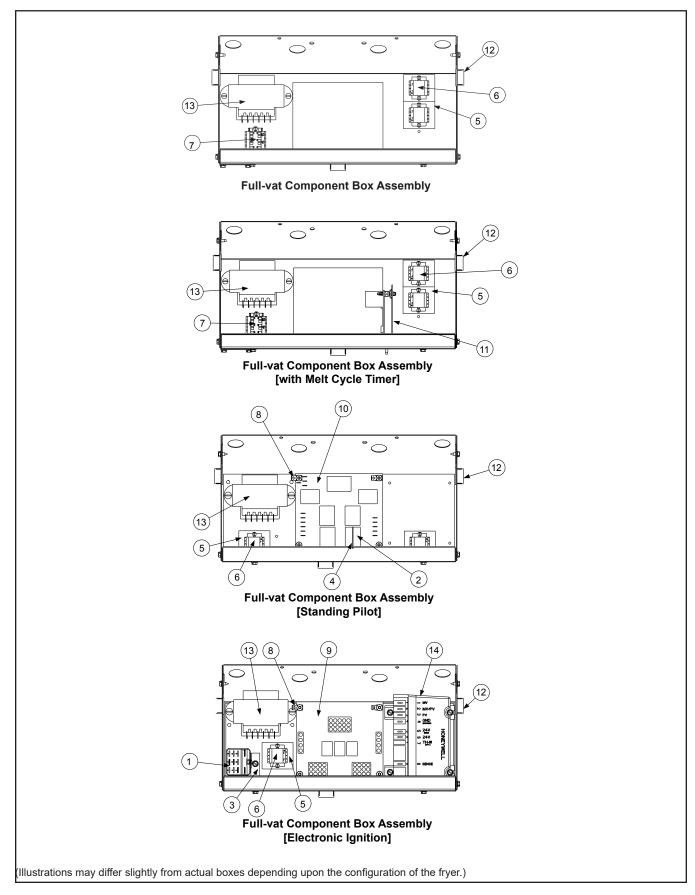


ITEM	PART #	COMPONENT
1	8070670	Relay, 24V
2	8076084	Relay, Latch/Valve (DPDT) 7A 12V
*	8070834	Relay, Basket Lift
3	2007176	Bracket, Relay
4	8102243	Spring, Relay Hold Down
5	8160217	Insulating Paper
6	8101164	Terminal Block, 1 Plc. Screwless Terminal
7	8101168	Terminal Block, Screwless End
8	8261337	Tab, Terminal (pkg. of 5)
9	8065857	Interface Board, Electronic Ignition
10	8262425	Interface Board, Pilot Ignition
11	8261546	Melt Cycle Timer Kit
12	8100045	Bushing, .875
13		Transformers
	8070800	120V/24V
	8072176	100-120V/12V & 24V
	8070680	208-240V/24V
	8071999	208-240V/24V, 208-250V/12V & 24V
14	8075244	Ignition Module, Fenwal
*	8262898	Kit to replace Honeywell module with Fenwal (8075244)
*	8065879SP	Cable Assembly, Ignition Module, Interface Board to Module
*	8065830SP	Cable, Ignition, with Ceramic Cover
*	8073483	Cable, Ignition (used with MJ45/50 ignition cable kit, 8261721)
*	8074375	Connector, Rajah
*	8071928	Flame Sensor Electrode
*	WIR0165	Component Shield (Std.) Wiring (FV, 208-250 Export only)
*	8090349	Spacer, Interface Board
*	8261346	Spacer, Ignition Module (pkg. of 10)
*	WIR0148	Component Shield (with Mechanical Timer) Wiring
*	WIR0161	Component Shield (with Melt Cycle) Wiring (DV)
*	WIR0164	Component Shield (with Melt Cycle) Wiring (FV, 240V and below)
*	WIR0160	Component Shield Wiring (DV)
*	WIR0163	Component Shield Wiring (FV)
*	WIR0162	Component Shield Wiring (FV, DV)
*	WIR0258	Wiring, Component Shield
*	WIR0329	Component Shield Drainswitch Wiring (DV/FV)
*	WIR0349	Microswitch Wiring (DV)
*	WIR0350	Microswitch Wiring (DV)

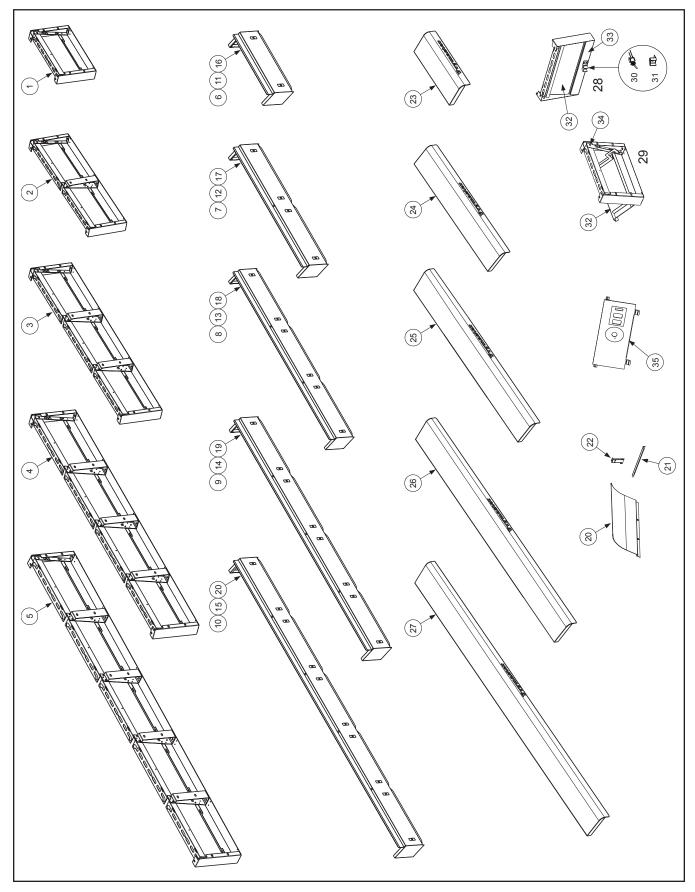

2.6 Control Panel Assemblies, Flue Caps, and Related Items

ITEM	PART #	COMPONENT
		Control Panel Assemblies
1	1081550	Single Station Fryer
2	1081551	Two Station Fryer
3	1081552	Three Station Fryer
4	1081553	Four Station Fryer
5	1081554	Five Station Fryer
*	1064535	Applebee's® Control Panel
		Flue Caps
		PMJ 45/50, Filter 35/40, 45/50
6	2106812	Single Station Fryer
7	1064012	Two Station Fryer
8	1064013	Three Station Fryer
9	1064014	Four Station Fryer
10	1064015	Five Station Fryer
		PMJ 35/40, Non-Filter Only
11	2106811	Single Station Fryer
12	1064008	Two Station Fryer
13	1064009	Three Station Fryer
14	1064010	Four Station Fryer
15	1064011	Five Station Fryer
1.5	1061101	Burger King/Checkers
16	1064184	Two Station Fryer (with buttons, 1064188)
17	1064185	Three Station Fryer (with buttons, 1064189)
18	1064186	Four Station Fryer (with buttons, 1064190)
19 *	1064187	Five Station Fryer (with buttons, 1064191)
1 1	8241440	Applebee's [®] Dump Station Flue Cap
20	9103557	Deflector, Flue, 2 holes (9103207, Deflector, Flue, 3 holes)
*	9003933	Heat Shield, Flue
1 1	8261017	Screw Kit, Flue Deflector
21	9004253	Retaining Strip, Flue Cap
22 *	2006584	Support, Flue Cap
-1	2200810	Flue Guard, Panda Express
23	8241409	Top Cap Single Station Fryer
23	8241409	Two Station Fryer
25	8234940	Three Station Fryer
26	8234941	Four Station Fryer
27	8234942	Five Station Fryer
*	8234990	Applebee's® Top Cap
	0201000	Control Panel Assembly with Thermostat Access Door (MJ 35/40)
28	1064050	Complete, with Toggle Switch
29	1064049	Complete, without Toggle Switch (see also 1067449)
		Thermostat Access Door (MJ 35/40)
30	1064386SP	Toggle Switch Assembly
31	8241394	Switch Guard
32	2106930	Door Panel
33	2108289	Frame, with Toggle
34	2106832	Frame, without Toggle
*	1064235SP	Control Panel, MV with Mechanical Timer (FPP)
*	2107026	Control Panel, Spreader Cabinet (FPP)
35	2106946	Control Panel, with toggle swtch holes (PMJ)
*	2108686	Control Panel, without toggle switch holes (PMJ)
*	00/0/01	Carl's Jr. Risers (see instruction sheet 8196443 for installation instructions)
	8262626	Flue Cap, Single
	8262627	Flue Cap, 2-vat
	8262628	Flue Cap, 3-vat
*	8262629	Flue Cap, 4-vat
*	8090171PK	Thumbscrew
* Not Illustra	8261351	Cage Nut

2.7 Controller Assemblies

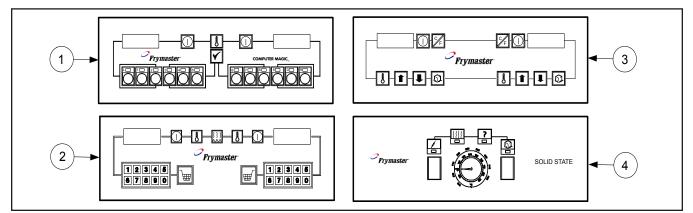

ITEM	PART #	COMPONENT
1		Computer Magic III.5
	8262327	Full-vat (CE, 8262328)
	8262390	Dual-vat (CE, 8262391)
	1067248	On-hood Remote Computer (FV, MJ 45/50)
	8262280	In-hood Remote Computer (FV, MJ 45/50)
		Buffalo Wild Wings [®] Computer
	8262409	Red (<i>overlay</i> , 8074642)
	8262408	White (<i>overlay</i> , 8074644)
	8262449	Violet (overlay, 8074643)
2		Basket Lift Timer
	8262393	Full-vat (CE, 1064172)
	1064171	Dual-vat (CE, 1064173)
3		Digital Controller
	8262394	Full-vat (CE, 1064176)
	1064175	Dual-vat (CE, 1064175)
4		Solid State (Analog Controller)
	1063375	Dual-vat
	1063369	Full-vat (overlay, 8070847)
	8100387	Knob
		Controller Bezel
		Computer
*	2105046	Single Station Tab Mount (Use 2307091 for Screw Mount 09/08)
*	2105819	Two Station Tab Mount (Use 2307092 for Screw Mount 09/08)
*	2106698	Three Station Tab Mount (Use 2307093 for Screw Mount 09/08)
		No Computer
*	2106960	Single Station Fryer
*	2106961	Two Station Fryer
*	2106962	Three Station Fryer
*	2106766	Applebee's [®] Spreader
*	2107002	Blank Bezel, Single (Applebee's [®] spreader, 2108578)
*	2107026	Blank Bezel, 2-vat unit
*	8063660	Sound Device (SMT, 8103141, with 2-pin connector)
*	8064797	Buzzer
*	8062071	Controller Harness
*	8074199	Controller Harness, SMT (Remote, 8074397)

WIRING ASSEMBLIES, HARNESSES, AND REMOTE CABLE ASSEMBLIES

	Wiring Assemblies and Harnesses
8062079SP	100-120V Basket Lift Universal Motor (6-Pin female w/6 wires plus 1 separate wire)
8068555SP	208-240V Modular Basket Lift Motor (6-Pin female w/6 wires plus 4 separate wires)
1061822SP	100-120V Modular Basket Lift Motor (12-pin female w/5 wires)
1061804SP	208-250V Modular Basket Lift Motor (12-pin female w/5 wires plus 3 separate wires)
8064798SP	Basket Lift Power, Non-CE (6-pin male w/6 wires; connects to 8062079SP or 8068555SP)
8066708SP	Basket Lift Power, CE (6-pin male plus 8064798)
8073699	Basket Lift Power, Non-CE/CE (12-pin male w/6 wires, connects to 1061822SP or 1061804SP) 68"
8069777SP	Thermostat Control Universal (control panel-end connections)
8069778SP	Thermostat Control Universal (component shield-end connections)
8069779SP	Basket Lift Universal (control panel-end connections)
8069780SP	Basket Lift Universal (basket lift-end connections)
8069781SP	Wiring Bundle, Component Shield to Controller and Fryer Components (21-wire bundle)
8261560	Kit, 45 Series Wiring (contains 8069777SP through 8069781SP)
8063549SP	Interface Board (interface board to fryer components; 12-pin male w/5 wires)
8066705SP	CE Non-Direct Wiring Power Supply (power cords joined in junction box)
8064214SP	Fryer to Fryer Drain Safety Switch (2-pin male w/two wires and 2-pin female w/two wires)
8064215SP	Fryer to Filter Drain Safety Switch (2-pin male w/two wires and 2-pin female w/two wires)

NOTE: Assemblies 8062079SP, 8069777SP through 8069781SP and kit 8261560 are "universal" in nature. That is, they contain all wires and connectors necessary for all configurations of the application described. Consequently, there may be "extra" wires that are not needed in a particular configuration. Any extra wires should be removed when the assemblies are installed to preclude later confusion.

Remote Computer/Controller to Interface Board Cables		
Each of these assemblies has two 15-pin male connectors, and a 15-wire cable looped through a ferrite ring.		
	Only the length of the cable varies.	
8062071	1.0 foot (30.5cm) (For fryer mounted computer.)	
8063383 15.0 feet (4.6m)		
8063388	20.0 feet (6.1m)	
8064318	30.0 feet (9.1m)	


Remote Computer/Controller Cable Assemblies			
Each of these assemblies has one 15-pin male connector, one 15-pin female connector, and a 15-wire cable.			
	Only the length of the cable varies.		
8063528	7.5 feet (2.3m)		
8063529	8.5 feet (2.6m)		
8063530	10.5 feet (3.2m)		
8063531	12.6 feet (3.8m)		

Remote Computer/Controller Cable Assemblies w/Junction Box and Mounting Bracket

Each of these assemblies consists of a 4 X 4-inch junction box and mounting bracket assembly with one to four 15-pin female connectors and one to four 15-wire cables with a 15-pin male connector on the free end of each cable

capie.		
8068350	One Computer/Controller	
8068349	Two Computers/Controllers	
8068348	Three Computers/Controllers	
8068351	Four Computers/Controllers	


2.8 Door Assembly

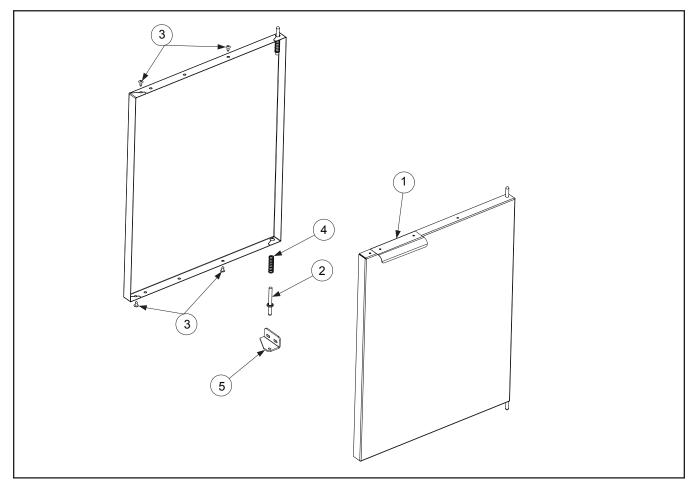

ITEM	PART #	COMPONENT
*	1063965	Door Assembly
1	2304960	Handle
2	2106739	Pin, Door Hinge
3	8090266	Screw, #10 x ¹ / ₂ " Phillips Truss Head
4	8261343	Spring, Door Hinge Lock
5	2324707	Hinge, Lower, Right
*	2314707	Hinge, Lower, Left
*	8102346	Magnet, Horizontal Mount (white)
*	1063931	Door, Applebee's [®] Filter/Dump Station


2.9 Drain System Components

2.9.1 Drain Tube System

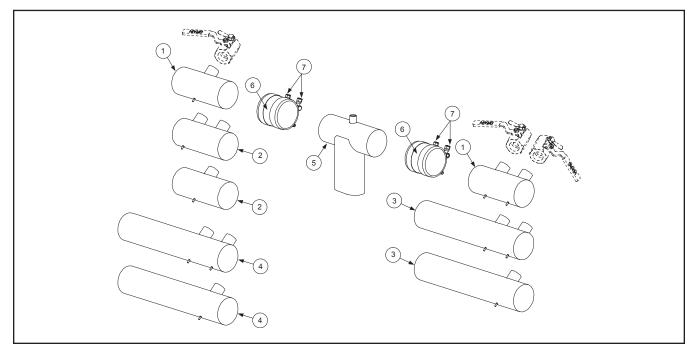


ITEM	PART #	COMPONENT
		Drain Tubes
1		Tube, Left/Right End Short
	8234625	Full-vat
	8234624	Dual-vat
2		Tube, Left/Right Open Short
	8234643	Full-vat
	8234642	Dual-vat
3		Tube, Right End Long
	8234639	Full-vat
	8234638	Dual-vat
4		Tube, Left/Right Open Long
	8234641	Full-vat
	8234640	Dual-vat
*	2006473	Spreader, Open Long
*	2006474	Spreader, Open Short
5	8234740	Drain Outlet, Both Ends Open
	8234741	Drain Outlet, One End Closed
		Miscellaneous
6	8160729	Boot
7	8090969	Clamp
*	8072484	Solenoid
*	8110932	Tubing, ³ / ₈ " O.D., Plastic
*	8101372	90° Fitting, ¾" O.D.
*	8111071	Tubing, ¹ / ₄ " O.D., Plastic
*	8102493	90° Fitting, ¼" O.D.
*	8102492	Straight Fitting, ¼" O.D.
*	8160630	Vinyl Stud Cap
8	8090047	Nut, High Profile Stud Cap
*	KIT6214	Round Drain Boot Kit (includes 2 clamps and 1 boot)

2.9.2 Drain Valves; FPP/FMP Models

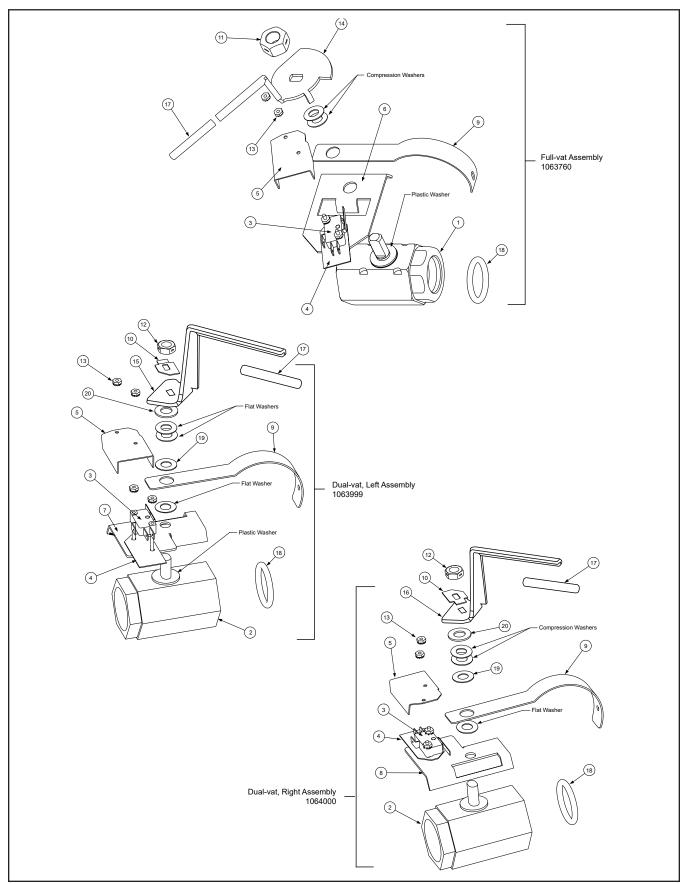


ITEM	PART #	COMPONENT
		Drain Valve Assemblies
	1063760	Full-vat
	1063999	Dual-vat, Left
	1064000	Dual-vat, Right
		Drain Valves
1	8101018	Full-vat, 1.25-inch Drain Valve (without Handle)
2	8101114	Dual-vat, 1-inch Drain Valve
		Drain Safety Switch
3	8072103	Microswitch
4	8160220	Insulation
5	9012348	Cover
		Bracket
6	8068137	Full-vat
7	1062671	Dual-vat, Left
8	1062672	Dual-vat, Right
		Miscellaneous
9	2006496	Support, Drain Tube
10	9002936	Retainer Nut (FV)
*	9002934	Retainer Nut (DV)
11	8090540	Nut, 2-way Lock (FV)
12	8090539	Nut, 2-way Lock (DV)
13	8260237	Nut, 4-40 Keps Hex with External Tooth (pkg. of 25)
		Handle, Valve
14	8241602	Full-vat
15	8241637	Dual-vat, Left
16	8241636	Dual-vat, Right
17	8160639	Sleeve, Handle
18	8160135	O-ring
19	8101165	Washer, Teflon
20	8090196	Washer, Flat

2.9.3 Drain Valves; PMJ Models

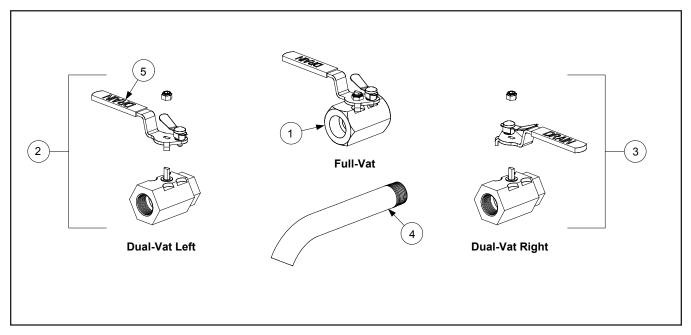


ITEM	PART #	COMPONENT
1	8101569	Valve, 1.25-inch, Non-filter, Full-vat Drain (with handle)
2	8067915SP	Valve, 1-inch, Non-filter, Dual-vat, Left Drain
3	8067916SP	Valve, 1-inch, Non-filter, Dual-vat, Right Drain
*	8101338	Valve, 1-inch, Universal Ball
*	8069062	Handle, Left
*	8069064	Handle, Right
4	8121226SP	Drain Extension, 1.25-inch, Full-vat
*	8121227	Drain Extension, 1-inch, Dual-vat
5	8101427	Handle, Drain Valve
6	8101568	Handle, Drain Valve
*	8160211	Sleeve, Handle

2.10 Filter Boxes

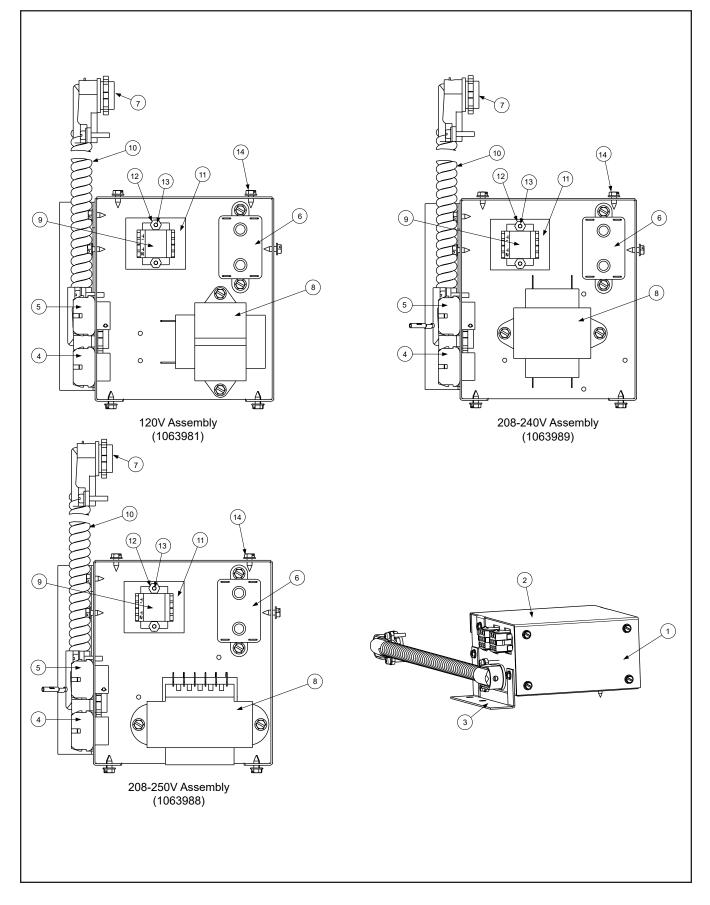


ITEM	PART #	COMPONENT
		Complete Box Assemblies
	1063981	120V (see also 8066912)
	1063988	208-250V
	1063989	208-240V
		Components
1	2006836	Filter Box
2	2006837	Lid
3	2006838	Mount
4	8067494	Plug Assembly, Non-Reversing
*	8101421	Harness (to Control Circuits)
5	8068021	Plug Assembly, Heater Plug
6	8070012	Relay, 18 Amp
7	8070141	Connector, ³ / ₈ " Right Angle
8		Transformers
	8070800	120V/24V
	8070680	208-240V/24V
	8071999	208-250V/12V & 24V
9	8101164	Terminal Block, 1 Plc Screwless
10	8121704	Conduit, Flex ³ / ₈ " x 13.5"
10	8120636	Conduit, Flex ³ / ₈ " x 15"
11	8160217	Paper, Insulation
12	8261366	Nut, 4-40 Keps Hex with External Tooth (pkg. of 25)
13	8261359	Screw, 4-40 x ³ / ₄ " Slotted Round Head (pkg. of 25)
14	8090360	Screw, #8 x 3/8" Washer Slotted Hex Head
*	8101421	Harness, Control Circuit

2.11 Filter Pan Assembly

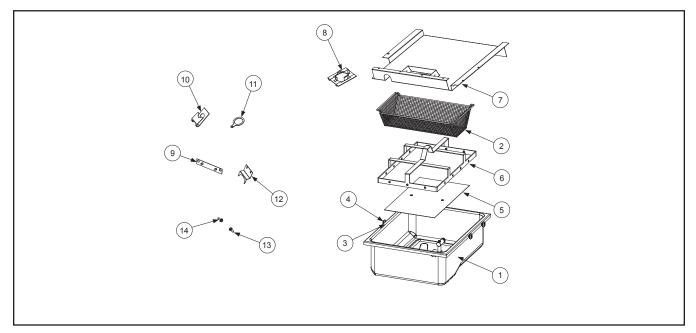

ITEM	PART #	COMPONENT
1	1080184SP	Filter Pan No Rollers July 2008 (Use 1063796SP Pan with Rollers)
2	8103161	Crumb Tray
*	8130568	Plug, ¹ / ₈ " Socket-head Pipe
3	8261372	Nut, Grip ¹ / ₄ -20 Hex (pkg. of 10)
*	8261392	O-ring
4	8102198	Roller, Filter Pan Rail
*	8091025	Nylon Slides
*	8262603	Rail Set, Filter Pan Rail
*	8261979	Kit, Filter Pan Roller
*	8090191	Washer, Spring Lock, ¹ / ₄ "
5	8122024	Screen, Sana Grid
6	8103760	Ring, Hold Down (8102910, FMP, see also 8103760)
7	8239364	Lid, Filter Pan, FPP
*	8235334	Lid, Filter Pan, FMPH
8	8235294	Splash Shield (included in kit 8262109, 8262110, and 8262111)
9	1065141	Bracket, Burner Heat Shield Mounting (MJ35/40)
10	8090173	Clip, Tinnerman (included in kits 8262109, 8262110, and 8262111)
11	2009732	Lip, Suction Fitting (included in kits 8262109, 8262110, and 8262111)
12	2009715	Brace, Drain Spout (included in kits 8262110 and 8262111)
13	8261371	Screw, #8 x ¹ / ₂ " Hex Head Drill Point (pkg. of 25)
14	8090785	Screw, #14 x ³ / ₄ " Slotted Head
*	2006310	Support, Rear Pan Rail
*	8090743	Screw, 4-40 x 1 Pan Head, Stainless Steel
*	8030170	Filter Paper, 19.5 x 25.5 (box of 100 sheets)
*	8030002	Filter Powder (box of 80 individual packs)
*	8102800	Carl's Jr. Filter Leaf
*	8160757	O-ring, Optional Filter Leaf

2.12 Frypots

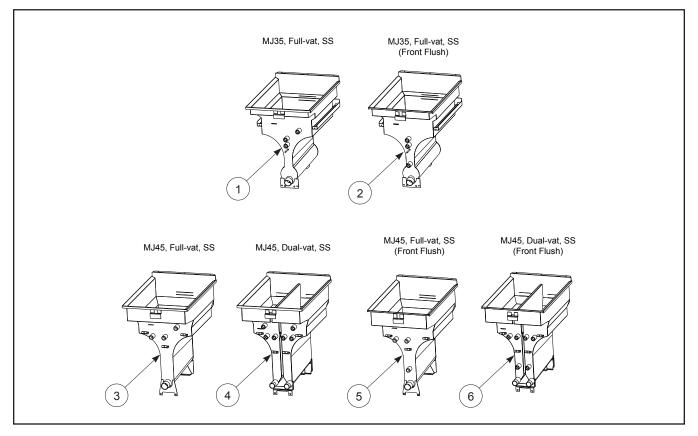


ITEM	PART #	COMPONENT
		PMJ 35/40
1	1064115SP	Full-vat, Stainless Steel, (Power Shower)
*	1069776	Full-vat, Stainless Steel, Single Non-filter For XMJ135V
*	8234492SP	Full-vat, Stainless Steel (Pre-Pro MJ35)
2	1068362SP	Full-vat, Stainless Steel (Front Flush) Service Part
*	1067671SP	Full-vat, Stainless Steel (Power Shower) Export
*	1069727SP	Full-vat, Stainless Steel (PMJ) Non-Filter Service Part
*	1068363SP	Full-vat, Stainless Steel (Domestic, Power Shower) Service Part
		PMJ 45/50
3	1062547SP	Full-vat, Stainless Steel (Power Shower) Service Part FP47 only
4	1062545SP	Dual-vat, Stainless Steel FP47
5	1065868SP	Full-vat, Stainless Steel (Front Flush) Service Part FPP45/50
6	1065869	Dual-vat, Stainless Steel (Front Flush)
*	1067681SP	Full-vat, Stainless Steel (Power Shower) Service Part FPP45
*	1067740	Dual-vat, Stainless Steel (CE)

* Not illustrated.

** Frypots listed above include insualtion and other necessary components. See Section 2.13.


2.13 Frypot Cabinetry

2.13.1 PMJ45/50 Frypot Cabinetry

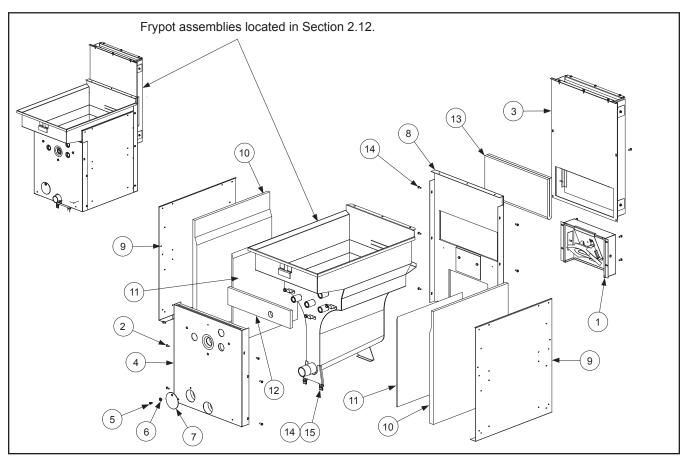


ITEM	PART #	COMPONENT
1	8065778SP	Flue Deflector Box Assembly
2	8261374	Screw, #10 x ¹ / ₂ " Washer Hex Head
23	8065567SP	Flue Assembly, MJ45
4	8061095SP	Front Baffle Assembly
*	1065874	Front Baffle Assembly (Front Flush Full-vat)
*	1065892	Front Baffle Assembly (Front Flush Dual-vat)
5	8090409	Screw, Pilot Light Cover
6	8100647	Holder, Pilot Light Cover Screw
7	1080442	Cover with Sight-glass, Pilot Light (without sight-glass, 9001090)
8	8065566SP	Rear Combustion Chamber Panel Assembly
9	8061097	Side Combustion Chamber Panel Assembly
10-13	8260861	Kit, Insulation (<i>cut to fit</i>)
*	8160658	Insulation Back, Lower Single
*	8160656	Insulaiton Back, Upper Single
14	8090173	Clip, Tinnerman
15	8090170	Screw, #14 x ³ / ₄ " Slotted Pan Head
*	2100681	Probe Guard
*	8160698	Insulation, Kaowool Blanket (Front Flush)
*	2200927	Air/Heat Shield, 31"
*	2200928	Air/Heat Shield, 15 1/2"
*	8130463	Pipe Plug, 1/2" NPT

2.13.2 PMJ35/40 Frypot Cabinetry

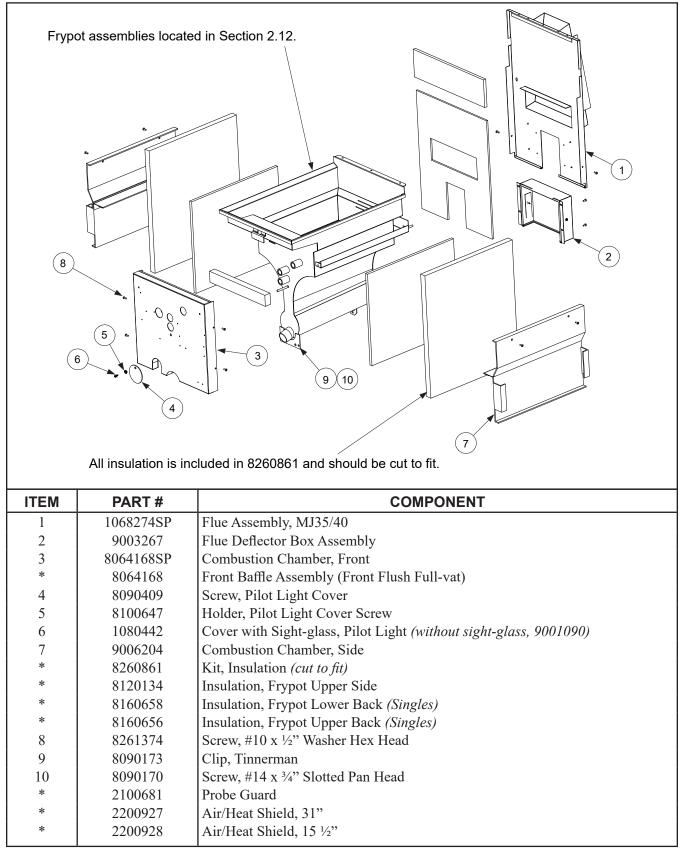

2.14 Gas Valves and Burners

2.14.1 PMJ45/50 Gas Valves and Burners

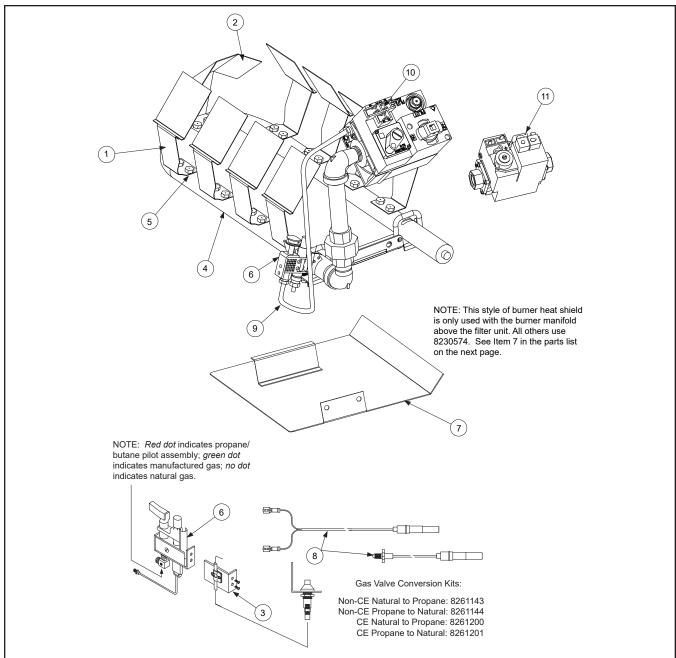

ITEM	PART #	COMPONENT
1	2301177	Metal Deflector (Target) Sides, Individual
2	2301206	Metal Deflector (Target) Rear, Individual
*		Ignitors (see Section 2.14.3)
3		Ignitor Kits, (see Section 2.14.2)
4		Burner Manifold
	8102710	FV
	8102708	DV, Left Side
	8102709	DV, Right Side
*	8100691	Tube, Vent (CE, 8101166)

* Not Illustrated.


MJ45 Gas Valves and Burners continued on next page

5 Orifices (for high altitude and special gasses, contact Frymaster) 8100315 1.45 mm, Natural Gas 8100323 1.20 mm, Natural Gas 8100407 2.15 mm, Manufactured Gas 81010107 2.15 mm, Manufactured Gas 8101107 1.00 mm, Butane Gas 8101107 Natural Gas with Thermopile (Twin Push-on Terminals) 8073485 Natural Gas with Thermopile (Twin Spade Terminals) 1061909SP Pilot Assemblies, CE and Export 80686888P Natural Gas with Thermocouple (Co-axial Lead) 1061911 Natural Gas, mV 8068689SP Pro./But. Gas with Thermocouple (Co-axial Lead) 1069570 Natural Gas, mV 8068689SP Pro./But. Gas, with Thermocouple (Co-axial Lead) 1069571 Notural Gas, Mutaral Gas, mV Pro./But. Gas, MV Pro./But. Gas, mV Pro./But. Gas, mV Pro./But. Gas, mV Burner Heat Shield Assemblies Filter Burner Position, Left (includes bracket, 2109729) 8235295 Filter Burner Position (includes bracket, 2109729) 8262109 Kit, Retrofit Filter Lid, LH Spreader (includes 8235295, see Page 2-29) 8 Thermopile/Thermocouple 8 T	ITEM	PART #	COMPONENT
81003231.20 mm, Natural Gas .86 mm, Propane/Butane Gas 2.15 mm, Manufactured Gas 1.00 mm, Butane Gas6Pilot Assemblies, Non-CE8101873Natural Gas with Thermopile (Twin Push-on Terminals) Natural Gas with Thermopile (Twin Spade Terminals) Pro/But. Gas with Thermopile (Twin Spade Terminals)1061909SPPilot Assemblies, CE and Export8068688SPNatural Gas with Thermocouple (Co-axial Lead) Natural Gas with Thermocouple Australia (Co-axial Lead)1069570Natural Gas with Thermocouple (Co-axial Lead)1069571Natural Gas, Australian (Co-axial Lead)1069571Pro./But. Gas with Thermocouple (Co-axial Lead)1069571Pro./But. Gas, with Thermocouple (Co-axial Lead)1069571Pro./But. Gas, with Thermocouple (Co-axial Lead)1061912Pro./But. Gas, with Thermocouple, Australia (Co-axial Lead)1061912Pro./But. Gas, with Thermocouple, Australia (Co-axial Lead)1061912Pro./But. Gas, mV8068689SPFilter Burner Position, Left (includes bracket, 2109729)8102070Filter Burner Position, Right (includes bracket, 2109729)8Filter Burner Position, Right (includes bracket, 2109729)8Sto2108Thermopile/Thermocouple8Thermopile/Thermocouple8Thermopile/Thermocouple9Pilto, Natural Gas, Honeywell9Pilto, Natural Gas, Honeywell9Pilto, Natural Gas, Honeywell	5		Orifices (for high altitude and special gasses, contact Frymaster)
88100340.86 mm, Propane/Butane Gas881004072.15 mm, Manufactured Gas81212031.00 mm, Butane Gas6Pilot Assemblies, Non-CE88101873Natural Gas with Thermopile (Twin Push-on Terminals)80734851061909SP1061909SPPro./But. Gas with Thermopile (Twin Spade Terminals)Pilot Assemblies, CE and Export8068688SPNatural Gas with Thermocouple (Co-axial Lead)1069570Natural Gas with Thermocouple (Co-axial Lead)1069571Natural Gas, Australian (Co-axial Lead)1069571Natural Gas, with Thermocouple (Co-axial Lead)1069571Pro./But. Gas with Thermocouple (Co-axial Lead)1069571Natural Gas, Australian (Co-axial Lead)1069571Pro./But. Gas, with Thermocouple, Australia (Co-axial Lead)1069571Pro./But. Gas, MV802070Pro./But. Gas, Muth Thermocouple, Australia (Co-axial Lead)1069571Pro./But. Gas, Muth Thermocouple, Australia (Co-axial Lead)1069571Pro./But. Gas, MU802070Pro./But. Gas, MU7Burner Heat Shield Assemblies8Filter Burner Position, Left (includes bracket, 2109729)8Si262108Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29)8Si1020078Pilot, Natural Gas, Honeywell8Pilot, Natural Gas, Honeywell		8100315	1.45 mm, Natural Gas
8100407 81212032.15 mm, Manufactured Gas 1.00 mm, Butane Gas6Pilot Assemblies, Non-CE Natural Gas with Thermopile (Twin Push-on Terminals) Natural Gas with Thermopile (Twin Spade Terminals) Pro./But. Gas with Thermopile (Twin Spade Terminals)8073485 1061909SPNatural Gas with Thermopile (Twin Spade Terminals) Pro./But. Gas with Thermocouple (Co-axial Lead) Natural Gas with Thermocouple (Co-axial Lead) Natural Gas, Australian (Co-axial Lead) Natural Gas, Australian (Co-axial Lead) Natural Gas, Australian (Co-axial Lead) Pro./But. Gas with Thermocouple (Co-axial Lead) Natural Gas, Australian (Co-axial Lead) Pro./But. Gas with Thermocouple (Co-axial Lead) Pro./But. Gas with Thermocouple, Australia (Co-axial Lead) Pro./But. Gas, MV7Burner Heat Shield Assemblies Filter Burner Position, Left (includes bracket, 2109729) Filter Burner Position, Right (includes bracket, 2109729) Non-Filter Burner Position (includes bracket, 9300075) Kit, Retrofit Filter Lid, LH Spreader (includes 8235296, see Page 2-29) Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29) Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29) Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29) Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29) Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29) Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29) Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29) Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29) Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29) Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29) Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29) Kit, Retrof		8100323	1.20 mm, Natural Gas
681212031.00 mm, Butane Gas6Pilot Assemblies, Non-CE8101873Natural Gas with Thermopile (Twin Push-on Terminals)8073485Natural Gas with Thermopile (Twin Spade Terminals)1061909SPPro./But. Gas with Thermopile (Twin Spade Terminals)8068688SPPilot Assemblies, CE and Export8068688SPNatural Gas with Thermocouple (Co-axial Lead)1069570Natural Gas with Thermocouple (Co-axial Lead)1069571Natural Gas, Australian (Co-axial Lead)1069571Natural Gas, with Thermocouple (Co-axial Lead)1069571Natural Gas, MV8068689SPPro./But. Gas with Thermocouple (Co-axial Lead)1069571Pro./But. Gas, Australian (Co-axial Lead)1069571Pro./But. Gas, Australian (Co-axial Lead)1061912Pro./But. Gas, Australian (Co-axial Lead)1061913Pro./But. Gas, MV8058689SPPro./But. Gas, Muthalian (Co-axial Lead)1061914Pro./But. Gas, Muthalian (Co-axial Lead)1061915Pro./But. Gas, Muthalian (Co-axial Lead)1061916Pro./But. Gas, MV8058259Filter Burner Position, Left (includes bracket, 2109729)8235296Filter Burner Position, Right (includes bracket, 2109729)8262100Kit, Retrofit Filter Lid (includes 8235295 and 8235296, see Page 2-29)8262110Kit, Retrofit Filter Lid, LH Spreader (includes 8235295, see Page 2-29)8Thermopile/Thermocouple81020079Pilot, Natural Gas, Honeywell9Pilot, LP Gas, Honeywell9		8100340	.86 mm, Propane/Butane Gas
6Pilot Assemblies, Non-CE8101873 8073485 106199SPNatural Gas with Thermopile (Twin Push-on Terminals) Pro/But. Gas with Thermopile (Twin Spade Terminals) Pro/But. Gas with Thermopile (Twin Spade Terminals)8068688SP 1069570 1061911 8102071Pilot Assemblies, CE and Export Natural Gas with Thermocouple (Co-axial Lead) Natural Gas with Thermocouple (Lo-axial Lead) Natural Gas, mV Pro./But. Gas with Thermocouple (Co-axial Lead) Pro./But. Gas with Thermocouple (Co-axial Lead) Pro./But. Gas with Thermocouple (Co-axial Lead) Pro./But. Gas, mV Pro./But. Gas, mV Pro./But. Gas, Mutral Goas, MV7Burner Heat Shield Assemblies Filter Burner Position, Left (<i>includes bracket, 2109729</i>) Filter Burner Position, Right (<i>includes bracket, 2109729</i>) Filter Burner Position (<i>includes bracket, 2109729</i>) Kit, Retroft Filter Lid (<i>includes 8235295 and 8235295, see Page 2-29</i>) Kit, Retroft Filter Lid, LH Spreader (<i>includes 8235295, see Page 2-29</i>) Kit, Retroft Filter Lid, RH Spreader (<i>includes 8235295, see Page 2-29</i>) Kit, Retroft Filter Lid, RH Spreader (<i>includes 8235295, see Page 2-29</i>)8Thermopile/Thermocouple Pilot, Natural Gas, Honeywell Pilot, LP Gas, Honeywell		8100407	
6Pilot Assemblies, Non-CE8101873 8073485 106199SPNatural Gas with Thermopile (Twin Push-on Terminals) Pro/But. Gas with Thermopile (Twin Spade Terminals) Pro/But. Gas with Thermopile (Twin Spade Terminals)8068688SP 1069570 1061911 8102071Pilot Assemblies, CE and Export Natural Gas with Thermocouple (Co-axial Lead) Natural Gas with Thermocouple (Lo-axial Lead) Natural Gas, mV Pro./But. Gas with Thermocouple (Co-axial Lead) Pro./But. Gas with Thermocouple (Co-axial Lead) Pro./But. Gas with Thermocouple (Co-axial Lead) Pro./But. Gas, mV Pro./But. Gas, mV Pro./But. Gas, Mutral Goas, MV7Burner Heat Shield Assemblies Filter Burner Position, Left (<i>includes bracket, 2109729</i>) Filter Burner Position, Right (<i>includes bracket, 2109729</i>) Filter Burner Position (<i>includes bracket, 2109729</i>) Kit, Retroft Filter Lid (<i>includes 8235295 and 8235295, see Page 2-29</i>) Kit, Retroft Filter Lid, LH Spreader (<i>includes 8235295, see Page 2-29</i>) Kit, Retroft Filter Lid, RH Spreader (<i>includes 8235295, see Page 2-29</i>) Kit, Retroft Filter Lid, RH Spreader (<i>includes 8235295, see Page 2-29</i>)8Thermopile/Thermocouple Pilot, Natural Gas, Honeywell Pilot, LP Gas, Honeywell			
8101873 8073485 1061909SPNatural Gas with Thermopile (Twin Push-on Terminals) Natural Gas with Thermopile (Twin Spade Terminals) Pro./But. Gas with Thermopile (Twin Spade Terminals) Pilot Assemblies, CE and Export 8068688SP 1069570Natural Gas with Thermocouple (Co-axial Lead) Natural Gas, Australian (Co-axial Lead)1061911 8102071Natural Gas, Australian (Co-axial Lead)8068689SP 1069571Pro./But. Gas with Thermocouple (Co-axial Lead)1061912 8102071Pro./But. Gas with Thermocouple (Co-axial Lead)7Burner Heat Shield Assemblies7Filter Burner Position, Left (<i>includes bracket, 2109729</i>)8235295 8230574Filter Burner Position (<i>includes bracket, 2109729</i>)8262110 8262110Kit, Retrofit Filter Lid (<i>includes bracket, 9300075</i>)8Thermopile/Thermocouple8Thermopile/Thermocouple8Thermopile/Thermocouple8Promopile/Thermocouple9Promopile/Thermocouple8Promopile/Thermocouple9Pro/But. Gas, MV9Pro/But. Gas, MO9Pro/But. Gas, Moneywell9Pro/But. Gas, Moneywell9Pro/But. Gas, Hon	6		
8073485 1061909SPNatural Gas with Thermopile (Twin Spade Terminals) Pro./But. Gas with Thermopile (Twin Spade Terminals)Pilot Assemblies, CE and Export8068688SP 1069570Natural Gas with Thermocouple (Co-axial Lead) Natural Gas, Australian (Co-axial Lead)1069570 1061911Natural Gas, Australian (Co-axial Lead)8102071 1069571Natural Gas, with Thermocouple (Co-axial Lead)8068689SP 1069571Pro./But. Gas with Thermocouple (Co-axial Lead)1069571 1061912Pro./But. Gas with Thermocouple (Co-axial Lead)1061912 1061912Pro./But. Gas with Thermocouple, Australia (Co-axial Lead)1061912 8102070Pro./But. Gas, Mutralian (Co-axial Lead)7Burner Heat Shield Assemblies7Filter Burner Position, Left (includes bracket, 2109729)8235296 8235296 8235210Filter Burner Position, Right (includes bracket, 2109729)8262110 8262110Kit, Retrofit Filter Lid, LH Spreader (includes 8235295, see Page 2-29)8Thermopile/Thermocouple8Pilot, Natural Gas, Honeywell9Pilot, Natural Gas, Honeywell		8101873	
Image: 1061909SPPro./But. Gas with Thermopile (Twin Spade Terminals)Pilot Assemblies, CE and Export8068688SPNatural Gas with Thermocouple (Co-axial Lead)1069570Natural Gas with Thermocouple Australia (Co-axial Lead)1061911Natural Gas, Australian (Co-axial Lead)8068689SPPro./But. Gas with Thermocouple (Co-axial Lead)1069571Natural Gas, mV8068689SPPro./But. Gas with Thermocouple (Co-axial Lead)1069571Pro./But. Gas with Thermocouple, Australia (Co-axial Lead)1061912Pro./But. Gas, Australian (Co-axial Lead)1061912Pro./But. Gas, Australian (Co-axial Lead)8102070Pro./But. Gas, MV7Burner Heat Shield Assemblies8235295Filter Burner Position, Left (includes bracket, 2109729)8235296Filter Burner Position (includes bracket, 2109729)8262110Kit, Retrofit Filter Lid (includes 8235295 and 8235296, see Page 2-29)8Thermopile/Thermocouple8Pilot, Natural Gas, Honeywell9Pilot, LP Gas, Honeywell			
Pilot Assemblies, CE and Export8068688SPNatural Gas with Thermocouple (Co-axial Lead)1069570Natural Gas, with Thermocouple Australia (Co-axial Lead)1061911Natural Gas, Australian (Co-axial Lead)8102071Natural Gas, mV8068689SPPro./But. Gas with Thermocouple (Co-axial Lead)1069571Pro./But. Gas with Thermocouple (Co-axial Lead)1069571Pro./But. Gas with Thermocouple, Australia (Co-axial Lead)1061912Pro./But. Gas, MV7Burner Heat Shield Assemblies8235295Filter Burner Position, Left (includes bracket, 2109729)8235296Filter Burner Position, Right (includes bracket, 2109729)8262109Kit, Retrofit Filter Lid (includes bracket, 9300075)8262110Kit, Retrofit Filter Lid, LH Spreader (includes 8235295, see Page 2-29)8Thermogile/Thermocouple8Pilot, Natural Gas, Honeywell9Pilot, LP Gas, Honeywell		1061909SP	
8068688SP 1069570 1061911 8102071Natural Gas with Thermocouple (Co-axial Lead) Natural Gas, Australian (Co-axial Lead) Natural Gas, mV Pro./But. Gas with Thermocouple (Co-axial Lead) Natural Gas, mV Pro./But. Gas with Thermocouple (Co-axial Lead) Pro./But. Gas with Thermocouple (Co-axial Lead) Pro./But. Gas with Thermocouple, Australia (Co-axial Lead) Pro./But. Gas with Thermocouple, Australia (Co-axial Lead) Pro./But. Gas, Australian (Co-axial Lead) Pro./But. Gas, Australian (Co-axial Lead) Pro./But. Gas, Australian (Co-axial Lead) Pro./But. Gas, Australian (Co-axial Lead) Pro./But. Gas, MV7Burner Heat Shield Assemblies Filter Burner Position, Left (includes bracket, 2109729) Filter Burner Position, Right (includes bracket, 2109729) Filter Burner Position (includes bracket, 9300075) Kit, Retrofit Filter Lid (includes 8235295 and 8235296, see Page 2-29) Kit, Retrofit Filter Lid, LH Spreader (includes 8235295, see Page 2-29) Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29) Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29)88102007 Bilot, Natural Gas, Honeywell Pilot, Natural Gas, Honeywell			
1069570Natural Gas with Thermocouple Australia (Co-axial Lead)1061911Natural Gas, Australian (Co-axial Lead)8102071Natural Gas, mV8068689SPPro./But. Gas with Thermocouple (Co-axial Lead)1069571Pro./But. Gas with Thermocouple, Australia (Co-axial Lead)1061912Pro./But. Gas, Australian (Co-axial Lead)1061912Pro./But. Gas, Australian (Co-axial Lead)8102070Pro./But. Gas, MV7Burner Heat Shield Assemblies7Filter Burner Position, Left (<i>includes bracket, 2109729</i>)8235296Filter Burner Position, Right (<i>includes bracket, 2109729</i>)8262109Kit, Retrofit Filter Lid (<i>includes 8235295 and 8235296, see Page 2-29</i>)8Thermopile/Thermocouple881020079Pilot, Natural Gas, Honeywell9Pilot, LP Gas, Honeywell		8068688SP	
1061911Natural Gas, Australian (Co-axial Lead)8102071Natural Gas, mV8068689SPPro./But. Gas with Thermocouple (Co-axial Lead)1069571Pro./But. Gas with Thermocouple, Australia (Co-axial Lead)1061912Pro./But. Gas, Australian (Co-axial Lead)8102070Pro./But. Gas, MV7Burner Heat Shield Assemblies8235295Filter Burner Position, Left (<i>includes bracket, 2109729</i>)8235296Filter Burner Position (<i>includes bracket, 2109729</i>)8230574Non-Filter Burner Position (<i>includes bracket, 9300075</i>)8262110Kit, Retrofit Filter Lid (<i>includes 8235295 and 8235295, see Page 2-29</i>)8Thermopile/Thermocouple8Pilot, Natural Gas, Honeywell9Pilot, Natural Gas, Honeywell			
8102071Natural Gas, mV8068689SPPro./But. Gas with Thermocouple (Co-axial Lead)1069571Pro./But. Gas with Thermocouple, Australia (Co-axial Lead)1061912Pro./But. Gas, Australian (Co-axial Lead)8102070Pro./But. Gas, mV7Burner Heat Shield Assemblies8235295Filter Burner Position, Left (<i>includes bracket, 2109729</i>)8235296Filter Burner Position, Right (<i>includes bracket, 2109729</i>)8262109Kit, Retrofit Filter Lid (<i>includes bracket, 9300075</i>)8262110Kit, Retrofit Filter Lid, LH Spreader (<i>includes 8235295, see Page 2-29</i>)8S1020078Pilot, Natural Gas, Honeywell9Pilot, LP Gas, Honeywell		1061911	
8068689SP 1069571Pro./But. Gas with Thermocouple (Co-axial Lead) Pro./But. Gas with Thermocouple, Australia (Co-axial Lead) Pro./But. Gas, Mustralian (Co-axial Lead) Pro./But. Gas, mV7Burner Heat Shield Assemblies Filter Burner Position, Left (<i>includes bracket, 2109729</i>) Filter Burner Position, Right (<i>includes bracket, 2109729</i>) Non-Filter Burner Position (<i>includes bracket, 2109729</i>) Kit, Retrofit Filter Lid (<i>includes bracket, 9300075</i>) Kit, Retrofit Filter Lid (<i>includes 8235295 and 8235296, see Page 2-29</i>) Kit, Retrofit Filter Lid, LH Spreader (<i>includes 8235295, see Page 2-29</i>) Kit, Retrofit Filter Lid, RH Spreader (<i>includes 8235295, see Page 2-29</i>)88102007 Pilot, Natural Gas, Honeywell Pilot, LP Gas, Honeywell			
1069571Pro./But. Gas with Thermocouple, Australia (Co-axial Lead)1061912Pro./But. Gas, Australian (Co-axial Lead)8102070Pro./But. Gas, mV7Burner Heat Shield Assemblies8235295Filter Burner Position, Left (includes bracket, 2109729)8235296Filter Burner Position, Right (includes bracket, 2109729)8230574Non-Filter Burner Position (includes bracket, 9300075)8262109Kit, Retrofit Filter Lid (includes 8235295 and 8235296, see Page 2-29)8Thermopile/Thermocouple8Thermopile/Thermocouple9100, Natural Gas, Honeywell9100, LP Gas, Honeywell			
1061912 8102070Pro./But. Gas, Australian (Co-axial Lead) Pro./But. Gas, mV7Burner Heat Shield Assemblies8235295 8235296Filter Burner Position, Left (<i>includes bracket, 2109729</i>) Filter Burner Position, Right (<i>includes bracket, 2109729</i>) Non-Filter Burner Position (<i>includes bracket, 9300075</i>) Kit, Retrofit Filter Lid (<i>includes 8235295 and 8235296, see Page 2-29</i>) Kit, Retrofit Filter Lid, LH Spreader (<i>includes 8235295, see Page 2-29</i>) Kit, Retrofit Filter Lid, RH Spreader (<i>includes 8235295, see Page 2-29</i>)8Thermopile/Thermocouple Pilot, Natural Gas, Honeywell8102007 8102022Pilot, LP Gas, Honeywell			
8102070Pro./But. Gas, mV7Burner Heat Shield Assemblies8235295Filter Burner Position, Left (<i>includes bracket, 2109729</i>)8235296Filter Burner Position, Right (<i>includes bracket, 2109729</i>)8230574Non-Filter Burner Position (<i>includes bracket, 9300075</i>)8262109Kit, Retrofit Filter Lid (<i>includes 8235295 and 8235296, see Page 2-29</i>)8Kit, Retrofit Filter Lid, LH Spreader (<i>includes 8235295, see Page 2-29</i>)8Thermopile/Thermocouple8Pilot, Natural Gas, Honeywell91007Pilot, LP Gas, Honeywell			
7Burner Heat Shield Assemblies8235295Filter Burner Position, Left (includes bracket, 2109729)8235296Filter Burner Position, Right (includes bracket, 2109729)8230574Non-Filter Burner Position (includes bracket, 9300075)8262109Kit, Retrofit Filter Lid (includes 8235295 and 8235296, see Page 2-29)8262110Kit, Retrofit Filter Lid, LH Spreader (includes 8235295, see Page 2-29)8Thermopile/Thermocouple8Pilot, Natural Gas, Honeywell910022Pilot, LP Gas, Honeywell			
8235295Filter Burner Position, Left (includes bracket, 2109729)8235296Filter Burner Position, Right (includes bracket, 2109729)8230574Non-Filter Burner Position (includes bracket, 9300075)8262109Kit, Retrofit Filter Lid (includes 8235295 and 8235296, see Page 2-29)8262110Kit, Retrofit Filter Lid, LH Spreader (includes 8235295, see Page 2-29)8Thermopile/Thermocouple8102007Pilot, Natural Gas, Honeywell9100t, LP Gas, Honeywell	7		
8235296Filter Burner Position, Right (<i>includes bracket, 2109729</i>)8230574Non-Filter Burner Position (<i>includes bracket, 9300075</i>)8262109Kit, Retrofit Filter Lid (<i>includes 8235295 and 8235296, see Page 2-29</i>)8262110Kit, Retrofit Filter Lid, LH Spreader (<i>includes 8235295, see Page 2-29</i>)8Thermopile/Thermocouple8Pilot, Natural Gas, Honeywell8102007Pilot, LP Gas, Honeywell		8235295	
8230574Non-Filter Burner Position (includes bracket, 9300075)8262109Kit, Retrofit Filter Lid (includes 8235295 and 8235296, see Page 2-29)8262110Kit, Retrofit Filter Lid, LH Spreader (includes 8235295, see Page 2-29)8Thermopile/Thermocouple8Pilot, Natural Gas, Honeywell8102007Pilot, LP Gas, Honeywell			
88262109 8262110 8262110 8262111Kit, Retrofit Filter Lid, LH Spreader (includes 8235295, see Page 2-29) Kit, Retrofit Filter Lid, LH Spreader (includes 8235295, see Page 2-29)8Thermopile/Thermocouple89102007 81020229910t, Natural Gas, Honeywell9910t, LP Gas, Honeywell			
8Kit, Retrofit Filter Lid, LH Spreader (includes 8235295, see Page 2-29)8Thermopile/Thermocouple881020078102022Pilot, Natural Gas, Honeywell9Pilot, LP Gas, Honeywell			
8 Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-29) 8 Thermopile/Thermocouple 8 Pilot, Natural Gas, Honeywell 8102002 Pilot, LP Gas, Honeywell			
8 Thermopile/Thermocouple 8102007 Pilot, Natural Gas, Honeywell 8102022 Pilot, LP Gas, Honeywell			
8102007Pilot, Natural Gas, Honeywell8102022Pilot, LP Gas, Honeywell	8		
8102022 Pilot, LP Gas, Honeywell		8102007	
8073485 Thermopile, Generator with Adaptor (for use with 8102007 & 8102022)			Thermopile, Generator with Adaptor (for use with 8102007 & 8102022)
8101830 Pilot Assembly, Nat .024" Orifice (Non-CE Pilot Assemblies)			
8103442 Thermocouple Assembly (CE)			
8261527 Kit, Thermocouple with Adapter (CE Pilot Assemblies)			
8101723 Thermocouple Adapter (CE Pilot Assemblies)			
9 8100705 Tube, Pilot Gas	9		
10 Gas Valves, Non-CE (see Note 1 below)	10		
8071603 mV Natural Gas		8071603	
8074137 mV Natural, Australia (Requires kit 8071846 to use Propane), Honeywell			mV Natural, Australia (Requires kit 8071846 to use Propane), Honeywell
130192699 mV Natural Gas (Australia), Robert Shaw			
8071604 mV Propane Gas, Honeywell			
130192700 mV Propane Gas (Australia), Robert Shaw			
130000860 24V Natural Gas			
130000861 24V Propane Gas			24V Propane Gas
8100786 E. I. Natural		8100786	
8100787 E. I. Propane		8100787	E. I. Propane
11 Gas Valves, CE	11		
8066710 24V Natural Gas (see Note 2 below), Honeywell		8066710	24V Natural Gas (see Note 2 below), Honeywell
8076591 24V Natural Gas (Australia), Robert Shaw			
8066711 24V Propane Gas (see Note 2 below), Honeywell			
8076592 24V Propane Gas (Australia), Robert Shaw		8076592	
8067101 mV Natural Gas			
8067102 mV Propane Gas			mV Propane Gas
* Mount Assembly (Ignitor, Electrode/Flame Sensor, Mount Plate)	*		
8065895 Natural Gas, Right		8065895	• • •
8065896 Natural Gas, Left			

ITEM	PART #	COMPONENT
	8065897	Pro./But. Gas, Right
	8065894	Pro./But. Gas, Left
*	8064781	Capacitor
*	8101183	Tee, ¹ / ₄ " Brass Compression
*	8262554	Millivolt Switch
*	2008464	Bracket, Gas Line/Manifold Support

NOTES: 1. A gas valve capacitor (P/N 8064781) is required on gas valves used on units with thermostat controllers. **2.** An adapter kit (P/N 8121256SP) is required to connect the high-limit thermostat to Item 11. It is included with Item 6 on Page 2-36.

2.14.2 PMJ35/40 Gas Valves and Burners

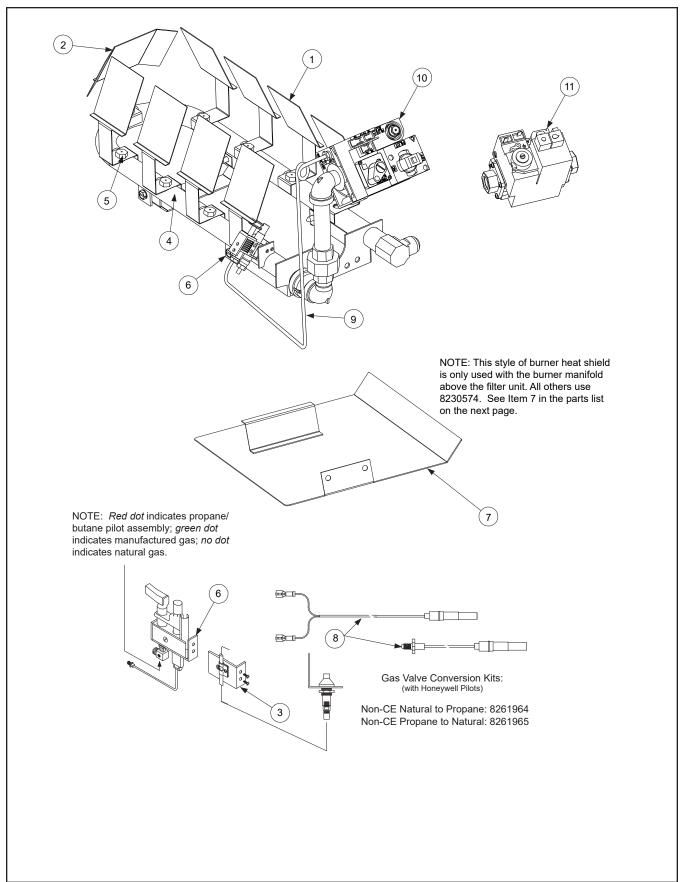


ITEM	PART #	COMPONENT
1	2301178	Metal Target Sides, Individual
2	2301180	Metal Target Rear, Individual
		Ignitor (see Section 2.14.3)
3	8263379	Ignitor Kit, EZSpark Battery Powered New Install
	8263380	Ignitor Kit, EZSpark Battery Powered Retrofit - Replaces Piezo Ignitor
	8076064	Ignitor, EzSpark Battery Powered (requires 1-AAA battery 1.5v)
	8261155	Ignitor Kit, Optional Piezo
	8101001	Trigger/Ignitor
	8071906	Electrode Assembly
4	8101862	Burner Manifold, Full-vat (full assembly including targets, 1065075SP)
5		Orifices (for high altitude and special gasses contact Frymaster)
	8100129	1.7 mm, Natural Gas
	8100134	1.05 mm, Propane/Butane Gas
	8100407	2.15 mm, Manufactured Gas
	8121203	1.00 mm, Butane Gas
6		Pilot Assemblies, Non-CE
	8101830	Natural Gas with Thermopile (Twin Push-on Terminals, 45/50) (Pro- 8107773)
6A	1061908SP	Natural Gas with Thermopile (Twin Spade Terminals, 35/40)
6B	1061909SP	Pro./But. Gas with Thermopile (Twin Spade Terminals, 35/40)
	8100426	Natural Gas - Pilot Only (MJ45/50)
	8100427	Pro./But Gas - Pilot Only (MJ45/50)
		Pilot Assemblies, CE and Export
	8068688SP	Natural Gas with Thermocouple (Co-axial Lead)
	1069570	Natural Gas with Thermocouple Australia (Co-axial Lead)
	1061911	Natural Gas, Australian (Co-axial Lead)
	8102071	Natural Gas, mV
	8068689SP 1069571	Pro./But. Gas with Thermocouple (Co-axial Lead)
	1069371	Pro./But. Gas with Thermocouple, Australia (Co-axial Lead) Pro./But. Gas, Australian (Co-axial Lead)
	8102070	Pro./But. Gas, mV
	0102070	Burner Heat Shield Assemblies
7	8235295	Filter Burner Position, Left (<i>includes bracket</i> , 2109729)
	8235296	Filter Burner Position, Right (<i>includes bracket</i> , 2109729)
	8230574	Non-filter Burner Position (<i>includes bracket</i> , 9300075)
	8262109	Kit, Retrofit Filter Lid (includes 8235295 and 8235296, see Page 2-27)
	8262110	Kit, Retrofit Filter Lid, LH Spreader (includes 8235295, see Page 2-27)
	8262111	Kit, Retrofit Filter Lid, RH Spreader (includes 8235295, see Page 2-27)
8		Thermopile/Thermocouple
	8102007	Pilot, Natural Gas
	8102022	Pilot, LP Gas
	8073485	Thermopile, Generator with Adaptor (for use with 8102007, 8102022) PMJ35/40
	8101873	Thermopile 1TT (Non-CE Pilot Assemblies, push on terminals) PMJ45/50
9	8100705	Tube, Pilot Gas
10		Gas Valves, Non-CE (see note below)
	8071603	mV Natural Gas
	8074137	mV Natural Gas (Australia) (Requires kit 8071846 to use Propane), Honeywell
	130192699	mV Natural Gas (Australia), Robert Shaw
	8071604	mV Propane Gas
	130192700	mV Propane Gas (Australia), Robert Shaw
	8073294	24V Natural Gas
	8073295	24V Propane Gas
	8100786	E. I. Natural

ITEM	PART #	COMPONENT
	8100787	E. I. Propane
11		Gas Valves, CE
	8066710	24V Natural Gas (see Note 2 below), Honeywell
	8076591	24V Natural Gas (Australia), Robert Shaw
	8066711	24V Propane Gas (see Note 2 below), Honeywell
	8076592	24V Propane Gas (Australia), Robert Shaw
	8067101	mV Natural Gas
	8067102	mV Propane Gas
*	8100691	Tube, Vent


NOTE: 1. A gas valve capacitor (P/N 8064781) is required on gas valves used on units with thermostat controllers. **2.** An adapter kit (P/N 8121256SP) is required to connect the high-limit thermostat to Item 11. It is included with Item 6 on Page 2-36.

2.14.3 Ignitors

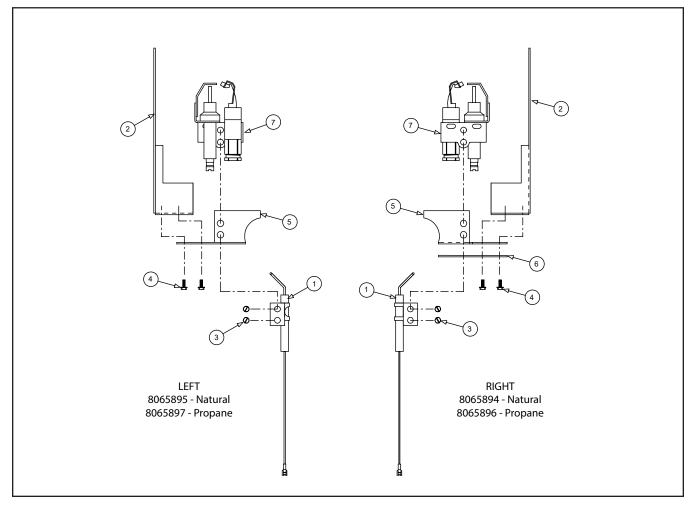

ITEM	PART #	COMPONENT
1	8071928	Flame Sensor Electrode
2	9102077	Pilot Mount
3	8090121	Screw, 10-32 x ¹ / ₂ " Hex Head
4	8090500	Screw, Stainless Steel #10 x 1/2" Hex Head Washer
5		Plate, Pilot
	9102078	Left
	9102079	Right
6	9102080	Heat Shield
7		Ignitor
	8071707	Natural
	8071708	Propane

2.15 Oil Return Components

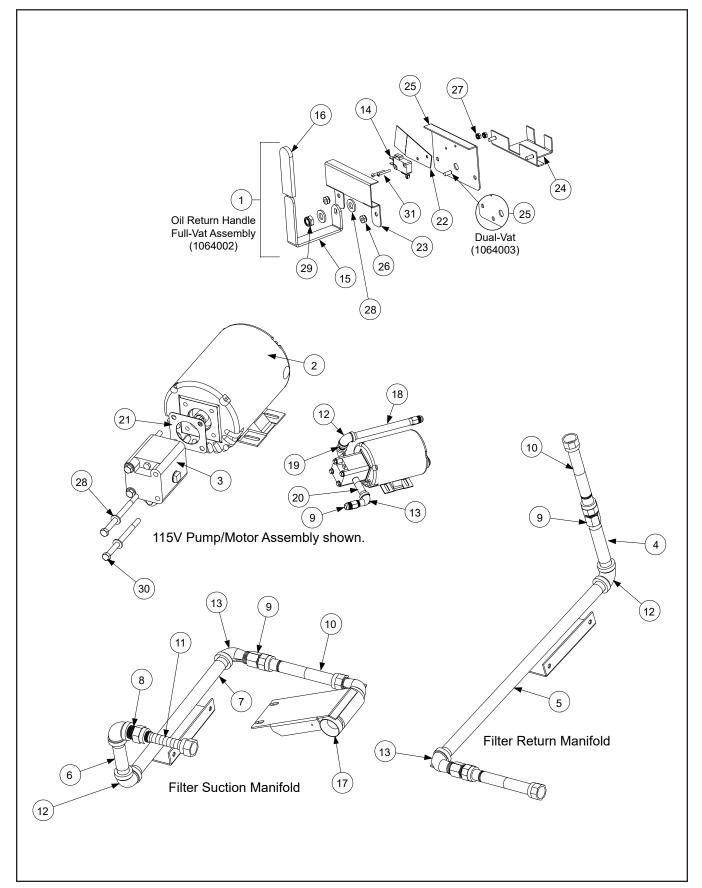


ITEM	PART #	COMPONENT
1		Handle Assemblies, Oil Return Valve
	1064002SP	FV Oil Return Assembly, MJ45/50
	1064003SP	DV Oil Return Assembly, MJ45/50
	1069265SP	FV Oil Return Assembly, MJ35/40
2		Pump and Motor
	8261712	100-120V, 60 Hz (motor and gasket)
	8261756	208V, 50/60 Hz (motor and gasket)
	8261270	230V, 50/60 Hz (motor and gasket)
	8261755	250V, 50/60 Hz (motor and gasket)
3	8261264	Pump, Viking 4 GPM 2-piece
	1063987	Filter Return Manifold (see additional components below)
4	8130251	Nipple, ¹ / ₂ " x 3.5 BM
5	8234739	Bracket, Suction Nipple
	1063986	Filter Suction Manifold (see additional components below)
6	8130247	Nipple, ¹ / ₂ " x 3.5 BM
7	8234737	Bracket, Suction Nipple
8	8101668	Adapter, Male
*	8101339	Flexline, 4.5"
		Included with Filter Return/Suction Manifolds
9	8101669	Adapter, Female
10	8101680	Flexline, 6.5"
11	8101160	Flexline, ⁵ / ₈ " x 3"
12	8130062	Elbow, ½" 90° BM
13	8130165	Elbow, Street ¹ /2" NPT BM
		Oil Return Handle
14	8072104	Microswitch (included with Item 1)
15	2009065	Handle (included with Item 1, MJ45/50)
*	2204357	Handle (included with Item 1, MJ35/40)
16	8160644	Grip (included with Item 1)
		Miscellaneous
*	8110746	Aluminum Tape (150' roll)
*	8110861	Foam Tape (sold by the foot)
*	8071472	Heater Strip 120V-40W 56" (for 120V fryers)
*	8071473	Heater Strip 240V-70W 56" (for 208-240V fryers)
		Heater Tape
*	8068065	100V, 25W, 18"
*	8065933	120V, 25W, 18"
*	8069245	120V, 25W, 36"
*	8066731	120V, 40W, 56"
*	8065934	208/240V, 25W, 18"
*	1065768	250V, 25W, 18"
*	1065849	250V, 45W, 36"
*	8066733	250V, 70W, 56"
*	1065011	Extension Harness
*	8262100	Kit, Retrofit 120V Heater
17	8234743	Connector, Female Suction
*	8130156	Pipe Plug, ¹ / ₂ "
*	8101003	Valve, 180° 3-way Ball
*	8072484	Valve, Solenoid Vent
*	8110932	Tubing, Teflon
18	8130275	Nipple, ¹ / ₂ " x 9 NPT BM Pipe
19	8130087	Nipple, ¹ / ₂ " x 1.5 NPT BM Pipe
20	8130460	Nipple, ¹ / ₂ " x 3 NPT BM Pipe

Oil Return Components continued on next page . . .


ITEM	PART #	COMPONENT
21	8160093	Gasket, Pump and Motor
22	8160220	Insulation, Drain Safety Box (included with Item 1)
23	9002110	Cover, Oil Return Microswitch (included with Item 1)
24	8068342	Support, Oil Return Valve (included with Item 1)
25		Support, Microswitch Mount (included with Item 1)
	8069385	Full-vat
	9002112	Dual-vat
26	8261376	Nut, 10-32 Keps Hex (pkg. of 10)
27	8261366	Nut, 4-40 Keps Hex with External Tooth (pkg. of 25)
28	8090194	Washer, Flat ⁵ /16" SAE
29	8090056	Nut, ⁵ /16"-18 Hex
30	8090514	Capscrew, ⁵ /16"-18NC Hex SAE
*	WIR0220	Pump Wiring Assembly
31	8261359	Screw, 4-40 x ³ / ₄ " Keps Hex (pkg. of 25)
*		Kit, Heater Tape Retrofit
	8262118	Kit, 100 VAC
	8262119	Kit, 120 VAC
	8262120	Kit, 220/240 VAC
	8262121	Kit, 250 VAC

2.16 Oil Return Assembly

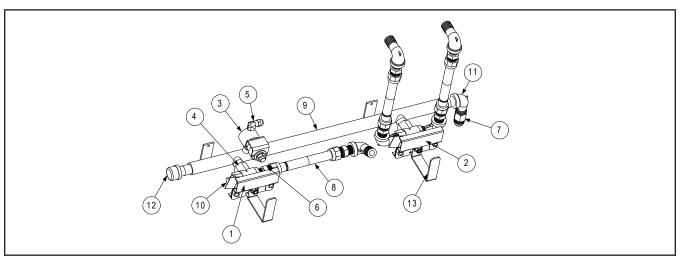


ITEM	PART #	COMPONENT
1	1064002	Valve Assembly, Full-vat
2	1064003	Valve Assembly, Dual-vat
3	8072484	Valve, Solenoid, ¼" NPT
4	8101003	180° 3-way Valve
5	8101372	Fitting, 90° ¼" NPT, ¾" Tube
6	8101668	Adaptor, Male, 5/8" OD x 1/2"
7	8101669	Adaptor, Female, ⁷ / ₈ " OD x ¹ / ₂ "
8	8101680	Flexline, 5/8" OD x 6.5" Long
9	8102791	Manifold, Oil Return
10	8130156	Plug, ½", Hex Head BM
11	8130165	Elbow, Street, ¹ / ₂ " x ¹ / ₂ " NPT, 90° BM
12	8130469	Cap, Pipe, ½" BM
13	8160644	Grip, Yellow

2.17 Thermostats and Timers

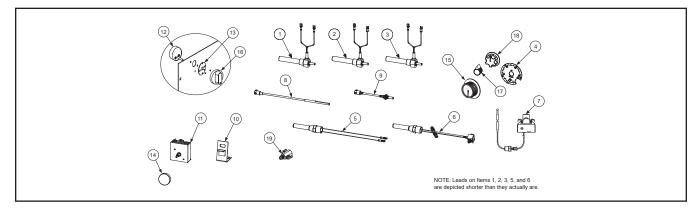

ITEM	PART #	COMPONENT
		Operating Thermostat Assembly, Fenwall
1	8060183	With Two Blue Insulated Push-on Terminals, 4" (MJ35/40/45, Non-CE)
2	8065816	With One Wire Push-on, One Fork Terminal, 3" (MJ35/40, Non-CE)
*	8067972	With One Wire Push-on, One Fork Terminal, 3" (MJ35/40, CE)
*	1067036	With One Wire Push-on, One Fork Terminal, 4" (MJ45/50, CE)
*	1087763	With One Wire Push-on, One Fork Terminal, 3" (MJ50, Non-CE)
3	8069617	With One Blue Insulated Push-on, One Fork Terminal, 4" (MJ35/40/45/50, CE)
4	8060087SP	Thermostat Dial Plate Assembly
		High-Limit Thermostat
5	8261177	425°F High-limit (Non-CE)
6	8067550	218°C High-limit (CE; includes adapter for gas valve hookup. See note on Page 2-27.)
7	8073516	425°F High-limit, Bulb & Capiliary
*	8263300	Upgrade Kit, Bulb & Capiliary
		Flex Shaft
*	8100999	Flex Shaft, Control Panel Mount Assembly, 9 1/4" overall
8	8100345	Shaft, 7.25" Thermostat Flexible Extension
9	8101651	Shaft, 5.50" Thermostat Flexible Extension
*	8100276	Shaft, 2.25" Thermostat Flexible Extension
*	8102862	Shaft, 1.95" Thermostat Extension (PMJ35)
10	9002071	Mounting Bracket
		Timers, Basket Lift
11	Obsolete	15-minute Electronic Timer, Single
*	Obsolete	15-minute Electronic Timer, Multi-vat System
12	Obsolete	15-minute Mechanical Timer
13	Obsolete	15-minute Mechanical Timer Bezel
		Knobs
14	8261395	Plug Button (pkg. of 10)
15	8100387	Knob, Control, Solid State Controller
16	8101287	Knob, 15-minute Mechanical Timer
17	8100110	Knob, Fenwal Thermostat with Two Allenhead Screws
18	8100334	Knob, with Skirt
*	8100388	Knob, 1" Black
*	8261575	Kit, Retrofit 5-minute Timer
19	8074134	Butterfly/Envelope Adapter (CE; included in 810-3442)
*	1064386SP	Toggle Switch, Optional
*	8262554	Kit, MV Switch (On/Off)

ITEM	PART #	COMPONENT
*	8064206	Temperature Probe
*	2100681	Probe Guard

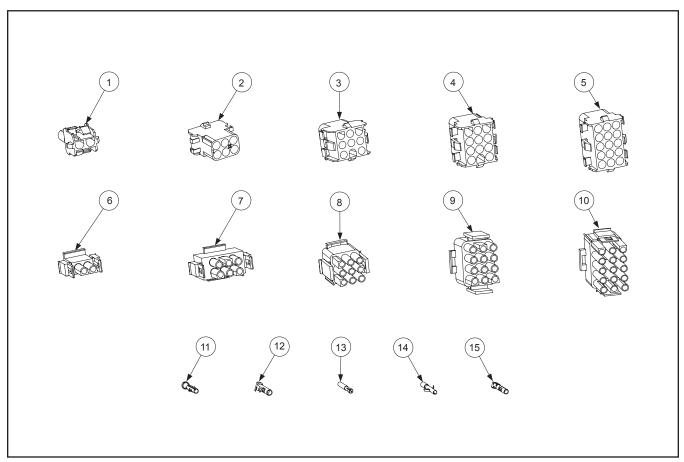


ITEM	PART #	COMPONENT
		Connectors
1	8071068	2-pin Female
2	8070158	6-pin Female
3	8070156	9-pin Female
4	8070159	12-pin Female
5	8070875	15-pin Female
6	8071067	2-pin Male
7	8070157	6-pin Male
8	8070155	9-pin Male
9	8070160	12-pin Male
10	8070804	15-pin Male
11	8261332	Terminal, Female Split Pin (pkg. of 25)
12	8261333	Terminal, Male Split Pin (pkg. of 25)
13	8072518	Plug, Mate-N-Lock (Dummy Pin)
14	8261331	Terminal, M&L Female Split Pin (pkg. of 25)
15	8261336	Terminal, M&L Male Split Pin (pkg. of 25)
*	8070154	Cord Set (Power Cord)

2.19 Garland Range (S35) Parts

ITEM	PART #	COMPONENT
		Cabinetry
*	8066741	Cabinet Assembly, H35/40
*	9002266	Cabinet, Back/Upper
*	8232282	Fluecap
*	8240517	Торсар
*	8066765	Door Assembly
*	8063943SP	Frypot Assembly
*	1064430	Flue Assembly
*	8101195	Top Back Guard
*	8066985	Wiring Harness
*	8101306	1/2" Brass Manual Gas Valve
*	8263379	EZSpark Ignitor Kit (Battery Powered)
*	KIT1653	Garland Piezo Ignitor Kit

* Not Illustrated.

2.20 Power Shower

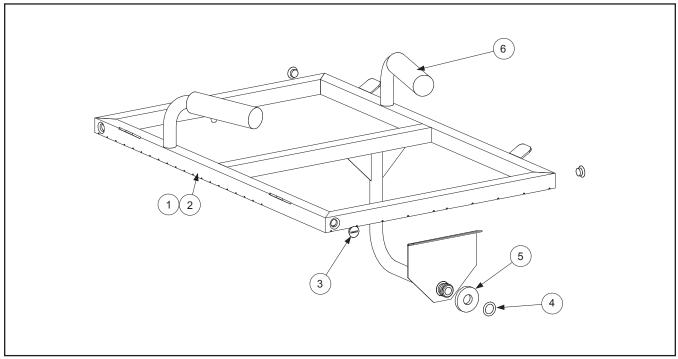

ITEM	PART #	COMPONENT
		Power Shower Assembly
	8064542SP	MJ35/40
	8064503SP	MJ45/50
		Components
1	8231522	Power Shower Body, MJ35/40
2	8231485	Power Shower Body, MJ45/50
3	8090415	Screw, Clean-out
4	8261344	O-ring
5	8261390	Seal
6	8140001	Grip



FRYMASTER 8700 LINE AVENUE, SHREVEPORT, LA 71106-6800

> 800-551-8633 318-865-1711 <u>WWW.FRYMASTER.COM</u> EMAIL: <u>FRYSERVICE@WELBILT.COM</u>

©2025 Frymaster LLC. Except where explicitly stated otherwise. All rights reserved. Continuing product improvement may necessitate change of specifications without notice.

Part Number: FRY_SP_8196092 04/2025



