
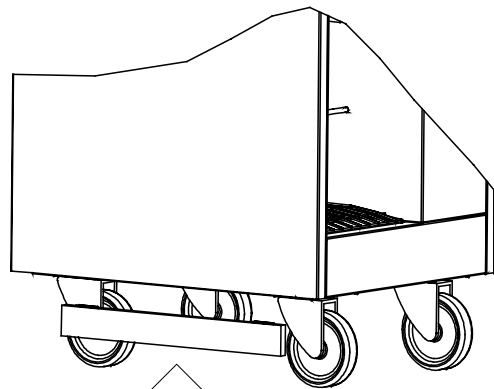


SinBaD II BASKET RACK ACCESSORY KIT 826-1592

INSTALLATION INSTRUCTIONS

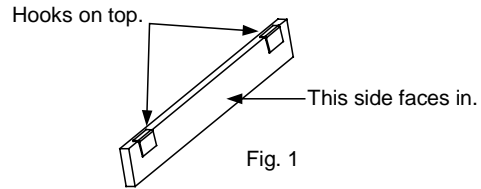

Lift weight straight up until
hooks snap into place.

Fig. 2

Kit Components

Counter Weight	823-2964
Hanger Assembly	823-2953
Drip Pan Holder	824-0805
Drip Pan	816-0416

1. Position the counter weight under the left side of the unit with the hooks facing inboard and up (see Fig. 1). Slip the weight straight up into the opening at the bottom of the left side panel and lift upward until the hooks snap into place (Fig 2).

2. Hook the tabs of the drip pan holder into the cutouts on hanger assembly (Fig 3).

3. Remove hopper lid and hang basket rack assembly over edge of hopper. Replace hopper lid.

4. Place drip pan in drip pan holder.

