

# Instruction Sheet

## Subject: 8263463 Auto Reverse Basket Lift Retrofit Instructions

**Models affected: FilterQuick (FQGLA-T and FQG30-T) Gas Fryers**

### In This Kit

Part #	Description	Qty
1087776	HARNESS 6-PIN/12PIN MOLEX	1
4060070	BOARD	1
1087775	HARNESS 4-PIN MOLEX	2
8140015	ZIP TIE	2
8090237	4-40 Nuts	5
8160862	3M VHB ADHESIVE TAPE	1
8103141	SOUND DEVICE	1
8102763	SPACER	4
8197483	INSTRUCTIONS	1

**Follow these instructions to install the auto reverse retrofit basket lift kit. This allows the basket lift, if it isn't in the fully down position within ten (10) seconds, to automatically reverse and raise.**

**Special tools required: Pin Pusher**

1. Disconnect power from the fryer.
2. Remove the fryer from the hood to gain access to the rear of the fryer.
3. Remove the basket lift cover to expose the inside of the basket lift (see Figure 1).
4. Unplug the basket lift connection on the bottom of the basket lift (see Figure 2).
5. Using a pin pusher remove the green/yellow strip ground wire from pin 2 of the new supplied harness (see Figure 3).
6. Using a pin pusher remove the green ground wire from pin 2 (see Figure 4) of the connector on the bottom of the basket lift.
7. Using a pin pusher remove the white wire from pin 6 (see Figure 5) of the connector on the bottom

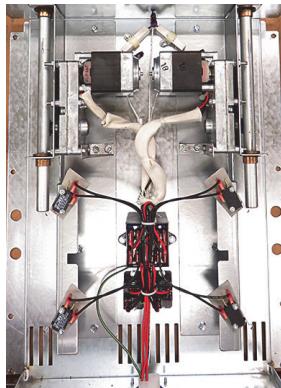


Figure 1

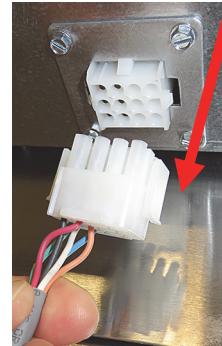


Figure 2

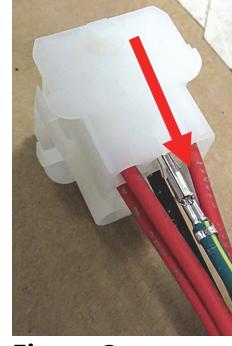


Figure 3

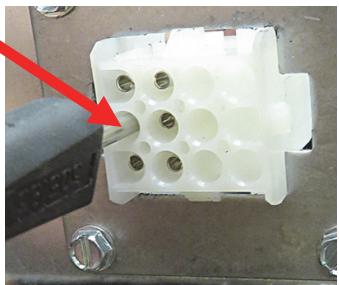


Figure 4

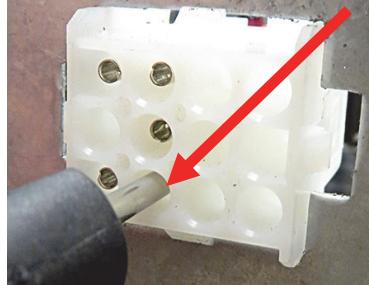


Figure 5



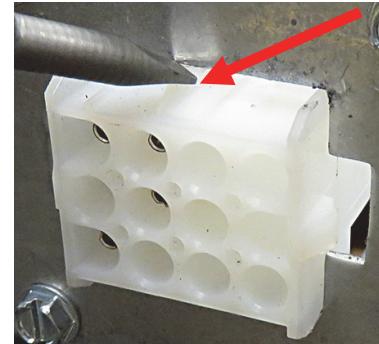


Figure 6


- of the basket lift.
8. Using a screwdriver, remove the Molex connector out of the metal housing (see Figures 6 and 7).
  9. Cut the two (2) zip ties securing the wires (see Figure 8).
  10. Using needle nose pliers, remove both wires from the bottom right switch, as viewed from the rear of the fryer (see Figure 9).
  11. Using needle nose pliers remove the wire from the COM terminal on the top right switch, as viewed from the rear of the fryer (see Figure 10).
  12. Using needle nose pliers remove the wire from the COM terminal on the top left switch, as viewed from the rear of the fryer (see Figure 10).
  13. Using needle nose pliers, remove both wires from the bottom left switch, as viewed from the rear of the fryer (see Figure 9).
  14. Using a  $\frac{1}{4}$ " nut drive, remove the four (4) screws attaching the relays at the bottom of the basket lift enclosure (see Figure 11).
  15. Remove the relays and attached wires from the enclosure (see Figure 12) and discard.
  16. Using needle nose pliers remove the loose black wire from the top right connector of the left capacitor (see Figure 13).
  17. Using needle nose pliers remove the loose black wire from the top left connector of the right capacitor (see Figure 14).
  18. Using the four screws removed from step 14 above, attach the new supplied bracket to the assembly as shown (see Figure 15).
  19. Slip the supplied spacers over the studs of the new bracket (see Figure 16).

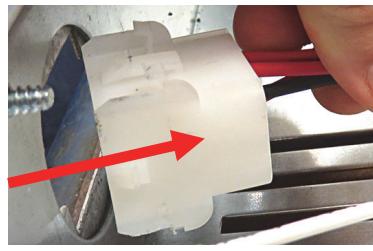


**Figure 7**

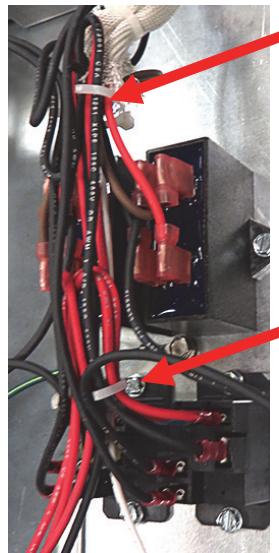


**Figure 8**

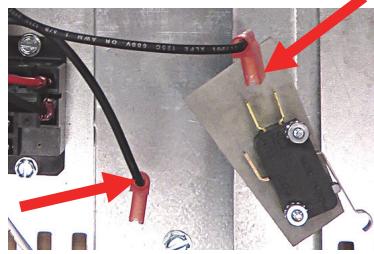

**Figure 9**

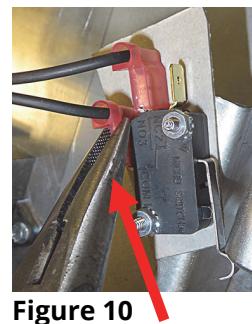


**Figure 10**

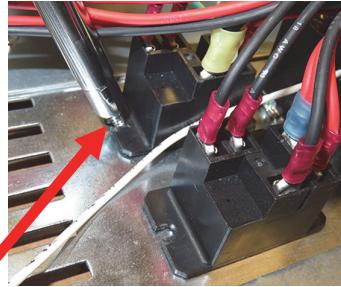


**Figure 11**




**Figure 12**

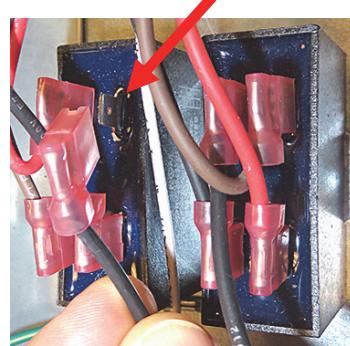


**Figure 13**

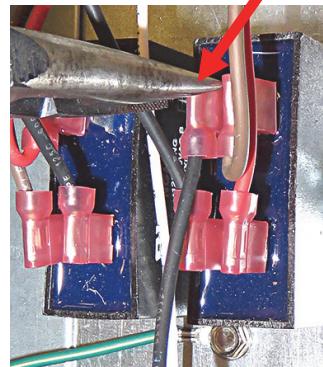

**Figure 14**

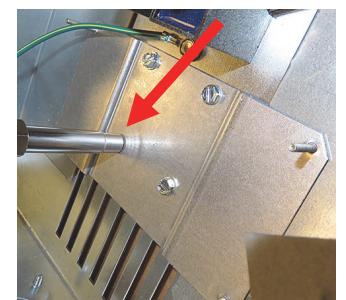

**Figure 15**

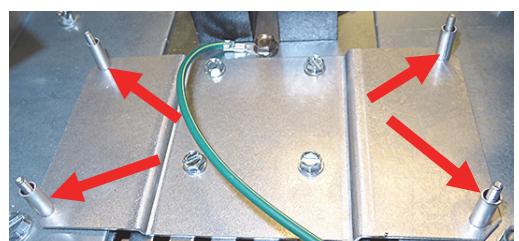


**Figure 16**

20. Slide the circuit board onto the studs as shown (see Figure 17).



**Figure 17**


21. Attach the circuit board with supplied 4-40 hex nuts.

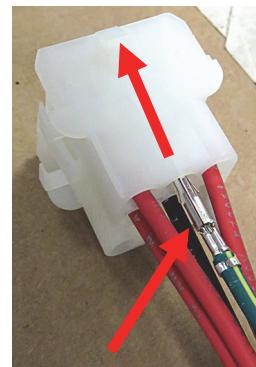

**Figure 18**


22. Insert the pin of the green/yellow ground wire, removed in step 5, into the number 2 pin position, of the 12-pin Molex female connector, in the new supplied harness (see Figure 18). Give a gentle tug on the wire to ensure the pin is fully seated into the connector.

23. Insert the 12-pin female end into the opening in the bottom of the basket lift assembly box (see Figure 19).

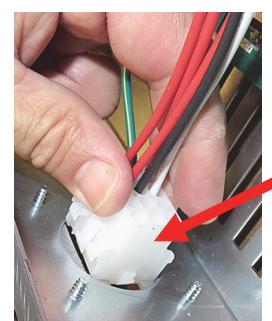


**Figure 19**

24. Insert the pin of the white wire, removed in step 7 into the number 6 pin position, of the 12-pin Molex male connector, in the new supplied harness (see Figure 20). Give a gentle tug on the wire to ensure the pin is fully seated into the connector.

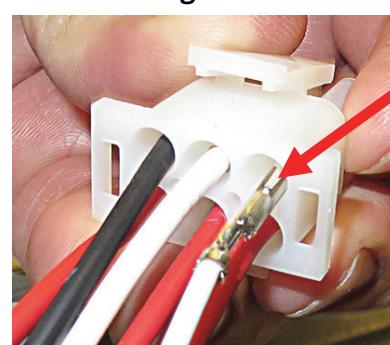


**Figure 20**

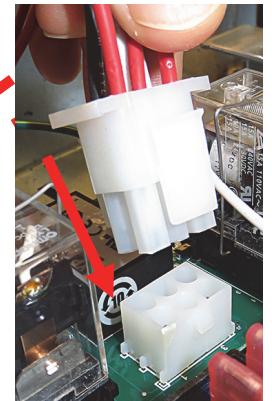


**Figure 21**

25. Plug the 6-pin connector from the previous step into the 6-pin connection on the new circuit board (see Figure 21).

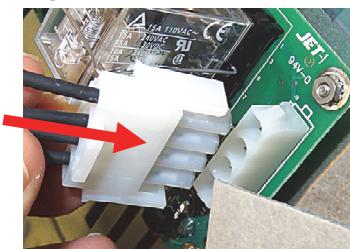


**Figure 22**

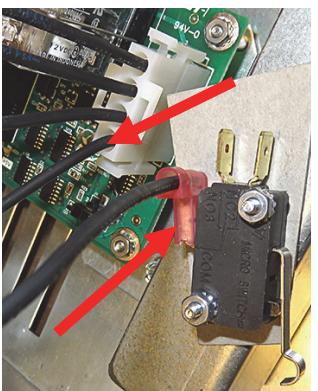


**Figure 23**

26. Plug in one of the 4 pin harnesses to the right side of the new board (see Figure 22).

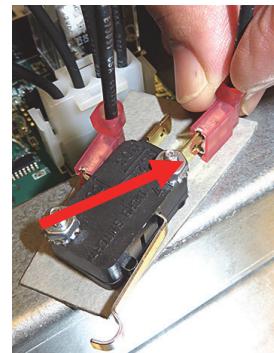

**Figure 24**

27. Connect pin-4 (bottom) wire to the COM position of the lower right switch (see Figure 23 and wiring diagram on last page).

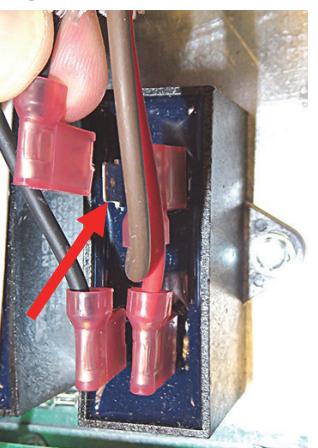

**Figure 25**

28. Connect pin-3 wire to the N/C position of the lower right switch (see Figure 24 and wiring diagram on last page).



**Figure 26**

29. Connect pin-2 wire to the open connector on the right capacitor (see Figure 25 and wiring diagram on last page).

30. Connect pin-1 wire to the COM position of the top right switch (see Figure 26 and wiring diagram on last page).

31. Plug in the other 4 pin harness to the left side of the new board.

32. Connect pin-4 (bottom) wire to the COM position of the lower right switch (see Figure 27 and wiring diagram on last page).

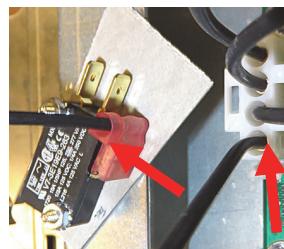


Figure 27

33. Connect pin-3 wire to the N/C position of the lower left switch (see Figure 28 and wiring diagram on last page).



Figure 28

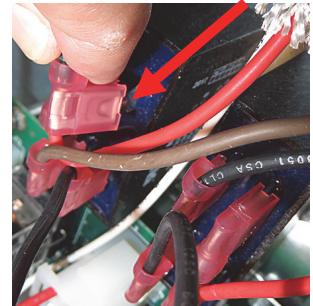


Figure 29

34. Connect pin-2 wire to the open connector on the left capacitor (see Figure 29 and wiring diagram on last page).

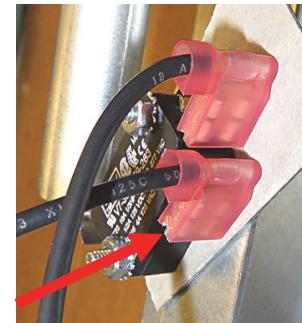


Figure 30



Figure 31

35. Connect pin-1 wire to the COM position of the top left switch (see Figure 30 and wiring diagram on last page).

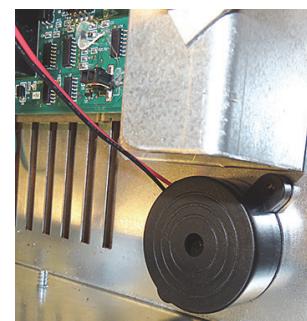


Figure 32

36. Apply VHB adhesive tape to the rear of the speaker (see Figure 31).

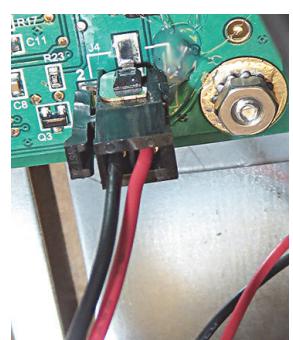


Figure 33

37. Peel off the tape backing and apply to the basket lift case as shown (see Figure 32).

38. Plug the speaker into the 2-pin connector on the board (see Figure 33).

39. Carefully gather the wires towards the middle of the box and zip tie together out of the way (see Figure 34).

40. Reattach the basket lift cover.


41. Reconnect power.

42. Reposition the fryer under the hood.

43. Test and ensure the basketlift works properly.



Figure 34

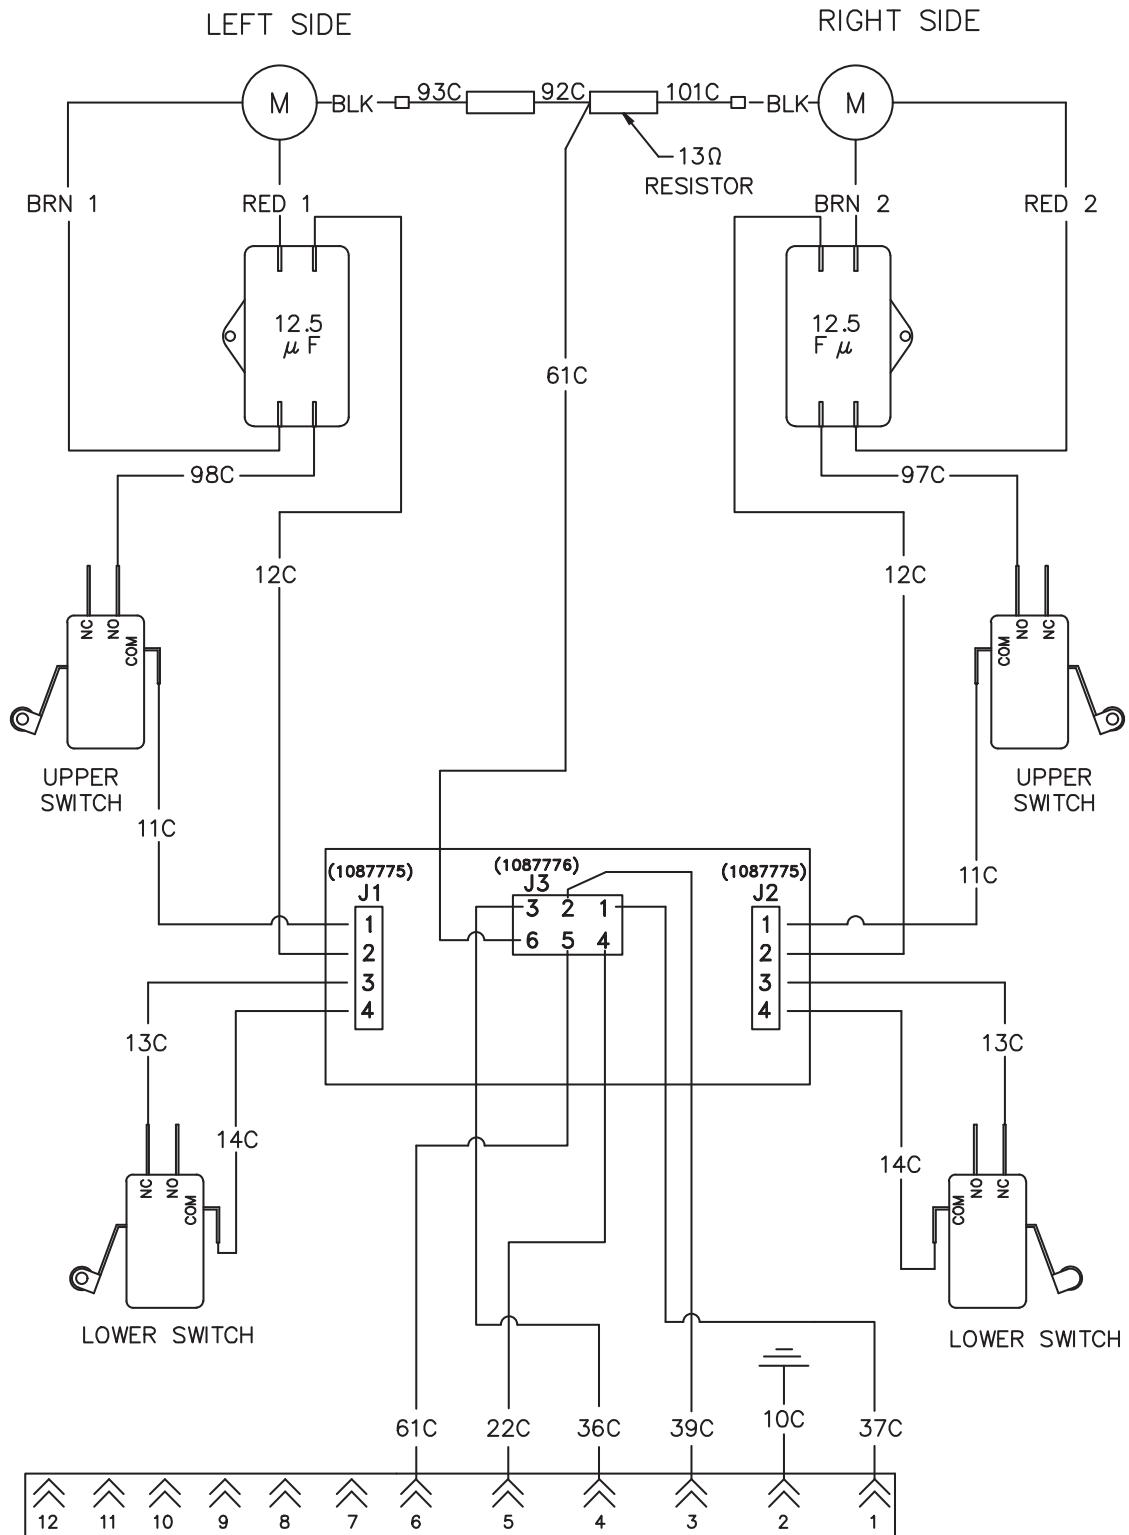

REFERENCES TO LEFT & RIGHT ARE  
FROM THE REAR OF THE FRYER

8052132A